



**MASTER
SPARES PRICE LIST**

**TRIUMPH ENGINEERING CO. LTD.
MERIDEN WORKS, ALLESLEY
COVENTRY**



**MASTER
SPARES PRICE LIST**

**PRICES QUOTED ARE APPLICABLE TO U.K. ONLY
AND ARE SUBJECT TO ALTERATION WITHOUT NOTICE**

**TRIUMPH ENGINEERING CO. LTD.
MERIDEN WORKS, ALLESLEY
COVENTRY**

Telephone Meriden 331.

Telegrams "Trusty Coventry"



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
A3	Transfer (Min. Oil Level) ...		CP5	Valve Springs	
A40	Transfer (Drain and Refill) Gilt ...		CP6	Valves	
A41	Transfer (Drain and Refill) White		CP10	Use CP87	
A43	Transfer (Rec. Lubricant) White...		CP27	Kickstarter Mechanism	
A44	Transfer (Rec. Lubricant) Gilt ...		CP28	Use CP97	
A46	Transfer "Thunderbird"		CP29	Piston	
A51	Transfer (Valve Clearance) ...			Available in oversizes + 10, 20, 30 & 40.	
A52	Transfer Battery, Positive Earth...		CP30	Use CP131	
A53	Transfer (Valve Clearance) ...		CP37	Use CP29	
A56	Transfer (World Record) ...		CP38/AM2	Brake Linings	
A57	Transfer (Bonneville 120) ...		CP38/MZ41	Brake Linings	
			CP40	Rings	
				Available in oversizes + 10, 20, 30 & 40.	
			CP43	Use CP49	
			CP48	Use 1-T893, 1-T895, 1-T896, 1-T898	
			CP49	Piston	
				Available in oversizes + 10, 20, 30 & 40.	
			CP50	Fork Service Pack	
			CP52	Valve Springs	
			CP53	Valves	
			CP54	Valve Guides	
			CP55	Piston Rings	
				Available in oversizes + 10, 20, 30 & 40.	
			CP56	Head Races	
			CP57	Head Races	
			CP61	Use CP133	
			CP64	Use CP85	
			CP66/AM2	Brake Lining	
			CP67	Rear Wheel Spring Set	
			CP69	Use CP132	
			CP70	Use CP133	
			CP87	Use 1-E1591, 1-E2877	
			CP89	Slipper Pads	
			CP90	Use 1-T726, 1-T727	
			CP92	Use CP134	
			CP94	Use 1-T968, 1-T971, 1-T974, 1-T975, 1-T1384	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
CP95	Close Ratio Gears		CP135	Piston Assembly	
CP96	Valves			Available in oversizes + 10, 20,	
CP97	Valve Guides			30 & 40.	
CP98	Piston Assembly		CP136	Use CP200	
	Available in oversizes + 10, 20,		CP137	Use CP40	
	30 & 40.		CP138	Use CP99	
CP99	Piston Rings		CP139	Conversion Gear Set	
	Available in oversizes + 10, 20,		CP140	Pillion Footrest Assembly ...	
	30 & 40.		CP141	Piston Assembly	
CP102	Valve Spring			Available in oversizes + 10, 20,	
CP103	Valves			30 & 40.	
CP105	Piston Assembly		CP144	Use 2-E1591	
	Available in oversizes + 20 & 40.		CP145	Use 1-T916, 1-T934, 1-T1063,	
CP108	Use CP200 and oversizes			1-T1065, 1-T1382	
CP115	Use CP135		CP146	Valve Set	
CP116	Valve and Guide		CP147	Use CP159	
CP120	Piston c/w Rings, Gudgeon Pin ...		CP148	Big End Assembly	
	Available in oversizes + 20 & 40.		CP149	Big End Assembly (Export only)	
CP121	Piston Rings		CP150	Piston Rings	
	Available in oversizes + 20 & 40.			Available in oversizes + 10, 20,	
CP122	Valve Guides			30 & 40.	
CP123	Valve Springs		CP151	Clutch Conversion Set	
CP124	Valves		CP152	Clutch Shock Absorber Unit	
CP125	Use 1-E3639, 1-E3421			Complete	
CP126	Use 1-E3639, 1-E3421		CP153	Sidcar Jacking Kit	
CP127	Clutch Inserts		CP155	Big End Pack	
CP128/AM2	Brake Linings		CP156	Steering Races	
CP129	Steering Races		CP157	Use CP200	
CP130	Rear Suspension Spring Set ...		CP159	Piston Assembly	
CP131	Piston Assembly			Available in oversizes + 10, 20,	
	Available in oversizes + 10, 20,			30 & 40.	
	30 & 40.		CP160	Use CP201	
CP132	Piston Assembly		CP161	Piston Assembly	
	Available in oversizes + 20 & 40.			Available in oversizes + 10, 20,	
CP133	Piston Assembly			& 40.	
	Available in oversizes + 10, 20,		CP162	Tachometer Drive Kit	
	30 & 40.		CP163	Piston Assembly	
CP134	Piston Assembly			Available in oversizes + 10, 20,	
	Available in oversizes + 10, 20,			30 & 40.	
	& 40.				


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
CP164	Piston Assembly Available in oversizes + 10, 20, & 40.		CP190	Crankshaft Assembly	
CP165	Piston Rings Available in oversizes + 10, 20, 30 & 40.		CP191	Crankshaft Assembly	
CP166	Valve Set		CP192	Clutch Conversion Unit	
CP167	Head Race Set		CP193	Gear Set C/Ratio	
CP168	Fork Service Pack		CP195	Use CP184	
CP169	Main Bearing Set		CP196	Brake Lining Set	
CP170	Valve Guide Set		CP197	Big End Assembly	
CP171	Valve Springs		CP198	Piston Assembly Available in oversizes + 10, 20, 30 & 40.	
CP172	Piston Assembly Available in oversizes + 10, 20, 30 & 40.		CP199	Piston Assembly Available in oversizes + 10, 20, 30 & 40.	
CP173	Valve Pack		CP200	Piston Assembly Available in oversizes + 10, 20, 30 & 40.	
CP174	Piston Assembly Available in oversizes + 10 & 20.		CP201	Piston Assembly Available in oversizes + 10, 20, 30 & 40.	
CP175	Piston Ring Set Available in oversizes + 10 & 20.				
CP176	Valve Set				
CP177	Valve Spring Set				
CP178	Piston Ring Set Available in oversizes + 10, 20, 30 & 40.				
CP179	Piston Assembly Available in oversizes + 10 & 20.				
CP180	Piston Rings Available in oversizes + 10 & 20.				
CP181	Tachometer Kit				
CP182	Tachometer Kit				
CP183	Sidecar Fork Conversion Kit ...				
CP184	Brake Linings				
CP185	Valve Springs				
CP186	Valve Set				
CP187	Piston Assembly Available in oversizes + 10, 20, 30 & 40.				
CP188	Valve Springs				
CP189	Crankshaft Assembly				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
D8	Rear Chain (92 Links)		D208-5	Hammer Drive Screw	
D9	Use D261		D208-12	Hammer Drive Screw	
D40	Primary Chain (80 Links)		D208-17	Hammer Drive Screw	
D46	Transfer, Petrol Tank (Blue)		D216	Throttle Cable Assy. (Twin Carbs.)	
D47/T100	Transfer, Petrol Tank		D218	Throttle Cable H/Bar to J/Box ...	
D48	Transfer, Petrol Tank (Gold)		D219	Throttle Cable J/Box to Carb. ...	
D48A	Transfer, Petrol Tank (3T)		D220	Spanner (Telescopic Forks)	
D49	Tyre Inflator		D222	Front Brake Cable	
D68	Transfer, Rear No. Plate		D222A	Front Brake Cable, TR5	
D68A	Transfer, Rear No. Plate		D223	Use D247	
D69	Rear Chain		D224	Throttle Cable Assembly	
D78	Use D78X		D225	Air Cable Assembly	
D78X	Throttle Cable Complete		D226	Throttle Cable Assembly	
D81	Nipple, Handlebar End		D233	Throttle Cable Assembly	
D83	Nipple		D241	Clutch Cable Assembly	
D89X	Cable Assembly		D242	Air Cable Assembly	
D100	Cable Assembly, Ignition		D243	Use D100	
D101	Ferrule		D244	Primary Chain (76 Links)	
D103	Ferrule		D245	Use D273	
D104	Cable Adjuster		D245A	Speedometer Cable	
D105	Use D262		D245C	Speedometer Cable, Outer	
D106	Security Bolt		D245W	Speedometer Cable, Inner	
D116	Rear Chain		D246	Speedometer Cable	
D120	Primary Chain		D247	Front Brake Cable Assembly	
D121	Primary Chain		D248	Throttle Cable Assembly	
D133	Use D261		D249	Throttle Cable Adjuster	
D163	Pliers		D250	Throttle Cable Adjuster Locknut	
D170	Suppressor Ignition Leads		D252	Exhaust Valve Lifter Cable	
D175	Speedometer Gearbox		D253	Spring	
D176	Speedometer Cable 54"		D255	Clutch Cable Assembly	
D176A	Speedometer Cable 52"		D256	Front Brake Cable Assembly	
D177/2	Clip, Flexible Pipe		D257	Throttle Cable Assembly	
D177/7	Clip, Flexible Pipe		D258	Use D363	
D177/9	Clip, Flexible Pipe		D259	Front Brake Cable Assembly	
D182	Use Z89		D260	Ignition Cable Assembly	
D183	Use Z89		D261	Licence Holder	
D201	Magneto Spanner		D262	Sparking Plug Cover	
D202	Tappet Adjustment Spanner		D263	Battery TRW	
D203X	Clutch Cable Assembly		D267	Throttle Cable Adjuster	
D204X	Front Brake Cable Assembly		D268	Throttle Cable Adjuster Nut	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
D269	Throttle Cable		D308	Use D306	
D271	Throttle Cable Spring		D309	Front Brake Cable Assy. (U.S.A.)	
D272	Throttle Cable Assembly (U.S.A.)		D310	Rear Chain (101 Links)	
D273	Speedometer Cable		D311	Rear Wheel Spindle Nut Spanner	
D273W	Speedometer Cable, Inner		D312	Toolkit (+ 2/- P.T.)	
D274	Reflector		D313	Use D362	
D275	Throttle Cable Assembly		D314	Horn Bracket	
D276	Primary Chain (Endless)		D315	Throttle Cable Assembly	
D277	Rear Chain		D316	Throttle Cable Assembly	
D278	Use D323		D317	Throttle Cable Assembly	
D279	Front Brake Cable Adjuster		D318	Use D332	
D280	Front Brake Cable Clevis		D319	Clutch Cable Adjuster	
D281	Front Brake Cable Clevis Pin		D320	Clutch Cable Abutment	
D282	Gear Indicator Cable Assembly		D321	Front Brake Cable Assembly	
D283	Gear Indicator Cable Spring		D322	Use D331	
D284	Gear Indicator Cable Adjuster		D323	Front Brake Cable Assembly	
D285	Gear Indicator Cable Nipple		D324	Mudguard Mudflap	
D286	Speedometer Cable Assembly, 49"		D329	Air Cable Assembly	
D286C	Speedometer Cable, Outer		D330	Front Brake Cable Assembly	
D286/W	Speedometer Cable, Inner		D331	Clutch Cable Assembly	
D287	Use D331		D332	Clutch Cable Assembly	
D288	Clutch Cable Abutment (H/bar)...		D333	Use D320	
D289	Use D315		D334	Cable Nipple (H/Bar End)	
D290	Toolkit (+ 1/1 P.T.)		D335	Screwdriver	
D291	Tool Bag (+ 1/1 P.T.)		D336	Screwdriver	
D292	Open Ended Spanner		D338	Primary Chain	
D293	Combination Spanner		D340	Gaiter Securing Clip (Top)	
D294	Box Spanner and Screwdriver		D341	Rear Chain	
D296	Tyre Inflator		D342	Use Z129	
D297	Sparking Plug Cover		D343/3	"C" Clip (John Bull)	
D299	Open Ended Spanner		D343/5	"E" Clip (John Bull)	
D300	Use Lucas 70169		D343/7	"S" Clip (John Bull)	
D301	Primary Chain		D344	Exhaust Lifter Cable Assembly	
D302	Use D301		D345	Front Brake Cable Assembly	
D304	Rear Chain (100 Links)		D346	Front Brake Cable Assy. (U.S.A.)	
D305	Front Brake Cable Assembly		D349	Front Brake Cable Assembly	
D306	Clutch Cable Assembly		D350	Front Brake Cable Assy. (U.S.A.)	
D306X	Use D306		D351	Front Brake Cable Assembly	
D307	Clutch Cable Assembly		D352	Front Brake Cable Assy. (U.S.A.)	
D307X	Use D307		D356	Speedometer Cable	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
D356C	Speedometer Cable, Outer ...		D411	Cable Nipple	
D356W	Speedometer Cable, Inner ...		D412	Throttle Cable Assembly ...	
D358	Primary Chain, Duplex (78 Links)		D413	Front Brake Cable Assembly ...	
D360	Open Ended Spanner		D414	Front Brake Cable Assembly ...	
D361	Open Ended Spanner		D415	Front Brake Cable Assembly ...	
D362	"C" Spanner, Square Socket ...		D416	Front Brake Cable Assembly ...	
D363	Screwdriver and Tommy Bar ...		D417	Front Brake Cable Assembly ...	
D364	Tyre Lever and Clutch Key ...		D418	Front Brake Cable Assembly ...	
D365	Toolkit (+ 2/- P.T.)		D419	Front Brake Cable Asssombly ...	
D366	Clutch Cable Assembly		D420	Throttle Cable Assembly ...	
D367	Front Brake Cable Assembly ...		D421	Throttle Cable Assy. (Twin Carb.)	
D368	Cable Nipple (H/Bar End) ...		D422	Throttle Cable (T/Grip to J/Box)	
D370	Closed Spanner		D423	Throttle Cable (J/Box to Carb.) ...	
D372	Use D356		D424	Throttle Cable Assembly, U.S.A. (Twin Carb.)	
D372C	Use D356C		D425	Throttle Cable, U.S.A. (T/Grip to J/Box)	
D372W	Use D356W		D427	Cylinder Head Bolt Spanner ...	
D373	Speedometer Gearbox		D428	Throttle Cable Assembly ...	
D374	Check Wire Assembly		D429	Front Brake Cable	
D379	Throttle Cable Assy. (Twin Carbs.)		D430	Rear Chain	
D380	Throttle Cable H/Bar to J/Box ...		D432	Clutch Cable	
D381	Throttle Cable J/Box to Carb. ...		D433	Rear Chain (98 Links)	
D382	Primary Chain, Duplex (62 Links)		D434	Clutch Cable (U.S.A. H/Bar) ...	
D383	Throttle Cable Assembly ...		D435	Air Cable	
D384	Front Brake Cable Assembly ...		D438	Rear Chain (99 Links)	
D385	Front Brake Cable Assembly ...		D439	Throttle Cable	
D386	Front Brake Cable Assembly ...		D440	Throttle Cable (U.S.A.)	
D387	Front Brake Cable Assembly ...		D441	Tachometer Drive Cable ...	
D388	Clutch Cable Assembly		D442	Throttle Cable	
D389	Clutch Cable Assembly		D444	Rear Chain 102L	
D398	Timing Pinion Extractor		D445	Use D356	
D400	Clutch Spider Extractor		D446	Tool Kit (+ 2/- P.T.)	
D402/3	Lock and Two Keys		D447	Throttle Cable	
D403	Key only (Specify Lock No.) ...		D452	Clutch Cable	
D404	Gaiter Securing Clip		D453	Throttle Cable	
D405	Rear Brake Cable		D455	Clutch Cable Sheath	
D406	Throttle Cable Assembly ...		D456	Rear Chain (War Office) ...	
D407	Cable Nipple		D466	Clutch Cable	
D408	Clutch Cable Assembly		D467	Rear Chain	
D409	Front Brake Cable Assembly ...				
D410	Throttle Cable Assembly ...				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
D468	Bulb Horn		D525	Brake Cable	
D474	Brake Cable		D526	Main Bearing Extractor	
D475	Clutch Cable		D527	Fork Spanner	
D476	Clutch Cable		D528	Throttle Cable	
D477	Primary Chain 84L Duplex ...		D529	Tachometer Cable	
D480	Speedo Cable		D531	Throttle Cable	
D481	Rear Chain 103L		D532	Throttle Cable	
D484	Contact Breaker Extractor ...		D533	Tool Kit (+ 1/1 P.T.)	
D485	Contact Breaker Extractor ...		D538	Flywheel Separator	
D486	Oil Seal Extractor		D539	Flywheel Separator Bolt	
D487	Throttle Cable (U.S.A.)		D540	Flywheel Separator Bolt	
D488	Clutch Cable (J.O.M.O.)		D541	Flywheel Separator	
D489	Speedo Drive Gearbox		D542	Speedo Cable	
D490	Speedo Cable		D543	Speedo Cable	
D491	Throttle Cable		D544	Speedo Gearbox	
D492	Tachometer Drive Cable		D545	Speedo Plug	
D493	Tachometer Drive Spade		D546	Tachometer Plug	
D494	Tachometer Washer		D552	Clear Hooter Horn	
D495	Throttle Cable		D553	Horn Button	
D496	Screwdriver				
D497	Front Brake Cable (U.S.A.) ...				
D498	Speedo Cable				
D499	Throttle Cable Assembly				
D500	Throttle Cable				
D503	Front Brake Cable (U.S.A.) ...				
D504	Clutch Cable				
D505	Brake Cable				
D506	Nipple				
D507	Air Control Cable (U.S.A.) ...				
D508	Brake Cable				
D509	Brake Cable				
D512	Clutch Cable				
D513	Primary Chain 69L (M/Police) ...				
D514	Throttle Cable, U.S.A.				
D515	Throttle Cable, U.S.A.				
D516	Throttle Cable				
D517	Mudflap				
D519	Throttle Cable (M/Police)				
D520	Abutment (M/Police)				
D524	Loctite Sealant				



MASTER SPARES

PRICE LIST

<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>
DA5	Tappet Adjusting Spanner ...	
DA16	Double Ended Spanner ...	
DA21	Use D363	
DA50/1	Clutch Hub Extractor ...	
DA70	Clutch Adjuster Key ...	
DA71	Use D312	
DA72	Double Ended Spanner ...	
DA87	Sparking Plug Box Spanner, 14 mm.	
DS40	Speedometer Bracket ...	
DS47	Nut ...	
DS48	Nut ...	
DS55	Bolt ...	
DS57	Bolt ...	
DS58	Bolt ...	
DS73	Clutch Cable Nipple ...	
DS74	Clutch Cable Adjuster ...	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E327	Cylinder Head Bolt		E925	Stud... ..	
E329	Screw		E984	Oil Return Pipe Union	
E370A	Filler Cap		E1023	Stud... ..	
E375	Intermediate Gear Spindle		E1049	Screw	
E378	Timing Cover Bush		E1269	Exhaust Pipe Clip (Cylinder Head)	
E378/006	Use E3585		E1270	Exhaust Pipe Clip (Cylinder Head)	
E386	Use E2360		E1310	Nut	
E393	Plug		E1330	Rocker Spindle Thrust Washer ...	
E395	Use E2912		E1330C	Rocker Spindle Thrust Washer ...	
E396	Shock Absorber Collar		E1331	Oil Filler Cap Washer	
E398	Nut		E1335	Oil Pipe Adaptor Washer	
E400	Intermediate Gear Bush		E1396	Bolt	
E403	Oil Pump Spring		E1435	Nut	
E409	Screw		E1454	Use E2928	
E410A	Washer		E1456	Inlet Manifold	
E427	Screw		E1457	R.H. Rocker	
E470	Nut		E1458	L.H. Rocker	
E486	Crankcase Filter Cover		E1459	Use CP189	
E487	Washer		E1460	Use CP189	
E489	Circlip		E1460A	Use CP189	
E495	Oil Pump Drive Block		E1461T	Inlet Rocker Box	
E509	Engine Shaft Nut		E1462T	Exhaust Rocker Box	
E522	Stud... ..		E1463	Inlet Camshaft Nut	
E529	Filter		E1465	Breather Washer	
E534	Swivel (Plain)		E1467	Breather Diaphragm	
E535	Swivel (Screwed)		E1470	Oil Pump Body	
E536	Bolt... /		E1470CTE	Use E3072	
E573	Screw		E1471	Intermediate Gear	
E579	Bolt... ..		E1471/001	Intermediate Gear	
E654	Stud... ..		E1472	Timing Pinion	
E656	Piston Ring Compression		E1472/0005	Timing Pinion	
	Available in oversizes + 10, 20, 30 & 40.		E1472/001	Timing Pinion	
E659	Shock Absorber Spring		E1475	Oil Pump Plunger (Feed)	
E667A	Cylinder Head Bolt		E1476	Oil Pump Plunger (Scavenge) ...	
E672	Cylinder Base Stud		E1477	Tappet Guide Block	
E688	Bolt... ..		E1478	Use E3059	
E697	Filler Plug Washer		E1479	Camshaft Bush	
E698	Stud... ..		E1483	Rocker Ball Pin	
E732	Filler Plug		E1484	Bolt... ..	
			E1485	Use E3275	

E1486 TO E1715

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E1486	Use E1486R		E1562	Crankshaft Bolt	
E1486A	Use E1486R		E1563	Piston Body	
E1486R	Camwheel (3 Keyway)			Available in oversizes + 10, 20,	
E1487	Outer Valve Spring			30 & 40.	
E1488	Inner Valve Spring		E1564	Rocker Box Cap	
E1489	Use E2921 and undersizes		E1567	Use E3322	
E1489T	Use E2921T and undersizes		E1568	Use E3321	
E1491	Magneto Gear		E1574	Thackeray Washer	
E1492	Exhaust Camshaft Nut		E1575	Washer	
E1496	Oil Seal Lower Washer		E1577	Washer	
E1497	Use E3547		E1579	Dowel	
E1505T	Push Rod Tube		E1580	Key	
E1506	Use E2248		E1586	Stud... ..	
E1508	C/Case Oil Return Pipe		E1591	Bearing	
E1509	Oil Return Pipe Clip		E1592	Bearing	
E1511	Small End Bush		E1595	Use E4016	
E1512	Rocker Spindle		E1596	Bolt	
E1513	Rocker Adjusting Pin		E1596A	Bolt	
E1516	Camshaft Bush		E1597	Torque Stay	
E1519	Use E3316		E1598	Torque Stay Clip	
E1520	L/H Exhaust Pipe		E1601	Adaptor	
E1521	Shock Absorber Sleeve		E1612	Shakeproof Washer	
E1526	Oil Pipe Assembly		E1613	Use E1612	
E1529	Oil Pipe Block Washer		E1614	Stud... ..	
E1530	Connecting Rod Cap Nut		E1645	Screw	
E1532	Oil Pipe Block Dowel		E1647	Screw	
E1534A	Cylinder Base Hollow Dowel		E1650	Rocker Box Gasket	
E1535	Timing Cover Hollow Dowel		E1668	Use E4191	
E1536	Oil Pump Body Stud		E1670	Washer	
E1537	Washer		E1674	Use D208/5	
E1539	Oil Pipe Block Stud		E1675	Inlet Manifold	
E1540	Rocker Box Stud		E1676	Inlet Manifold Washer	
E1543	Valve Spring Collar		E1677	Use E2249	
E1544	Valve Spring Collar		E1677A	Use E2249	
E1545	Rocker Box Bolt		E1678	Use E4016	
E1552	Inlet Manifold Washer		E1680	Use E2826 and all suffixes	
E1553	Stud... ..		E1681	Shock Absorber Slider	
E1554	Stud... ..		E1693	Pushrod Assembly	
E1555	Screw		E1711	Magneto Base Bolt	
E1558	Key		E1715	Inlet Manifold Stud	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E1719	Washer		E1790	Tube	
E1719A	Washer		E1791	Stud... ..	
E1720	Nut		E1795	Bolt	
E1732	Shock Absorber Washer		E1796	Bolt	
E1740	Cylinder Block		E1797	Nut	
E1745	Use E1745B		E1813	Spindle	
E1745B	Flywheel		E1819	Piston Ring	
E1747	T.S. Crankshaft			Available in oversizes + 10, 20, 30 & 40.	
E1748	Piston Body		E1837	Tappet Block	
	Available in oversizes + 10, 20, 30 & 40.		E1838	Pushrod Cover Tube	
E1749	Connecting Rod		E1841	Use E1748	
	Available in undersizes — 20 & 30.		E1891	Use E4016	
E1750	Gudgeon Pin		E1908	Piston Body	
E1751	Inlet Valve			Available in oversizes + 10, 20, 30 & 40.	
E1752	Exhaust Valve		E1912	Nut	
E1754	Use E2266		E1937	Use E3082	
E1755	Right Hand Rocker		E1937A	Use E3082	
E1756	Left Hand Rocker		E1947	Oil Pipe Connection	
E1757	Collar		E1948	Oil Gauge Pipe Assembly	
E1758	Cup		E1955	Inlet Valve	
E1759	Valve Guide		E1956	Exhaust Valve	
E1760	Bolt		E1957	Use E2296	
E1762	Small End Bush		E1958	Oil Pipes and Block	
E1766	Piston Ring		E1969	Use E1563	
	Available in oversizes + 10, 20, 30 & 40.		E1987	Stud... ..	
E1767	Circlip		E1992	Auto Advance Assembly	
E1769	Plain Bearing		E2014	Use 1-E2645, 2-E2631 & 2-E2632	
	Available in undersizes — 10 & 20		E2014A	Use 1-E2645, 2-E2631 & 2-E2632	
E1770	Pipe... ..		E2022	Stud... ..	
E1771	Pinion		E2023	Nut	
E1775	Washer		E2113	Cylinder Head Bolt	
E1776	Gasket		E2131	Rocker Cover Nut	
E1777	Inner Valve Spring		E2140	Use E3072	
E1778	Outer Valve Spring		E2147	Stator Fixing Nut	
E1779	Rocker Box Inspection Cap		E2158	Use F3771	
E1780	Inspection Cap Washer		E2200	Crankshaft	
E1781	Oil Pipe		E2200A	Use E3139	
E1785	Pushrod		E2202	Intermediate Gear	

E2218 TO E2364

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E2218	Timing Cover		E2298	L/H Crankshaft	
E2219/20A	Crankcase Assembly		E2299	R/H Crankshaft	
E2220A/3281	Crankcase Assembly		E2301	Camshaft	
E2220A/3425	Crankcase Assembly		E2302	Use E3275	
E2222	L.H. Engine Plate		E2304	Valve Release Cap	
E2223	R.H. Engine Plate		E2306	Use E4016	
E2226	Dynamo Cork Washer		E2311	Crankcase Locating Pin	
E2228	Dynamo Dome Nut		E2312	Use E1612	
E2229	Dynamo Pinion		E2321	Piston Body	
E2230	Dynamo Fixing Strap			Available in oversizes + 20 & 40.	
E2235	Front Engine Plate		E2322	Gudgeon Pin	
E2236A	L.H. Exhaust Pipe		E2323	Circlip	
E2237A	R.H. Exhaust Pipe		E2324	Connecting Rod Assembly	
E2238	Use E2646		E2325	Small End Bush	
E2239	Use E2647		E2326	Big End Bush	
E2248	Cylinder Head Gasket		E2326/10	Big End Bush	
E2249	Cylinder Base Washer		E2327	Crankshaft Assembly	
E2250/51	Crankcase Assembly		E2328	Flywheel	
E2252	Timing Gear Cover		E2329	Crankshaft Bolt	
E2254	Rotary Valve		E2330	Crankshaft Oil Seal Tube	
E2256	Rotary Valve Spring		E2331	Bearing	
E2257	Cylinder Block		E2331/10	Bearing	
E2258	Cylinder Head		E2332	Camshaft Bush	
E2258A	Cylinder Head		E2333	Camshaft Bush	
E2260	Camshaft Bush		E2334	Intermediate Wheel Spindle	
E2264A	Crankshaft Breather Pipe Assy.		E2338	Backing Washer	
E2266	Camshaft		E2342	Crankcase Oil Return Pipe	
E2269	Exhaust Pipe Clip		E2343	Crankcase Filter	
E2271	Silencer Clip		E2344	Crankcase Filter Washer... ..	
E2273	Pushrod Cover Tube		E2345	Crankcase Filter Cover	
E2273T	Use E2273		E2346	Timing Pinion	
E2275	Front Engine Plate Cover		E2351	Tachometer Drive Pinion Washer	
E2276	Use 1-E3651, 1-DS55		E2352	Camshaft Pinion	
E2286	Use 1-E3652, 1-DS55		E2354	Oil Pump Complete	
E2287	Washer		E2355	Oil Pump Body	
E2288	Washer		E2356	Oil Pump Joint Washer	
E2290	Lock Washer		E2358	Oil Pump Feed Plunger	
E2295	Use E3054		E2359	Oil Pump Scavenge Plunger	
E2296	Disc		E2360	Oil Pump Body Plug	
E2297	Timing Gear Cover		E2364	Oil Pump Joint Washer	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E2371	Shock Absorber Collar		E2457	Oil Pipes and Block	
E2372	Shock Absorber Spring		E2458	Stud... ..	
E2373	Cylinder Base Washer		E2461	Cylinder Block	
E2374	Tappet		E2462	Long Stud	
E2375	Tappet Adjuster		E2463	Short Stud	
E2376	Tappet Adjuster Spring		E2476	Use E2248	
E2377	Exhaust Valve Lifter Spindle ...		E2480CTE	Cylinder Head Complete ...	
E2378	Exhaust Valve Lifter Internal Lever		E2482	Inlet Flange	
E2379	Exhaust Valve Lifter External Lever		E2483	Inlet Flange Sleeve	
E2380	Internal and External Lever Pin...		E2489	Piston Body	
E2381	Use E3062			Available in oversizes + 10, 20, 30 & 40.	
E2382	Inlet Valve		E2490	Use 1-E2490A, 1-E2922	
E2383	Use E3648		E2490A	Connecting Rod Cap Bolt ...	
E2384	Top Valve Spring Collar		E2503	Use	
E2385	Use E3099		E2513	Rocker Box Bolt	
E2386	Domed Nut		E2534	Rocker Spindle Thrust Washer ...	
E2387	Cylinder Head Gasket		E2555	Crankcase Bottom Stud	
E2389	Cylinder Base Stud		E2570	Washer	
E2390	Cylinder Block Stud		E2593	Twinseat Nose Bolt	
E2412	Cylinder Base Stud Nut		E2594	Rocker Spindle Thrust Washer ...	
E2413	Valve Spring		E2614	Cylinder Head Gasket	
E2414	Dynamo Stud		E2615	Oil Gauge Pipe Plug	
E2415	Clip		E2617	Inlet Flange Joint Washer ...	
E2417	Bottom Valve Spring Collar ...		E2618	Carburetter Flange Joint Washer	
E2419	Timing Pinion Nut		E2619	Cylinder Base Stud	
E2421	Cylinder Block Stud		E2620	Pushrod	
E2423	Dowel		E2631	Cylinder Head Bolt	
E2424	Carburetter Fixing Stud		E2632	Cylinder Head Bolt	
E2425	Lower Pushrod Tube Washer ...		E2644	Use GS36	
E2428	Cylinder Base Stud		E2645	Cylinder Head	
E2434	Distance Piece		E2646	Left Hand Silencer	
E2436	Cylinder Block Stud		E2647	Right Hand Silencer	
E2437	Crankcase Bolt		E2671	Piston Body	
E2440	Cylinder Head Timing Plug ...			Available in oversizes + 10, 20, & 40.	
E2441	Timing Plug Washer		E2674	Carburetter Flange Stud	
E2442	Use E4016		E2675	Carburetter Flange Distance Piece	
E2446	Valve Chamber Cover Washer ...		E2677	Cylinder Base Washer	
E2448	Connecting Rod Bolt		E2691	Long Chaincase Cover Screw ...	
E2451	Dynamo Pinion				

E2724 TO E2897

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E2724	Breather Pipe		E2826D	21T Engine Sprocket	
E2728	Inlet Flange Stud Washer ...		E2826E	20T Engine Sprocket	
E2730	L.H. Exhaust Pipe		E2826F	19T Engine Sprocket	
E2731	R.H. Exhaust Pipe		E2826G	18T Engine Sprocket	
E2732	Exhaust Pipe Adaptor		E2826H	17T Engine Sprocket	
E2734	L.H. Megaphone		E2826J	16T Engine Sprocket	
E2735	R.H. Megaphone		E2827	Use E3407	
E2741	Magneto Pinion		E2831	Exhaust Pipe Adaptor	
E2746	Tachometer Drive Gearbox ...		E2832	Inlet Manifold	
E2749	Tachometer Driven Gear ...		E2853	L.H. Crankcase Plug	
E2767	Adaptor		E2857	Silencer Clip	
E2768	Inlet Flange Stud		E2865	19T Engine Sprocket	
E2774	Megaphone Bolt		E2866	Exhaust Pipe Assembly	
E2775	Distance Piece		E2872	Carburettor Flange Washer ...	
E2784	Dynamo Cover Plate		E2873	Cylinder Head Bolt (Short) ...	
E2788	Release Valve Main Spring ...		E2874	Cylinder Head Bolt (Long) ...	
E2789	Release Valve Auxiliary Spring ...		E2876	Use E4016	
E2790	Release Valve Cap		E2877	Main Bearing	
E2791	Release Valve Button Shaft ...		E2878	R.H. Main Roller Bearing ...	
E2792	Button Shaft Nut		E2879	L.H. Main Roller Bearing ...	
E2793	Release Valve Rubber Tube ...		E2880	Washer	
E2794	Release Valve Body		E2882	Tachometer Body Joint Washer...	
E2795	Use E4191		E2883	R.H. Bearing Shield	
E2799	Oil Feed Pipe Assembly		E2884	Piston Body	
E2800	L.H. Torque Stay Half Clip ...			Available in oversizes + 10, 20, & 40.	
E2801	R.H. Torque Stay Half Clip ...		E2886	Use E3450	
E2802	Cylinder Head Bolt		E2888	Crankcase Stud	
E2803	Tappet Guide Block		E2889	Sleeve Nut	
E2804	Pushrod Cover Tube		E2891	Piston Body	
E2806/7	Crankcase Assembly			Available in oversizes + 10, 20, 30 & 40. ...	
E2814	Shock Absorber Slider		E2892/3	Crankcase Assembly	
E2815	Shock Absorber Collar		E2892/3282	Crankcase Assembly	
E2816	L.H. Main Bearing Disc		E2892/3314	Crankcase Assembly	
E2817	Inner Chaincase Bolt		E2894	Cylinder Base Washer	
E2818	Inner Chaincase Bolt		E2895	Use E3332	
E2819	Inner Chaincase Bolt		E2896	Use E3873	
E2826	25T Engine Sprocket		E2897	Use E3049	
E2826A	24T Engine Sprocket				
E2826B	23T Engine Sprocket				
E2826C	22T Engine Sprocket				


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E2898	Scraper Ring Available in oversizes + 10, 20, 30 & 40.		E2933	Stud... ..	
E2899	Inlet Valve Guide		E2934	Abutment	
E2899/0015	Inlet Valve Guide		E2935	Locknut	
E2900	Exhaust Valve Guide		E2936	Washer	
E2900/0015	Exhaust Valve Guide		E2937	Use E3497	
E2901	Use CP190		E2939	L.H. Torque Stay	
E2902	Use CP190		E2940	R.H. Torque Stay	
E2903	Inlet Valve		E2941	Torque Stay Clip	
E2904	Exhaust Valve		E2942	Carburettor Insulating Block ...	
E2905	Use E3614		E2943	Oil Pipe	
E2906	Retaining Plate		E2947	L.H. Exhaust Pipe... ..	
E2907	Use E3497		E2949	R.H. Exhaust Pipe... ..	
E2908	Flywheel		E2952	Abutment Plate	
E2909	Use E4016		E2953	Lever Pivot	
E2910	Use E4016		E2957	Use E3591	
E2911	Use CP190		E2958	Use E3591	
E2912	Shock Absorber Spring		E2959	Use E3592	
E2913	Inlet Manifold		E2961	Exhaust Pipe Adaptor	
E2914	Use CP189		E2962	Inlet Manifold Stud	
E2915	Use CP189		E2963	Oil Pipe	
E2916	Use E2918		E2967	Inlet Manifold Joint Washer ...	
E2916T	Use E2918		E2968	Insulating Washer... ..	
E2917	Use CP189		E2969	Inlet Valve	
E2917T	Use CP189		E2972	Inlet Manifold Stud	
E2918	Flywheel		E2973	Inlet Manifold Stud	
E2920	Inlet Manifold Stud		E2974	Use E3630	
E2921	Connecting Rod Available in undersizes — 10, 20, & 30.		E2976	Use E3634	
E2921T	Connecting Rod Available in undersizes — 10, 20, & 30.		E2980	Stud... ..	
E2922	Connecting Rod Cap Nut ...		E2982	Rocker Box Bolt	
E2926	Use E4219		E2984	Use CP189	
E2927	Cylinder Block		E2985	L.H. Exhaust Pipe... ..	
E2928	Cylinder Head		E2987	R.H. Exhaust Pipe... ..	
E2929	Cylinder Head		E2989	Stay	
E2931	Use E3613 and oversizes		E2990	Stay	
			E2991	Use E2991T	
			E2991T	Inlet Manifold	
			E2994	Tachometer Drive Pinion ...	
			E2995	Tachometer Body Bolt	
			E2996	Tachometer Body Screw	
			E2997	Nut	

E2998 TO E3127



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E2998	Intermediate Wheel		E3074	Inlet Manifold	
E2999	Intermediate Wheel Bush ...		E3075	Inlet Manifold Washer	
E3000	Use E3610 and oversizes		E3078	Crankcase Breather Extension Pipe	
E3001	Inner Valve Spring		E3079	Use E2912	
E3002	Outer Valve Spring		E3080	Diaphragm	
E3003	Cylinder Head Gasket		E3082	Rocker Oil Pipe	
E3004	Inlet Flange Stud		E3098	Piston Body	
E3005	Cylinder Head			Available in oversizes + 10, 20,	
E3006	Inlet Flange			30 & 40.	
E3007	L.H. Distance Piece		E3099	Valve Chamber Cover	
E3008	R.H. Distance Piece		E3102	Carburettor Fixing Stud	
E3009	Inlet Flange Sleeve		E3103	Exhaust Pipe Extension	
E3010	Tachometer Body Joint Washer...		E3104	Exhaust Pipe Extension	
E3013	Use 1-E3014 & 1-E3015		E3108/17	Engine Sprocket	
E3014	L.H. Exhaust Pipe		E3108/18	Engine Sprocket	
E3015	R.H. Exhaust Pipe		E3108/19	Engine Sprocket	
E3021	Use E3005		E3108/20	Engine Sprocket	
E3022	Tachometer Gearbox Complete...		E3108/21	Engine Sprocket	
E3023	Exhaust Pipe Extension		E3108/22	Engine Sprocket	
E3024	Exhaust Pipe Extension		E3108/23	Engine Sprocket	
E3047	Taper Compression Ring		E3108/24	Engine Sprocket	
	Available in oversizes + 10, 20,		E3108/25	Engine Sprocket	
	30 & 40.		E3109/2220A	Crankcase Assembly	
E3048	Taper Compression Ring		E3110	Timing Cover	
	Available in oversizes + 10, 20,		E3111	Mounting Platform	
	30 & 40.		E3112	Use CP191	
E3049	Taper Compression Ring		E3114	Stud	
	Available in oversizes + 10, 20,		E3115	Rotor Key	
	30 & 40.		E3116	Clamping Washer	
E3050	Tachometer Gearbox Seal		E3117	Engine Sprocket Nut	
E3053	Use E3524		E3118	Distance Piece	
E3054	Cylinder Head		E3119	Tab Washer	
E3055	Cylinder Block Stud		E3120	Nut	
E3056	Torque Stay Stud		E3121	Nut	
E3058	Valve Chamber Cover Stud		E3122	Distributor Adaptor	
E3059	Tappet		E3123	Distributor Wheel	
E3059R	Tappet (Racing)		E3124	Use E3587	
E3062	Valve Guide		E3125	Distributor Wheel Pin	
E3072	Oil Pump Complete		E3126	Distributor Wheel Circlip	
E3073	Inlet Manifold		E3127	Use E3315	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3129	Distance Collar		E3188	Oil Pump Joint Washer	
E3131	Tab Washer		E3189	Use E3393	
E3134	Use E4819		E3190	Use E3393	
E3136	Use E3253		E3191	Use E4404	
E3137	Use CP191		E3192	Oil Pump Body Plug	
E3138	Use CP191		E3193	Oil Pump Feed Plunger	
E3142	Cylinder Barrel		E3194	Oil Pump Scavenge Plunger	
E3143	Use E3661		E3195	Connecting Drive Rod	
E3146	Inlet Valve		E3196	Use E3412	
E3147	Exhaust Valve		E3197	Oil Pump Fixing Bolt	
E3148	Piston Body		E3198	Use 1-E3577S, 1-E3917, 1-E3460, 1-E3579, 1-E3603	
	Available in oversizes + 20 & 40.		E3199	Inner Cover Dowel	
E3150	L.H. Outer Cover... ..		E3200	Outer Cover Screw (Short)	
E3151	R.H. Outer Cover... ..		E3201/19	Engine Sprocket	
E3152	Main Bearing		E3203	Alternator Cable Grommet	
E3153	Piston Ring		E3203A	Use E3203	
	Available in oversizes + 20 & 40.		E3204	Alternator Fixing Screw	
E3154	Scraper Ring		E3205	Outer Cover Screw (Long)	
	Available in oversizes + 20 & 40.		E3206	Use 1-E3476, 1-D331	
E3155	Use E3639		E3207	Exhaust Pipe Adaptor	
E3156	Use E3639		E3208	Inlet and Exhaust Valve Guide	
E3159	L.H. Mainshaft Nut		E3208/002	Inlet and Exhaust Valve Guide	
E3160	Use E3639		E3208/003	Inlet and Exhaust Valve Guide	
E3167	Crankcase Oil Return Pipe		E3209	Valve Guide Circlip	
E3168	Crankcase Oil Return Pipe Clip... ..		E3210	Rocker Inspection Cover Stud	
E3169	Oil Junction Block Dowel		E3213	Valve Spring Bottom Collar	
E3170	Cylinder Head Stud		E3214	Inner Valve Spring	
E3171	Oil Junction Block Stud		E3215	Outer Valve Spring	
E3172	R.H. Flywheel Peg		E3216	Cylinder Base Washer	
E3173	Use E3655		E3217	Cylinder Head Gasket	
E3175	Camshaft Bush		E3220	Inner Cover Screw (Short)	
E3176	Crankcase Filter Spring		E3221	Inner Cover Screw (Long)	
E3177	Crankcase Filter		E3222	Rocker Ball Pin	
E3178	Use E4079		E3223	Rocker Adjuster	
E3181	Pinion Bolt		E3224	Rocker Spindle Thackeray Washer	
E3183	Camshaft		E3225	Rocker Spindle	
E3184	Camshaft Pinion Key		E3226	Rocker Cover Joint Washer	
E3185	Camshaft Pinion		E3227	Inlet Rocker Cover	
E3186	Pinion and Shaft		E3228	Exhaust Rocker Cover	
E3187	Use E3518				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3230	Cylinder Head Nut		E3309	Distance Sealing Ring	
E3231	Outer Cover Screw (Medium) ...		E3310	Inlet Valve	
E3235	Pushrod		E3315	Exhaust Pipe	
E3238	Use 1-E3536, 1-E3540		E3316	Exhaust Pipe	
E3243	Use E3540		E3321	L.H. Silencer	
E3244	Rocker Oil Pipe		E3322	R.H. Silencer	
E3249	Oil Pipe Outer Joint Washer ...		E3323	Use E3651 & 1-DS55	
E3250	Joint Washer		E3324	Use E3652 & 1-DS55	
E3251	Inlet Rocker		E3325	Use E4931	
E3252	Exhaust Rocker		E3326	Air Cleaner Adaptor	
E3253	Rocker Spindle Sealing Ring ...		E3327	Air Cleaner Adaptor	
E3254	Carburettor Insulating Block ...		E3328	Use 1-E3606, 2-E3586	
E3257	Use E4738		E3329	L.H. Crankshaft	
E3259	Exhaust Pipe Clip		E3330	R.H. Crankshaft	
E3260	Exhaust Pipe Clip Bolt		E3332	Cylinder Block	
E3261	Silencer		E3333	Cylinder Head	
E3269	Silencer Clip		E3334	Inlet Manifold Washer	
E3270	Oil Pipe and Junction Block ...		E3335	Use E3639	
E3274	Junction Block Joint Washer ...		E3336	L.H. Flywheel	
E3275	Camshaft		E3338	Use E3336	
E3280	Gear Indicator Cable Abutment...		E3339	Use E3419	
E3285	Tappet		E3340	Use E3414	
E3288	Inlet Flange Sleeve		E3341	Use E3624	
E3289	Use 1-E2482 & 2-E3288		E3344	Inner Cover Joint Washer ...	
E3290	Rocker Cover Nut		E3345	Outer Cover Joint Washer ...	
E3292	Crankpin Plug		E3346	L.H. Exhaust Pipe	
E3293	Camshaft Bush		E3347	L.H. Exhaust Pipe	
E3294	Use E3541		E3349	R.H. Exhaust Pipe	
E3295	Use E3452		E3350	R.H. Exhaust Pipe	
E3298	Use 1-E3453, 1-E3457, 1-E3460		E3353	Oil Feed Pipe	
E3299	Use 1-E3454, 1-E3457, 1-E3460		E3354	Oil Return Pipe	
E3300	R.H. Bearing Clamping Washer ...		E3355	Oil Pipe Junction Block	
E3301	Valve Spring Top Collar		E3358	Piston Body	
E3302	Crankcase Filter Washer...			Available in oversizes + 10, 20,	
E3303	Plastic Distributor Cover ...			30 & 40.	
E3304	Inlet Manifold		E3359	Use E3422	
E3305	Oil Filler Plug		E3360	L.H. Flywheel	
E3306	Flywheel		E3362	Use E3424	
E3307	Inlet Manifold		E3363	Use 1-E3930, 1-E3577 & 1-E3917	
E3308	Torque Stay		E3365	Cylinder Head Stud	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3366	Use E3577S		E3429	Use F4141	
E3368	Cylinder Base Washer		E3430	Use 1-E3453, 1-E3457, 2-E3460	
E3370	Use E3661		E3431	Use 1-E3454, 1-E3457, 2-E3460	
E3372	Pushrod		E3432	Stud... ..	
E3376	Use E3883		E3435	L.H. Crankshaft Nut	
E3377	Filler Plug Joint Washer		E3436	Fillister Head Screw	
E3378	Oil Filler Plug		E3437	Fillister Head Screw	
E3379	Main Bearing Oil Seal		E3438	Fillister Head Screw	
E3380	Use E3048 and all oversizes		E3439	Fillister Head Screw	
E3381	Use E3049 and all oversizes		E3440	Fillister Head Screw	
E3383	RockerOilPipeRubberConnection		E3441	Use E4059	
E3384	Distance Piece		E3442	Fillister Head Screw	
E3385	Cylinder Barrel		E3443	Fillister Head Screw	
E3386	Cylinder Barrel Dowel		E3444	Fillister Head Screw	
E3387	Scraper Ring		E3445	Fillister Head Screw	
	Available in oversizes + 10, 20, 30 & 40.		E3446	Cylinder Head Nut Washer	
E3388	Use 1-E3537, 1-E3540		E3447	Inner Cover Stator Stud	
E3391	Pushrod Cover Tube Washer		E3448	Collar	
E3393	Oil Pump		E3449	Peg	
E3397	Use E3470		E3450	Silencer	
E3398	Use 1-E3462 & 1-E3463		E3451	Crankshaft and Flywheel Assy.	
E3406	Use E3534		E3452	Crankshaft and Flywheel Assy.	
E3407	Silencer		E3453	R.H. Crankshaft	
E3409	Oil Pump Body		E3454	R.H. Crankshaft	
E3410	Oil Pump Feed Plunger		E3455	R.H. Crankshaft Plug	
E3411	Steel Magneto Gear		E3456	Crankshaft Oil Tube	
E3412	Oil Pump Drive Connecting Pin...		E3457	Crankshaft Oil Tube	
E3413	Circlip		E3460	Washer	
E3414	Crankpin		E3462	L.H. Exhaust Pipe... ..	
E3415	Use E3612 and all oversizes		E3463	R.H. Exhaust Pipe... ..	
E3416	Use E3476		E3469	Exhaust Pipe Clip	
E3417	Use E3639		E3470	Silencer	
E3419	R.H. Flywheel		E3472	L.H. Exhaust Pipe... ..	
E3420	Plug... ..		E3473	R.H. Exhaust Pipe... ..	
E3421	Bolt		E3474	Air Cleaner Connection	
E3422	Flywheel Assembly		E3475	Grommet	
E3424	R.H. Flywheel		E3476	R.H. Inner Cover	
E3426	L.H. Exhaust Pipe... ..		E3478	Use E3009	
E3428	Silencer Clip		E3479RH	R.H. Megaphone	
			E3479LH	L.H. Megaphone	

E3487 TO E3620

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3487	Crankcase Filter Sealing Washer		E3563	Use E3930	
E3488	Exhaust Pipe Assembly		E3565	Use E4776, 1-E3971	
E3490	Tappet		E3566	Use E4776	
E3491	Tappet Adjuster Spring		E3569	Use E4776	
E3492	Tappet Adjuster Cap		E3576	Inlet Manifold	
E3494	Rocker Oil Pipe Assembly		E3577	Inner Cover	
E3496	Rocker Oil Pipe Connection		E3577S	Inner Cover	
E3497	Crankcase Breather Pipe... ..		E3579	Inner Cover Joint Washer	
E3498	Distance Piece		E3580	Use E3917	
E3505	Oil Return Pipe (Filter)		E3581	18T Engine Sprocket	
E3506	Use E3505		E3582	L.H. Outer Cover... ..	
E3509	Use E3274		E3583	Exhaust Pipe Adaptor	
E3510	Use E3270		E3585	Timing Cover Bush	
E3513	Clip		E3586	Bearing	
E3515	Use 1-E3536, 1-E3540		E3586/10	Bearing	
E3517	Use E3540		E3586/20	Bearing	
E3518	Distributor Bush		E3587	Distributor Gear	
E3519	Crankshaft Sludge Tube		E3591	Cylinder Block	
E3521	Flywheel Assembly		E3592	Cylinder Block Liner	
E3522	L.H. Crankshaft		E3593	Cylinder Head	
E3523	Stud... ..		E3595	Use 1-E4776 & 1-E3971	
E3524	Cylinder Block		E3596	Use E4436	
E3525	Cylinder Block		E3598	Use E4721	
E3526	Drip Shield		E3600	Crankpin	
E3534	Crankcase Oil Return Pipe		E3603	Washer	
E3536	Pushrod Cover Tube		E3606	Connecting Rod	
E3537	Pushrod Cover Tube		E3606T	Connecting Rod (Polished)	
E3540	Pushrod Cover Washer		E3608	Use 1-E3924, 2-E3927	
E3541	Use E3558		E3610	Use E5329	
E3543	Use 1-E3577, 1-E3917, 1-E3460, 1-E3603 & 1-E3579		E3612	Piston Body Available in oversizes + 10, 20, 30 & 40.	
E3545	Use E3930		E3613	Use E5317	
E3547	Pushrod Cover Washer		E3614	Cylinder Head Gasket	
E3550	Inlet Rocker Box		E3615	Piston Body Available in oversizes + 10, 20, & 40.	
E3551	Exhaust Rocker Box		E3618	Breather Valve	
E3552	Rocker Box Washer		E3619	Use E3626	
E3553	Use 1-E3924, 2-E3927		E3620	L.H. Internal Lever	
E3554	Pushrod Cover Tube				
E3558	Crankcase Assembly				
E3560	Crankcase Oil Return Pipe				
E3562	Crankcase Oil Return Pipe Clip				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3621	External Lever		E3671	Adaptor Assembly	
E3622	Crankcase Breather Adaptor ...		E3675	Carburettor Adaptor	
E3623	Big End Bush (Export Only) ...		E3677	Timing Gear Cover	
E3624	Connecting Rod		E3678	Grub Screw	
E3625	Valve Chamber Cover		E3679	Bearing Housing	
E3626	Spindle Assembly		E3682	Bearing Housing	
E3627	External Lever Securing Pin ...		E3685	L.H. Nut	
E3628	L.H. Exhaust Pipe		E3686	Driving Gear	
E3629	L.H. Exhaust Pipe		E3687/88	Crankcase Assembly	
E3630	L.H. Exhaust Pipe		E3688/4005	Crankcase Assembly	
E3632	R.H. Exhaust Pipe		E3689	Piston Body	
E3633	R.H. Exhaust Pipe			Available in oversizes + 10, 20, & 40.	
E3634	R.H. Exhaust Pipe		E3690	Compression Ring	
E3636	R.H. Internal Lever			Available in oversizes + 10, 20, 30 & 40.	
E3637	Silencer		E3691	Compression Ring	
E3639	Flywheel Assembly			Available in oversizes + 10, 20, 30 & 40.	
E3644	Use 1-E3924, 2-E3927		E3692	Scraper Ring	
E3646	Pushrod Cover Tube			Available in oversizes + 10, 20, 30 & 40.	
E3648	Exhaust Valve		E3693	Timing Gear Cover	
E3650	Manifold Washer		E3695	Rear Engine Plate Stud	
E3651	L.H. Silencer		E3698	Cylinder Block	
E3652	R.H. Silencer		E3701	Use E4122	
E3653	Use 1-E4776, 1-E3971		E3702	Connecting Rod	
E3655	R.H. Main Bearing (Plain) ...		E3705	Bolt	
E3655A	R.H. Main Bearing (Plain) 1961 ...		E3706	Bearing	
E3657	Use E3655			Available in oversizes + 10, 20, 30 & 40.	
E3658	Compression Ring (Bermuda) ...		E3707	Crankshaft and Flywheel Assembly	
	Available in oversize + 10.		E3708	Use 1-E4075, 1-E3999 & 1-E3711	
E3659	Compression Ring (Bermuda) ...		E3709	Oil Tube	
	Available in oversize + 10.		E3710	L.H. Plug	
E3660	Scraper Ring (Bermuda)		E3711	R.H. Plug	
	Available in oversize + 10.		E3712	Flywheel	
E3661	Cylinder Head		E3713	Bolt	
E3663	Cylinder Head		E3716	Hollow Dowel	
E3664	L.H. Inner Cover		E3717	Oil Junction Block Stud	
E3667	Use E3917				
E3668	Screw				
E3669	Use 1-E2386, 1-E3302				
E3670	Piston Body				
	Available in oversizes + 10, 20, 30 & 40.				


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3718	Oil Pump Stud		E3769	Cylinder Head Gasket	
E3719	Crankcase Oil Return Pipe ...		E3770	Use E5096	
E3722	Crankcase Filter		E3774	Use E5098	
E3723	Filter Sealing Washer		E3778/1	Exhaust Pipe	
E3724	Filter Spring		E3778/3	Exhaust Pipe	
E3727	Camshaft Retaining Plate ...		E3780/1	Exhaust Pipe	
E3728	Retaining Plate Screw		E3780/3	Exhaust Pipe	
E3729	Distributor Gear		E3782	Megaphone... ..	
E3730	Oil Pump Joint Washer		E3783	Megaphone... ..	
E3731	Oil Pump Body		E3786	Rubber Connection	
E3732	Oil Pump Stud Nut		E3789	Cover Plate	
E3733	Oil Seal Distance Collar		E3790	Use E4322	
E3734	26T Engine Sprocket		E3793	Short Cylinder Head Bolt ...	
E3735	Crankshaft Nut		E3794	Long Cylinder Head Bolt ...	
E3736	Tappet Guide Block		E3795	Long Cylinder Head Bolt ...	
E3737	Exhaust Pipe Adaptor		E3796	Short Cylinder Head Stud ...	
E3738	Inlet Valve		E3797	Long Cylinder Head Stud ...	
E3739	Exhaust Valve		E3798	Cylinder Base Washer	
E3740	Valve Spring Bottom Cup ...		E3799	Rear Crankcase Bolt	
E3741	Outer Valve Spring		E3800	Short Timing Cover Screw ...	
E3742	Valve Spring Top Collar		E3801	Long Timing Cover Screw ...	
E3743	Rocker Box Gasket		E3802	Long Outer Cover Screw ...	
E3744	Exhaust Rocker Box		E3803	Rear Stud	
E3745	Inlet Rocker Box		E3804	Front Stud	
E3748	Rocker Spindle		E3805	Rocker Oil Pipe	
E3749	Rocker Lever		E3809	Oil Pipe Feed Bolt	
E3750	Rocker Lever		E3810	Alternator Distance Piece ...	
E3751	Inspection Cap Washer		E3811	Stator Stud	
E3752	Use E4610		E3812	Engine Mounting Stud	
E3753	Tappet		E3815	Air Cleaner Connection	
E3755	Pushrod Cover Tube		E3816	R.H. Silencer (U.S.A.)	
E3758	Cover Tube Washer		E3817	L.H. Silencer (U.S.A.)	
E3759	Pushrod		E3818	Cylinder Base Stud	
E3761	Inlet Manifold		E3819	Cylinder Base Stud	
E3763	Oil Pipe J/Block Joint Washer ...		E3820	Cylinder Base Stud	
E3764	Sealing Ring		E3821	Cover Plate Screw	
E3765	Cable Seal Nut		E3822	Rotary Valve Disc	
E3766	Inlet Valve		E3823	Exhaust Camshaft Bush	
E3767	Silencer Clip		E3824	Inlet Camshaft Bush	
E3768	"D" Washer		E3825	Distributor Clamp Plate	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3826	Use E3663		E3877	Distributor Bush	
E3827	Inlet Valve Guide		E3878	Oil Pump Complete	
E3828	Exhaust Valve Guide		E3879	Cylinder Head	
E3829	Compression Ring		E3880	Manifold Stud	
	Available in oversizes + 10, 20, 30 & 40.		E3882	Timing Cover Assembly	
E3830	Use E3829		E3883	Use E4930	
E3831	Scraper Ring		E3884	Chain Oiler Drip Tube	
	Available in oversizes + 10, 20, 30 & 40.		E3885	Chain Oiler Metering Jet	
E3832	Joint Washer		E3887	Lock Washer	
E3833	Oil Seal		E3889	Use E4416	
E3834	Carburettor Insulating Block		E3890	Flywheel and Crankshaft Assy.	
E3835	L.H. Bearing		E3891	Crankshaft	
E3838	Inlet Camshaft		E3893	Use E4642	
E3839	Exhaust Camshaft		E3894	Use E4642	
E3840	Silencer		E3902	Crankshaft Plug	
E3843	Distance Piece		E3903	Crankshaft Oil Tube	
E3844	Carburettor Adaptor		E3905	R.H. Crankshaft Plug	
E3847	Adaptor Locknut		E3906	Use E4459	
E3850	Use E4156		E3907	Flywheel Bolt	
E3851	L.H. Crankshaft Key		E3908	Stud	
E3852	Lock Washer		E3909	Use E4776	
E3853	Oil Pipe Junction Block		E3910	Use E4436	
E3857	Rocker Box Washer		E3912/19	19T Engine Sprocket	
E3858	Rocker Box Stud		E3913	Engine Sprocket Distance Piece	
E3859	Screw		E3914	Screw (Long)	
E3860	L.H. Torque Stay		E3915	L.H. Inner Cover	
E3861	R.H. Torque Stay		E3917	L.H. Outer Cover	
E3862	Torque Stay Clip		E3924	Cylinder Head Assembly	
E3863	Distributor Leads Sheath		E3927	Exhaust Valve	
E3864	R.H. Exhaust Pipe		E3928	Silencer	
E3865	L.H. Exhaust Pipe		E3930	Crankcase Assembly	
E3869	R.H. Silencer		E3932	L.H. Oil Seal	
E3870	L.H. Silencer		E3933	Oil Seal Retainer Plate	
E3872	Bolt (M/Police)		E3935	L.H. Silencer	
E3873	Cylinder Head		E3936	R.H. Silencer	
E3874	Use E4016		E3937	Bolt	
E3875	Use 1-E4075, 1-E3999 & 1-E3711		E3938	Use E4019	
E3876	L.H. Oil Seal		E3940	Carburettor Adaptor	
			E3942	Inner Valve Spring	
			E3943	Silencer (Swedish Army only)	

E3945 TO E4037

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E3945	Silencer Shield (Swedish Army only)		E3989	Support Rod	
E3947	Flywheel Assembly (Bermuda) ...		E3990	Float Bowl Base Nut	
E3949	Domed Nut		E3992	L.H. Exhaust Pipe... ..	
E3954	Carburettor Stub		E3994	R.H. Exhaust Pipe... ..	
E3955	Carburettor Adaptor		E3996	Flywheel and Crankshaft Assy. ...	
E3956	Carburettor Stud		E3998	Crankshaft	
E3957	Use 1-E3661 & 2-E3956		E3999	Oil Tube	
E3958	Piston Body		E4000	Cylinder Block	
	Available in oversizes + 10, 20, 30 & 40.		E4001	Connecting Rod	
E3959	Compression Ring		E4001T	Connecting Rod, Polished ...	
	Available in oversizes + 10, 20, 30 & 40.		E4003	Small End Bush	
E3960	Compression Ring		E4004	Piston Body	
	Available in oversizes + 10, 20, 30 & 40.			Available in oversizes + 10 & 20.	
E3961	Scraper Ring		E4005/4645	Crankcase Assembly	
	Available in oversizes + 10, 20, 30 & 40.		E4006	Distance Collar	
E3962	Camshaft		E4007	Cylinder Head	
E3963	Inlet Valve		E4008	Pushrod	
E3964	Valve Spring Bottom Cup ...		E4010	Inner Valve Spring	
E3965	Inner Valve Spring		E4011	Outer Valve Spring	
E3966	Outer Valve Spring		E4012	Inlet Valve	
E3967	Exhaust Pipe Extension		E4013	Exhaust Valve	
E3971	Rotor Nut		E4014	Inlet Manifold	
E3973	Use 1-E3928 & 1-E4076		E4014T	Inlet Manifold (Polished) ...	
E3974	L.H. Crankshaft Key		E4015	Cylinder Head Gasket	
E3975	Tab Washer		E4016	Patent Plate	
E3976	Distance Piece		E4017	Cylinder Head	
E3977	Nut		E4019	Cylinder Head Assembly ...	
E3978	Use 1-E4531 & 1-E4532		E4021	Piston Body	
E3979	Adaptor Ring Screw			Available in oversizes + 10, 20, 30 & 40.	
E3980	Adaptor Ring Stud		E4022	Inlet Camshaft	
E3981	Air Cleaner		E4023	Exhaust Camshaft... ..	
E3985	Air Filter Connection		E4024	Silencer (Police)	
E3986	Carburettor Adaptor		E4025	Silencer (Police)	
E3987	Float Bowl Bush		E4026	L.H. Exhaust Pipe... ..	
E3988	Float Bowl Mounting Bracket ...		E4028	R.H. Exhaust Pipe... ..	
			E4031	Silencer	
			E4032	Silencer Guard	
			E4035	Clip	
			E4037	Cylinder Base Washer	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E4038	Inlet Camshaft		E4096	Outer Cover Screw (Long) ...	
E4039	Exhaust Camshaft		E4097	Distributor Clamp Screw ...	
E4040	Tappet		E4098	Crankcase Bolt	
E4041	Piston Body		E4099	Distributor Clamp	
	Available in oversizes + 10, 20, 30 & 40.		E4100	Use E4871	
E4042	L.H. Extension Pipe		E4101	Cylinder Head Assembly... ..	
E4043	R.H. Extension Pipe		E4103	Cylinder Head Stud Nut... ..	
E4044	Crankshaft and Flywheel Assembly		E4104	Plug Crankcase Oilway	
E4046	Use E5098		E4105	Carburettor Drip Shield (TRW)...	
E4048	Gear Indicator Boss		E4106	Exhaust Pipe Guard (TRW) ...	
E4049	Use E4049A		E4107	Mute	
E4049A	Cylinder Head (1960)		E4109	Oil Pipe and Junction Block Assy.	
E4051	Joint Washer		E4113	Oil Feed Pipe, Top Half	
E4052	Bolt		E4114	Oil Pipe Junction Block Stud ...	
E4053	Washer		E4115	Engine Torque Stay	
E4054	Bolt		E4116	Distributor Clamp Plate	
E4055	Carburettor Stub		E4117	Distributor Sheath	
E4058	Rotor Nut Tab Washer		E4118	Silencer (D.S.)	
E4059	Screw		E4119	Silencer (T.S.)	
E4060	Air Filter Assembly		E4120	Silencer to Bottom Lug Stay ...	
E4063	Element Air Filter		E4121	Hollow Dowel, Crankcase	
E4066	Clip		E4122	Primary Chaincase, Outer	
E4073	Packing Ring		E4123	Adaptor Ring Stud	
E4074	Washer		E4125	Exhaust Pipe (D.S.)	
E4075	Crankshaft		E4130	Exhaust Pipe (T.S.)	
E4076	Silencer Mute		E4132	Silencer	
E4077	Screw		E4133	Exhaust Pipe (D.S.)	
E4079	Distributor Timing Pinion ...		E4135	Piston Ring Compression ...	
E4081	D/Side Extension			Available in oversizes + 10, 20, & 40.	
E4082	T/Side Extension		E4136	Piston Ring Scraper	
E4083	Oil Pipe & Junction Block Assembly			Available in oversizes + 10, 20, & 40.	
E4087/88	Crankcase Assembly		E4137	Use E4322	
E4087/4448	Crankcase Assembly		E4139	Bearing Locating Plate	
E4087/4668	Crankcase Assembly		E4140	Bearing Locating Plate Screw ...	
E4089	Outer Cover (D.S.)		E4141	Engine Sprocket	
E4090	Inner Cover (T.S.)		E4142	Crankshaft Dowel (D.S.)	
E4092	Outer Cover (T.S.)		E4143	Cable Seal Nut	
E4093	Oil Return Pipe		E4144	Cable Seal Grommet	
E4094	Crankcase Filter Assembly ...				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E4145	Alternator Stud		E4194	Release Valve Cup	
E4147	Chain Tension Pivot Pin		E4195	Adaptor Ring	
E4148	Chain Tension Trunnion		E4196	Locknut	
E4149	Chain Tension Blade Assembly		E4198	Silencer	
E4152	Chain Tension Tie Rod		E4200	Exhaust Pipe, D/Side	
E4153	Chain Tension Adjuster		E4201	Exhaust Pipe, T/Side	
E4154	Drain Plug		E4204	Exhaust Pipe Guard	
E4155	Silencer Mute		E4207	Exhaust Pipe Guard Clip... ..	
E4156	Primary Cover Joint Washer		E4208	Use E4402	
E4157	Silencer (D.S.)		E4209	Oil Pump Body	
E4158	Silencer (T.S.)		E4210	Feed Plunger	
E4159	Rocker Oil Pipe		E4211	Scavenge Plunger	
E4162	Piston Body (Bermuda)		E4212	Oil Pump Body Plug	
E4163	Cylinder Barrel (Bermuda)		E4213	Carburettor Adaptor	
E4164	Engine Torque Stay		E4214	Air Cleaner Connection	
E4165	Engine Plate Bolt		E4215	Adaptor Ring	
E4166	Float Chamber Mounting Stud		E4216	Air Cleaner Connection	
E4167	Timing Gear Cover		E4219	Oil Seal	
E4168	Tachometer Cover		E4220	Camshaft, In. & Ex.	
E4170	Timing Cover Assembly		E4221	Inner Valve Spring	
E4172	Dowel Inner Centre Cover		E4222	Outer Valve Spring	
E4173	Exhaust Pipe		E4321	Crankshaft Assembly	
E4174	Silencer (D.S.) Straight Through...		E4322	T/Side Main Bearing	
E4175	Silencer (T.S.) Straight Through...			Available in undersizes — 10, 20, & 30.	
E4176	Silencer Assembly (T.S.)		E4329	Domed Nut	
E4177	Exhaust Pipe (D.S.)		E4400	Scavenge Pipe Liner	
E4179	Exhaust Pipe (T.S.)		E4401	C/Case Scavenge Pipe	
E4181	Exhaust Pipe—Engine Plate Nut...		E4402	Oil Pump	
E4182	Timing Gear Cover		E4403	Oil Pump Body	
E4183	Extension Pipe		E4404	Oil Pump Spring	
E4184	Extension Pipe		E4409	Exhaust Pipe (D.S.)	
E4185	Generator Cable Grommet		E4410	Exhaust Pipe (T.S.)	
E4186	Use E5269		E4413	Silencer	
E4187	Clip, Exhaust Pipe		E4415	Silencer	
E4188	Stay, Exhaust Pipe Clip		E4416	Carburettor Adaptor	
E4189	Stay, Exhaust Pipe Clip		E4417	Silencer	
E4190	Use E4693		E4418	Silencer	
E4191	Release Valve		E4427	Piston Body (War Office)	
E4192	Release Valve Cap		E4434	Rotor Nut (M/Police)	
E4193	Release Valve Sealing Ring				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E4435	Flywheel Assembly		E4535	Gearbox Inner Cover Stud	
E4436	Flywheel (D.S.)		E4536	Alternator Stud—Long	
E4439	Flywheel (T.S.)		E4537	Alternator Stud—Short	
E4442	Use E4999		E4538	Oil Return Pipe	
E4445	Connecting Rod		E4539	Scavenge Drilling Plug	
E4447	Big End Bush (Export only)		E4540	Crankcase Bolt, Top Rear	
E4449	Inner Cover		E4541	Crankcase Bolt, Top Front	
E4451	Timing Pinion		E4542	Crankcase Stud, Rear	
E4452	Distributor Gear		E4543	Crankcase Filter	
E4453	Distributor Gear Key		E4546	Cylinder Block	
E4454	Sleeve		E4547	Cylinder Head Gasket	
E4455	Key		E4549	Rocker Box Washer	
E4456	Cylinder Head Bolt		E4550	Inlet Rocker Box	
E4457	Grommet		E4551	Exhaust Rocker Box	
E4458	Spacing Washer		E4552	Cylinder Head	
E4459	Flywheel (U.S.A.)		E4562	Camshaft Pinion	
E4467	Exhaust Pipe (D.S.)		E4563	Exhaust Camshaft Nut	
E4468	Exhaust Pipe (T.S.)		E4564	Timing Pinion	
E4478	Use E4642		E4565	Timing Pinion Nut	
E4479	Flywheel		E4566	Intermediate Wheel	
E4481	Inlet Valve Guide		E4567	Timing Cover	
E4482	Exhaust Valve Guide		E4568	Contact Breaker Oil Seal	
E4483	Inlet Valve		E4569	Oil Seal Circlip	
E4485	Cable Clip		E4571	Contact Breaker Cover	
E4492	Use E4642		E4572	Engine Sprocket (29T)	
E4493	Use E4643		E4573	Distance Piece	
E4496	Silencer		E4576	Carburettor Adaptor	
E4497	Exhaust Pipe		E4577	Crankcase Cover Plate	
E4498	Exhaust Pipe Extension		E4578	Cover Plate Oil Seal	
E4501	Exhaust Pipe Clip (U.S.A.)		E4579	Crankcase Blanking Plug (TS)	
E4503	Rotor Nut		E4587	Distributor Plug	
E4504	Insulating Block		E4590	Oil Pipe and Joint Block Assembly	
E4513	Exhaust Pipe		E4593	Distributor Plug Washer	
E4514	Exhaust Pipe		E4594	Oil Pipe Connection	
E4515	Switch Cover		E4601	Piston Body	
E4519	Oil Feed Pipe Assembly		E4603	Inlet Valve	
E4524	Oil Feed Pipe Connection		E4604	Exhaust Valve	
E4531	Adaptor Ring		E4605	Carburettor Adaptor	
E4532	Bolt		E4608	Adaptor Locknut	
E4533/34	Crankcase Assembly		E4609	Rocker Box Cap Clip	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E4610	Rocker Box Inspection Cap ...		E4716	Exhaust Pipe Assembly (DS) ...	
E4630	Timing Gear Cover ...		E4718	Exhaust Pipe Assembly (TS) ...	
E4631	Compression Ring (M/Police) ...		E4721	Flywheel (U.S.A.) ...	
E4632	Scraper Ring (M/Police) ...		E4722	O/Pipe J/Block Assy. (M/Police)...	
E4637	Outer Cover (TS) ...		E4725	Oil Pipe Connection (M/Police)...	
E4638	Outer Cover Screw (TS) ...		E4726	Oil Pipe Connection (M/Police)...	
E4640	Inlet Valve ...		E4737	Exhaust Pipe Bracket ...	
E4642	Flywheel and Crankshaft Assembly		E4738	Exhaust Pipe ...	
E4643	Crankshaft Assembly ...		E4744	Rear Chain Oiler Drip Tube ...	
E4648	Inlet Rocker Cover ...		E4746	Retaining Washer ...	
E4649	Exhaust Rocker Cover ...		E4747	Pillar Bolt ...	
E4666	Camshaft Bush ...		E4749	Piston Body (U.S.A.) ...	
E4669	Tachometer Union ...		E4750	Contact Breaker Grommet ...	
E4670	Piston Body ...		E4751	Cover Tube ...	
	Available in oversizes + 10, 20, & 40.		E4752	Cover Tube Washer ...	
E4671	Rocker Box Cap Locking Ring ...		E4771	Cylinder Head Bolt ...	
E4674	Cylinder Head Gasket ...		E4772	Sleeve Nut ...	
E4675	Cylinder Head Gasket ...		E4776	Flywheel Assembly (U.S.A.) ...	
E4676	Tappet Guide Block ...		E4778	Engine Torque Stay ...	
E4678	Inlet Camshaft ...		E4779	Cylinder Head Assembly ...	
E4689	Induction Manifold ...		E4783	Gear Indicator Cap Nut ...	
E4690	Tachometer Plug ...		E4784	Cylinder Head Assembly...	
E4691	Tachometer Spacer ...		E4785	Cylinder Head Assembly...	
E4692	Tachometer Adaptor ...		E4786	Exhaust Camshaft...	
E4693	Pump Drive Shaft Bush ...		E4787	Inner Cover (TS) ...	
E4696	Tappet Stem ...		E4788	Adaptor Assembly (U.S.A.) ...	
E4698	Oil Pump Tachometer Drive Shaft		E4789	Adaptor Assembly (U.S.A.) ...	
E4699	Tachometer Union ...		E4791	Balance Pipe ...	
E4700	Tachometer Drive Thimble ...		E4792	Connecting Pipe (U.S.A.) ...	
E4701	Gear Indicator Nut ...		E4803	Tachometer 'O' Ring ...	
E4702	Gear Indicator ...		E4806	Chaincase Cover Screw ...	
E4703	Camplate Rod ...		E4818	Inlet Camshaft Assembly ...	
E4704	Primary Chain Oiler Tube ...		E4819	Inlet Camshaft Assembly ...	
E4705	Oiler Tube Clip ...		E4846	Exhaust Pipe (TS) ...	
E4706	Tachometer Drive Hole Plug ...		E4848	Exhaust Camshaft Assembly ...	
E4707	Contact Breaker Grommet ...		E4849	Locating Peg ...	
E4708	Silencer (U.S.A.) ...		E4854	Use E4786	
E4711	Pillion Footrest Support ...		E4855	Exhaust Camshaft Assembly ...	
E4714	Exhaust Pipe (TS) ...		E4856	Crankcase Stud, Long ...	
			E4869	Camshaft and Peg Assembly ...	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
E4870	Camshaft and Peg Assembly ...		E5047	Exhaust Camshaft	
E4871	Outer Cover Joint Washer (DS)		E5049	Contact Breaker Joint Washer ...	
E4872	Outer Cover Joint Washer (TS)		E5050	Contact Breaker Cover Clip ...	
E4882	Use E4949		E5072	Backing Plate Spacer	
E4883	Support Bracket		E5073	Alternator Stud	
E4884	Exhaust Pipe (DS) (U.S.A.) ...		E5094	Flywheel and Crankshaft Assembly	
E4886	Exhaust Pipe (TS) (U.S.A.) ...		E5096	Flywheel and Crankshaft Assembly	
E4887	Exhaust Pipe Bracket (U.S.A.) ...		E5098	Flywheel and Crankshaft Assembly	
E4889	Spacer (U.S.A.)		E5101	Piston Body	
E4892	Silencer, L.H. (M/Police)		E5110	Air Filter Elbow	
E4893	Silencer, R.H. (M/Police)		E5111	Adaptor Ring	
E4894	Mute (M/Police)		E5112	Bracket	
E4899	Piston Body		E5113	Screw	
	Available in oversizes + 10, 20, 30 & 40.		E5159	Silencer Hanger	
E4911	Engine Sprocket (J.O.M.O.) ...		E5160	Use 1-E5348 and 1-E4792	
E4912	Spacer (J.O.M.O.)		E5162	Inlet Camshaft	
E4913	Dowel (J.O.M.O.)		E5163	Inlet Camshaft	
E4914	Adaptor Assembly (J.O.M.O.) ...		E5186	Exhaust Pipe (M/Police)	
E4915	Adaptor Assembly (J.O.M.O.) ...		E5188	Exhaust Pipe (M/Police)	
E4918	Insulating Block (J.O.M.O.) ...		E5191	Silencer (M/Police)	
E4919	Adaptor Joint Washer (J.O.M.O.)		E5192	Allen Screw (M/Police)	
E4922	Chaincase Plug		E5194	Air Cleaner Adaptor	
E4928	Cylinder Head Assembly		E5211	Scraper Ring	
E4930	Upswept Exhaust Pipe (U.S.A.) ...		E5230	Crankcase Filter	
E4931	Camshaft Inlet		E5232	Inner Cover Screw	
E4932	Exhaust Pipe Clip (U.S.A.) ...		E5258	Tachometer Union	
E4947	Exhaust Pipe Clip (U.S.A.) ...		E5259	Union Bush	
E4949	Silencer		E5260	Drive Gear	
E4951	Bracket		E5262	Air Filter Assembly	
E4980	Silencer Bracket		E5267	Air Filter Element	
E4981	Exhaust Pipe Bracket (U.S.A.) ...		E5268	Air Filter Connection	
E4999	Crankpin		E5269	Stator Stud Nut	
E5008	Valve Spring Cup		E5312	Crankcase Filter	
E5027	Exhaust Pipe (T20/Police) ...		E5315	Joint Washer	
E5029	Silencer (T20/Police)		E5316	Rotary Valve	
E5033	Silencer Bracket (T20/Police) ...		E5317	Piston Body	
E5043	Use E5044			Available in oversizes + 10, 20, 30 & 40.	
E5044	Exhaust Camshaft		E5318	Rear Chain Oiler	
E5046	Use E5047		E5323	Crankshaft Assembly	

**MASTER SPARES****PRICE LIST**

<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>
E5324	Alternator Nut	
E5325	Exhaust Pipe	
E5327	Exhaust Pipe	
E5329	Piston Body	
	Available in oversizes + 10, 20, 30 & 40.	
E5341	Exhaust Camshaft	
E5348	Cylinder Head	
E5349	Adaptor Assembly	
E5350	Adaptor Assembly	
E5351	Adaptor Assembly	
E5352	Adaptor Assembly	
E5370	Breather Junction Piece	
E5374	Vent Pipe	
E5375	Breather Extension Pipe	
E5376	Breather Extension Pipe	
E5434	Junction Block Assembly... ..	
E5446	Engine Sprocket (29 Teeth)	
E5447	Timing Pinion	
E5449	Alternator Sleeve	
E5450	Engine Sprocket (29 Teeth)	
E5451	Bolt	
E5473	Oil Pipe Clip	
E5579	Flywheel Assembly	
E5580	Flywheel (T/Side)	
E5616	Oiler Plug	
E5651	Pushrod Assembly (U.S.A.)	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F444	Rear Mudguard Plate		F1117	Rear Engine Plate Dowel ...	
F839	Stud... ..		F1149	Bolt	
F847	Saddle Spring Bolt		F1153	Use F3313	
F862	Distance Tube		F1213	Bolt	
F867	Brake Pedal Spindle		F1245	Bolt	
F879	Nut		F1335	Washer	
F880	Nut		F1369	Screw	
F929	Screw		F1451	Bolt	
F939	Rear Mudguard Stay		F1511	Washer	
F944	Rear Mudguard Stay		F1561	Stud... ..	
F944A	Rear Mudguard Stay		F1605	R.H. Knee Grip Rubber	
F946	Stud... ..		F1606	L.H. Knee Grip Rubber	
F947	Nut		F1607	R.H. Knee Grip Plate	
F966	Screw		F1607A	L.H. Knee Grip Plate	
F967	Petrol Tank Rubber Washer ...		F1616	Use F2938	
F969	Rear Chain Adjuster Screw ...		F1616A	Use F3012	
F975A	Rear Stand Spring... ..		F1645	Use F3321	
F976	Spring Washer		F1647	Use 1-F1838, 1-F1919	
F977	Rear Stand Pivot Pin		F1665/6	Battery Carrier Base and Back Plate	
F987	L.H. Footrest		F1667	Battery Carrier Top Strap ...	
F987A	L.H. Footrest		F1668	Battery Carrier Front Strap ...	
F991	Footrest Rod		F1670	Battery Carrier Complete ...	
F994	Stud... ..		F1670A	Use F1670	
F995	Brake Pedal Rubber		F1671	Use F3372	
F996	Use F966		F1680	Stud... ..	
F1008	Nut		F1681	Gearbox Clamp Bolt	
F1015	Rear Brake Operating Rod ...		F1682	Stud... ..	
F1015A	Rear Brake Operating Rod ...		F1692A	Toolbox Complete	
F1015B	Use F1015A		F1694	Pillion Footrest	
F1015C	Use F1015		F1695	Pillion Footrest Rubber	
F1015E	Rear Brake Operating Rod ...		F1696	Stud... ..	
F1031	Bolt		F1699	Toolbox Clip (Lower)	
F1034	Hinged Filler Cap		F1700	Toolbox Clip (Upper)	
F1034A	Use F1034		F1711	Stud... ..	
F1034W	Filler Cap Washer		F1713	Washer	
F1081	Distance Tube		F1715	Battery Carrier Bolt	
F1087	Rear Stay		F1717	Petrol Tap	
F1088	Front Stay		F1718	Anchor Plate Bolt... ..	
F1088A	Centre Stay		F1721	Petrol Pipe... ..	
F1092	Footrest Rod				

F1722 TO F2245

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F1722	Rear Mudguard Complete ...		F1823A	Petrol Tank Nameplate ...	
F1723A	Tailguard		F1823B	Petrol Tank Nameplate ...	
F1724	Rear Mudguard Complete ...		F1823C	Petrol Tank Nameplate ...	
F1725A	Tailguard		F1823D	Petrol Tank Nameplate ...	
F1727	Hinge Pin		F1823F	Petrol Tank Nameplate ...	
F1729A	Saddle Cover		F1823H	Petrol Tank Nameplate ...	
F1729B	Use F1729A		F1823J	Use F1823	
F1729D	Use F2835		F1823T	Use F1823F	
F1729F	Saddle Seat Spring		F1823'TG'	Petrol Tank Nameplate ...	
F1729G	Saddle Seat Spring		F1824	Rear Chain Adjuster Locknut ...	
F1729H	Saddle Seat Spring		F1834	Rear Stand	
F1729 I	Saddle Seat Spring		F1838	Oil Filter Complete	
F1729J	Saddle Seat Spring		F1839	Use F1919	
F1729K	Saddle Nose Spring		F1841	Petrol Tank Front Support ...	
F1729M	Saddle Seat Spring		F1850	Toolbox Fastener Screw	
F1729N	Saddle Seat Spring		F1851	Use F2445	
F1729P	Saddle Seat Spring		F1858	Instrument Panel Screw	
F1729Q	Saddle Seat Spring		F1865	Use F3059	
F1729T	Saddle Complete		F1880	Washer	
F1730	Lower Rear Chainguard		F1896	Use F1729T	
F1731	R.H. Footrest		F1909A	Use F3321	
F1736	R.H. Footrest Distance Tube ...		F1911	Use F2938	
F1743	Stud... ..		F1914	Use F2698	
F1744	Use F2601		F1915	Nameplate Screw	
F1746	Sleeve Nut... ..		F1919	Oil Pipe Assembly	
F1747	Nut		F1928	Use F2552	
F1749	Distance Piece		F1929	Use F2551	
F1756	Bolt		F1931	Use F1717	
F1760	Bolt		F1933	Stud... ..	
F1762	Rubber Washer		F1935	Use F2698	
F1792	Oil Tank Plug		F1936	Use F2698	
F1804	Instrument Panel		F1953	Knee Grip Fixing Screw	
F1808	Petrol Tank Bolt		F2091	Instrument Panel	
F1811	L.H. Rear Engine Plate		F2120	Balance Pipe	
F1811A	R.H. Rear Engine Plate		F2123	Use F3060	
F1812	Use F1811		F2124	Petrol Tap	
F1813	Petrol Tank Rubber Washer ...		F2175	Use F3059	
F1814	K/S Lever Rubber... ..		F2184	Washer	
F1822	Use F2728		F2235	Rear Carrier Assembly	
F1823	Petrol Tank Nameplate		F2245	Pannier Frame Bracket	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F2246	Pannier Frame Bracket		F2597	Distance Washer	
F2251	Bolt		F2599	Use F2698	
F2252	Wing Nut		F2600	Bolt	
F2254	Pannier Frame Stay		F2601	Sidecar Rear Connection...	
F2261	Pannier Frame Complete ...		F2603	Clamp Bolt... ..	
F2262	L.H. Pannier Bag		F2604	Pivot Lug	
F2263	R.H. Pannier Bag		F2605	Clamp Bolt... ..	
F2268	Footrest Hanger		F2606	Pivot Lug	
F2271	Pivot Bolt		F2607	Swivel Pin	
F2277	Washer		F2608	Spring Anchorage Peg	
F2288	Use E2288		F2610	Prop Stand Spring	
F2310	Pannier Bag Strap, Short... ..		F2611	Prop Stand Complete	
F2311	Pannier Bag Strap, Long		F2612	Prop Stand Complete	
F2312	Pillion Footrest Assembly ...		F2631	Use F2687	
F2313	Petrol Tap Cork		F2639	Float Chamber Bracket	
F2314	Petrol Tap Cork		F2645	Footrest Bolt	
F2335	Mudguard Stay Bolt		F2646	L.H. Front Engine Plate	
F2380	Torque Stay Clip		F2647	R.H. Front Engine Plate	
F2381	Torque Stay Clip		F2648	Anchor Plate Pin	
F2385	Front Frame		F2687	Petrol Tank Rear Support Bolt ...	
F2385A	Use F2963		F2688	Petrol Pipe (Mixing Chamber) ...	
F2391	Use F3108		F2692	R.H. Petrol Pipe	
F2392	L.H. Rear Engine Plate		F2693	L.H. Petrol Pipe	
F2395	Front Cover Plate... ..		F2694	Distance Piece	
F2396	R.H. Rear Engine Plate		F2698	Front Number Plate	
F2398	Bolt		F2717	Clip	
F2400	Use F2938		F2720	Saddle Spring Bolt	
F2414	Stud... ..		F2725	Brake Pedal Spindle Nut... ..	
F2445	Instrument Panel Beading ...		F2728	Rear Number Plate	
F2472	Oil Gauge		F2751	Use F3102	
F2527	L.H. Petrol Pipe		F2756	Rear Mudguard (Front Section) ...	
F2528	Use F3059		F2758	Use F3012	
F2529	Petrol Pipe "Y" Adaptor ...		F2761	Rear Mudguard Centre Stay, L.H.	
F2551	L.H. Knee Grip Rubber		F2763	Rear Mudguard Centre Stay, R.H.	
F2552	R.H. Knee Grip Rubber		F2764	Rear Mudguard Stay	
F2567	Oil Tank Bracket (Lower) ...		F2825	Stud... ..	
F2577	Screw		F2835	Saddle Spring	
F2587	Sidecar Connection		F2842	Stud... ..	
F2593	Adaptor		F2872	Air Cleaner Connector Sleeve ...	
F2596	Bolt		F2873	Use F2872	

F2874 TO F3120



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F2874	Air Cleaner Sleeve		F3038	Use F987	
F2875	Air Cleaner Sleeve		F3038A	Use F1731	
F2876	Battery Carrier		F3049	Use F3174	
F2877/8	Battery Carrier Base and Back Plate		F3057	Use F4971	
F2879	Float Chamber Connection Pipe...		F3059	Petrol Pipe... ..	
F2884	L.H. Rear Engine Plate		F3060	Petrol Pipe... ..	
F2885A	R.H. Rear Engine Plate		F3061	Distance Piece	
F2896	Rear Brake Adjusting Nut		F3062	Battery Carrier Bolt	
F2902	Washer		F3064	Use F2998	
F2908	Stud... ..		F3066	Bolt	
F2913	Prop Stand Leg		F3067	Front Engine Plate	
F2918	L.H. Petrol Pipe		F3069	Distance Piece	
F2919	R.H. Petrol Pipe		F3070	L.H. Rear Engine Plate	
F2933	Use F3917		F3071	R.H. Rear Engine Plate	
F2936	Parcel Grid Screw		F3076A	Oil Tank Vent Pipe	
F2938	Front Frame		F3076B	Oil Tank Vent Pipe	
F2939	Use F3102		F3077	Vent Pipe Connection	
F2958	Adaptor Body		F3078	Crankcase Undershield Bracket...	
F2959	Sleeve Nut... ..		F3079	Crankcase Undershield	
F2963	Rear Frame		F3080	L.H. Styling Band	
F2964	Use F3280		F3081	R.H. Styling Band	
F2966	Use F3184		F3082	Knee Grip Screw	
F2979	Front Engine Plate		F3083	L.H. Styling Band	
F2988	Use F3295		F3084	R.H. Styling Band	
F2989	Use F3319		F3094	Propstand Assembly	
F2996	Front Number Plate		F3095	Use F3723	
F2998	Rear Mudguard Blade		F3096	Lockwasher	
F2999	Rear Mudguard Centre Stay		F3097	Swivel Pin	
F3001	Rear Mudguard Stay		F3098	Speedo Cable Clip	
F3004	Sleeve Nut... ..		F3100	Use F2963	
F3005	Distance Tube		F3102	Rear Frame	
F3006	Petrol Tank Rubber Pad		F3105	Use F3319	
F3007	Petrol Tank Bolt (Front)		F3108	Pivot Bolt	
F3012	Rear Mudguard		F3113	Nameplate Screw	
F3017	Distance Piece		F3114	Air Filter Connection	
F3023	Distance Piece		F3115	Air Filter Assembly	
F3024	Toolbox Clip (Lower)		F3116	Use F4972	
F3026	Parcel Grid Screw		F3118	Use F3879	
F3028	Use F3372		F3119	Saddle Complete	
			F3120	Use F3287	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F3122	Twinseat Centre Bracket ...		F3217/18	Jack Chain	
F3123	Bracket		F3217/21	Jack Chain	
F3125	Twinseat Cover		F3219	Petrol Tank Filler Cap	
F3126	Rear Mudguard		F3220	Petrol Tank Filler Cap	
F3130	Tailguard Assembly		F3222	Air Cleaner	
F3131	Rear Stay Assembly		F3223	Air Filter Element	
F3146	Rear Stand Assembly		F3224/7	Toolbox Fastener	
F3153	Use 1-F3785, 1-3123, 1-F3122		F3226	Toolbox Fastener	
F3157	Bracket		F3227	Grommet	
F3158	Spring		F3234	Saddle Cover	
F3160	Use F3201		F3236	Saddle Main Spring	
F3161	Folding Footrest Swivel		F3237	Bolt and Washer	
F3162	Pivot Bolt		F3238	Saddle Nose Bolt and Nut	
F3163	Use F3201		F3239	Saddle Nose Spring	
F3164	Rear Chain Adjuster Screw		F3240	Saddle Nose Spring	
F3166	Footrest Hanger Rod		F3241	Saddle Seat Spring	
F3170	Mudguard Centre Stay (R.H.)		F3242	Saddle Seat Spring	
F3174	Distance Piece		F3243	Saddle Seat Spring	
F3175	Use F3321		F3244	Saddle Seat Spring	
F3178	Rear Frame		F3280	Petrol Tank	
F3179	Oil Tank Filter		F3281	L.H. Styling Band	
F3181	Oil Pipe		F3282	R.H. Styling Band	
F3182	Union Nut		F3287	Petrol Tank	
F3183	Use F3280		F3292	Use F3292A	
F3186	Oil Tank		F3292A	Front Frame	
F3187	Oil Tank		F3295	Front Frame	
F3189	Oil Return Pipe (Top Half)		F3313	Rear Brake Pedal	
F3190	Megaphone Distance Piece		F3315	Air Filter	
F3191	Megaphone Bolt		F3315E	Air Filter Element	
F3192	Racing Front Number Plate		F3316	Air Filter Connection	
F3193	Distance Piece		F3319	Rear Frame	
F3195	Air Filter		F3321	Oil Tank	
F3195E	Air Filter Element		F3323	Oil Tank Distance Piece	
F3197	Use F3189		F3326	Legshield Stay	
F3201	Folding Footrest Assembly		F3327	Rubber Grommet	
F3207	Distance Piece		F3329	Petrol Tank Plug	
F3208	L.H. Legshield		F3330	Use F2756W	
F3210	Use F3894		F3331	Use AUC1011	
F3215	Oil Tank Filler Cap		F3332	Petrol Pipe	
F3216	Use F5155		F3334	Straight End	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F3335	Elbow		F3455	Use F4038	
F3337	Union Nut		F3456	Rear Brake Pedal	
F3339	Use F3775		F3459	Brake Pedal Spindle	
F3340	Air Filter Connection		F3460	Rear Brake Operating Rod	
F3341	Petrol Pipe		F3461	Washer	
F3343	Petrol Pipe		F3462	Use W1181	
F3349	Petrol Pipe		F3463	Rear Brake Rod Adjuster	
F3353	Obtuse Elbow Nipple		F3464	Oil Tank	
F3359	Use F3187		F3465	Use F3876	
F3360	Use F3914		F3468	Oil Tank Bolt	
F3363	Rear Number Plate		F3469	Use F3762	
F3364	Bracket		F3470	Rubber Battery Pad	
F3365	Bracket		F3472	Battery Case Bolt	
F3367	Use F3723		F3473	Battery Case Strap	
F3368	Coil Mounting Clip		F3474	Battery Cover Knob	
F3372	Petrol Tank Support Bracket		F3475	Circlip	
F3373	L.H. Petrol Pipe		F3476	Oil Tank Distance Piece (Top)	
F3376	Screw		F3477	Oil Tank Distance Piece (Bottom)	
F3384	Propstand		F3478	Air Cleaner Connector	
F3387	Clip		F3479	Rear Mudguard	
F3388	Spring		F3483	Mudguard Backing Strip	
F3391	Use F3926		F3484	L.H. Rear Mudguard Stay	
F3418	Air Cleaner Container		F3488	R.H. Rear Mudguard Stay	
F3422	Backing Washer		F3491	Toolbox and Battery Carrier Assy.	
F3423	Rubber Gaiter		F3492	Air Cleaner Element	
F3424	Use F3781		F3493	Toolbox Lid	
F3425	Main Rear Suspension Spring		F3494	L.H. Styling Band	
F3426	Rear Rebound Suspension Spring		F3495	R.H. Styling Band	
F3427	Suspension Spring Cover (Lower)		F3496	Nameplate	
F3428	Suspension Spring Cover (Upper)		F3497	Nameplate Screw	
F3429	Use 1-F3853, 1-F3854		F3498	Petrol Tank Bolt	
F3430	Plunger Guide Bolt		F3499	Petrol Pipe	
F3431	Rear Chainguard		F3502	Saddle Bracket Stud	
F3436	Chainguard Screw		F3503	Oil Feed Pipe (Top Half)	
F3437	Chainguard Distance Piece		F3504	Oil Feed Pipe Union Nut	
F3438	Use F3762		F3505	Petrol Pipe	
F3448	Footrest Hanger Rod		F3506	Use F4908	
F3449	L.H. Footrest		F3508	Rear Number Plate	
F3450	R.H. Footrest		F3513	Connecting Pipe	
F3454	Use F4037		F3514	Use F4327	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F3515	Footrest Pedal Stud		F3618	Centre Stand Connecting Link	
F3516	Petrol Pipe		F3619	Centre Stand Pivot Bolt	
F3519	Use F3747		F3620	Rectifier Bracket	
F3520	Pivot Bolt		F3623	Air Cleaner Sleeve	
F3521	Pivot Bolt		F3624	Air Cleaner Connection	
F3522	Use NF761		F3629	Use F4394	
F3527	Rectifier Mounting Bracket ...		F3632	Rear Mudguard Bolt	
F3528	Use F3687		F3634	Use 1-F4414, 1-CP156	
F3529	Use 1-F3946, 1-F3535		F3635	Rear Frame	
F3535	Twinseat Centre Bracket ...		F3638	Use 1-F4414, 1-CP156	
F3536	Centre Bracket Stud		F3641	Oil Tank Stud	
F3541	R.H. Rear Engine Plate		F3646	Use F4131	
F3564	Swinging Arm Spindle		F3647	Twinseat	
F3567	Use F3798		F3652	Battery Case Lid	
F3570	Rear Chainguard		F3654	Twinseat Cover (F3647)	
F3571	Rear Engine Plate Cover ...		F3655	Oil Feed Pipe (Top Half) ...	
F3572	Use F3768		F3656	Air Cleaner Stud	
F3573	Gearbox Adjuster Pivot Pin ...		F3658	Use F4985	
F3574	Steering Arm Spacing Washer ...		F3665	Crankcase Stud	
F3575	Gearbox Pivot Bolt		F3666	Stop Lamp Switch Bracket ...	
F3576	Use F3769		F3667	Use F4585	
F3577	Suspension Plunger Cup		F3668	L.H. Petrol Pipe	
F3579	Use F3718		F3670	L.H. Petrol Pipe	
F3580	L.H. Support Bracket		F3672	R.H. Petrol Pipe	
F3584	Spacing Washer		F3674	R.H. Petrol Pipe	
F3587	Use 3870		F3677	Rear Mudguard	
F3588	Battery Carrier Top Strap ...		F3681	Propstand	
F3589	Air Cleaner		F3683	Shim .003	
F3591	Use F3856		F3684	Shim .005	
F3592	Footrest Hanger Stud		F3685	Rear Mudguard	
F3593	R.H. Footrest		F3687	Mudguard Backing Strip ...	
F3594	Rear Brake Pedal Washer ...		F3688	Crankcase Undershield	
F3595	Rear Brake Pedal		F3689	Mounting Bracket	
F3597	Rear Brake Rod		F3690	Swinging Arm Bush	
F3598	Retaining Cap		F3694	Mixing Chamber Connecting Pipe	
F3599	Rear Engine Plate Bracket ...		F3695	Float Chamber Connecting Pipe	
F3600	Nut		F3696	Use F3876	
F3601	Use F3896		F3699/701	L.H. Support Bracket	
F3608	Use F4304		F3700/701	R.H. Support Bracket	
F3617	Centre Stand Spring		F3701	Stud... ..	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F3702	L.H. Footrest Adaptor		F3796	Use F4985	
F3703	Support Bracket Peg		F3797	Cap Retaining Rod	
F3704	Footrest Folding Arm		F3798	L.H. & R.H. Cap	
F3705	R.H. Footrest		F3799	Cap Retaining Nut	
F3705CTE	R.H. Folding Footrest Assembly		F3805	Support Bracket Bolt	
F3706	Folding Footrest Pivot Bolt ...		F3806	Air Filter Rubber Connection ...	
F3707	Rear Brake Pedal		F3807	Rear Chainguard	
F3710	Saddle Complete		F3808	Chainguard Clip	
F3718	L.H. Support Bracket		F3809	Bolt	
F3723	Propstand		F3810	Spacer	
F3728	Connector Sleeve		F3812	Air Cleaner	
F3729	Rubber Connector		F3812E	Use F3315E	
F3730	Use F4304		F3813	Use F4274	
F3734	Use T1578		F3814	Rubber Pad Support Cup ...	
F3740	Rubber Block		F3815	Rubber Pad	
F3745	Frame Clip		F3816	Rear Support Bolt	
F3746	Float Chamber Clip		F3824E	Air Filter Element	
F3747	Centre Stand Spring		F3831	Oil Tank Fixing Screw	
F3748	Petrol Pipe		F3832	Centre Stay Assembly	
F3750	Use F3925		F3838	Float Bowl Clip	
F3751	Use F3926		F3843	Air Cleaner Sleeve	
F3753	Use F3762		F3848	Rectifier Bracket	
F3760	L.H. Rear Engine Plate		F3853	Plunger Guide Rod	
F3762	Centre Stand Complete		F3854	Plunger Guide Rod Locknut ...	
F3763	Centre Stand only		F3856	Oil Tank Complete	
F3767	Gearbox Adjuster Pivot Pin ...		F3857	Air Filter	
F3768	Gearbox Adjuster Eye Bolt ...		F3858	Connection	
F3769	Gearbox Clamp Stud		F3859	Clip	
F3770	Washer		F3861	Use F4141	
F3771	Nut		F3862	Use 1-F3946, 1-F3535	
F3772	Nut		F3865	Rear Bracket	
F3774	Torque Stay		F3866	Rear Stud	
F3775	Breather Vent Pipe		F3869	Petrol Tank	
F3777	Battery Carrier Strap		F3870	Battery Case and Toolbox Com- plete	
F3778	Use F4131		F3874	Toolbox Lid	
F3780	Torque Stay Bolt		F3875	Fastener Screw	
F3781	Fork End Pin		F3876	Oil Tank Filter	
F3784	Use F4037		F3879	Petrol Pipe	
F3785	Twinseat		F3880	Rear Stay Assembly	
F3792	Rear Bracket Assembly				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F3882	Use F3672		F3957	Centre Stand	
F3884	Use F3672		F3960	Centre Stand Spring	
F3886	Mudguard Centre Stay (Paris Police)		F3961	Screw	
F3889	Mudguard Rear Stay (Paris Police)		F3962	Distance Piece	
F3892	Use 1-F4414, 1-CP156		F3963	Petrol Tank	
F3893	Use 1-F4414, 1-CP156		F3967	Petrol Tank Chrome Strip ...	
F3894	R.H. Legshield Assembly ...		F4018	Bolt	
F3896	Lifting Handle		F4019	Centre Stand Screw Washer ...	
F3900	Petrol Tank Front Support ...		F4022	Twinseat	
F3901	L.H. Legshield		F4027	Seat Cover (F4022)	
F3902	R.H. Legshield		F4028	{ Supplied in CP153 only	
F3904	Use F4414		F4029		
F3906	Steering Stop Bolt		F4030	Toolbox	
F3907	Steering Stop Bolt		F4031	Use F4274	
F3908	Upper Legshield Stay		F4032	L.H. Styling Band	
F3910	Lower Legshield Stay		F4033	R.H. Styling Band	
F3913	"U" Bolt		F4037	L.H. Rear Fork End	
F3914	Petrol Tank		F4038	R.H. Rear Fork End	
F3915	L.H. Knee Grip Plate		F4039	Battery Carrier	
F3916	R.H. Knee Grip Plate		F4047	Filler Cap Washer 'C & S' (Small)	
F3917	Petrol Tank Grid		F4048	Filler Cap Washer 'C & S' (Large)	
F3919	L.H. Styling Band		F4049	Use 1-F4051, 1-F4594	
F3920	R.H. Styling Band		F4050	Use F4594	
F3925	Frame c/w Rear Suspension ...		F4051	Rear Frame	
F3926	Front Frame		F4068	Swinging Arm Assembly ...	
F3929	Engine Mounting Collar ...		F4076	Swinging Arm Bush	
F3933	Brake Pedal Spindle		F4078	R.H. Spacing Washer	
F3934	Rear Chainguard Assembly ...		F4079	Swinging Arm Spindle	
F3937	Propstand		F4080	L.H. Support Assembly	
F3939	Rear Mudguard		F4081	R.H. Support Assembly	
F3942	Rear Mudguard R.H. Stay ...		F4082	Support Plate, L.H.	
F3944	Rear Mudguard L.H. Stay ...		F4086	Support Plate, R.H.	
F3946	Twinseat Complete		F4087	Swinging Arm Bolt	
F3948	Twinseat Centre Bracket ...		F4089	Rear Chainguard (Rear Section)	
F3949	Coll Valance Assembly		F4090	Brake Pedal Spindle	
F3953	Engine Mounting Bolt		F4091	Brake Pedal Assembly	
F3954	Engine Mounting Bolt		F4093	Rear Brake Rod	
F3955	Engine Mounting Bolt Nut ...		F4094	Rear Mudguard	
F3956	Use F3957		F4097	Rear Mudguard Support Stay ...	
			F4098	Twinseat Complete	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F4104	Twinseat Cover		F4209	L.H. Pillion Footrest Support Assy.	
F4105	Twinseat Rear Bracket		F4210	R.H. Pillion Footrest Support Assy.	
F4106	Oil Tank Fixing Bracket		F4214	L.H. Footrest	
F4107	Use F3815		F4215	R.H. Footrest	
F4108	Oil Tank Fixing Rubber		F4218	Use F5129	
F4109	Use F967		F4220	Battery Carrier Assembly ...	
F4110	Oil Tank Fixing Cup		F4222	Twinseat Hinge Assembly ...	
F4111	Oil Tank Bolt		F4226	Twinseat Catch Plunger ...	
F4114	Stop Lamp Switch Clip		F4227	Twinseat Catch Plunger Knob	
F4115	Petrol Tank		F4228	Twinseat Catch Spring	
F4116	Petrol Tank		F4229	L.H. Rear Engine Plate	
F4127	L.H. Styling Unit		F4230	R.H. Rear Engine Plate	
F4128	R.H. Styling Unit		F4232	Petrol Tank	
F4129	Styling Unit Screw		F4233	Oil Tank Complete	
F4130	Rear Chainguard		F4235	L.H. Styling Strip (Front) ...	
F4131	Swinging Arm c/w Bushes ...		F4236	L.H. Styling Strip (Rear) ...	
F4134	Bracket		F4237	R.H. Styling Strip (Front) ...	
F4135	Pivot Bolt		F4238	R.H. Styling Strip (Rear) ...	
F4136	Bolt, Rear Chainguard		F4239	Twinseat Assembly	
F4138	Rear Chainguard		F4242	Rubber Pad	
F4140	Chainguard Centre Bracket ...		F4244	Twinseat Cover	
F4141	Silencer Stay		F4245	Rear Number Plate Assembly ...	
F4142	Use F3815		F4249	Side Panel Beading	
F4144	L.H. Side Panel		F4250	Petrol Pipe (Twin Monobloc Carb.)	
F4145	R.H. Side Panel		F4252	Use F4594	
F4146	L.H. Styling Strip (Rear) ...		F4253	Rear Frame	
F4148	L.H. Styling Strip (Front) ...		F4258	Crankcase Undershield	
F4149	R.H. Styling Strip (Rear) ...		F4260	Crankcase Undershield Clip ...	
F4151	R.H. Styling Strip (Front) ...		F4261	Twinseat Rear Bracket	
F4152	Rear Chainguard (Front Section)		F4262	Use F4606	
F4157	Use F4849		F4263	Distance Piece	
F4158	Rear Frame Arrangement ...		F4265	Clip	
F4190	Swinging Arm Assy. c/w Bushes		F4269	Rear Chainguard	
F4195	Swinging Arm Spindle		F4270	Rear Mudguard	
F4196	L.H. & R.H. Spindle Retainer Cap		F4272	Use 1-F4098, 1-F4261	
F4197	Distance Piece		F4273	Rear Tank Support	
F4198	Upper Rear Chainguard		F4274	Rear Tank Support	
F4199	Lower Rear Chainguard		F4275	L.H. Front Engine Plate	
F4201	Torque Stay		F4276	R.H. Front Engine Plate	
F4202	Use F4402		F4277	Propstand	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F4278	Pillion Footrest Support		F4351	Petrol Tank	
F4283	Exhaust Pipe Bracket		F4352	Distance Piece	
F4284	Brake Pedal Spindle		F4353	Rubber Connection	
F4285	Petrol Pipe "T" Piece		F4354	"U" Bolt (Front Bracket) ...	
F4286	Petrol Pipe		F4355	Pipe at Feed	
F4289	Olive		F4356	Petrol Pipe "T" Piece	
F4290	Union Nut		F4357	Use F4356	
F4291	Petrol Pipe Assembly		F4358	Use F4356	
F4297	Rear Mudguard Assembly ...		F4359	Oil Tank	
F4299	Washer		F4360	Use F4239	
F4302	Cable Clip		F4361	Safety Strap Assembly	
F4303	Petrol Pipe		F4365	Self Tapping Screw	
F4304	Centre Stand		F4366	Coil Bolt Distance Piece ...	
F4308	L.H. Petrol Pipe Assembly ...		F4369	Bolt	
F4309	Pillion Footrest Hanger Stud ...		F4370	Washer	
F4311	Suspension Unit Bottom Bracket		F4374	Distance Piece	
F4312	Motif (21)		F4375	Front Stay	
F4313	Buffer		F4376	Centre Stay	
F4314	Brake Pedal Assembly		F4377	Rear Stay	
F4316	Oil Tank Filler Cap		F4382	Petrol Tank Front Bolt	
F4317	"Spire" Nut		F4383	L.H. Footrest	
F4318	Oil Tank		F4384	Rubber Plug	
F4319	Tool Tray Assembly		F4385	Shim .003	
F4323	L.H. Styling Strip Assembly (Rear)		F4386	Shim .005	
F4324	R.H. Styling Strip Assembly (Rear)		F4388	Propstand	
F4325	Use F4483		F4391	Rear Mudguard	
F4326	"Spire" Nut, Front (Side Panel)		F4394	Rear Mudguard	
F4327	Pillion Footrest Assembly ...		F4398	Petrol Tank Centre Band ...	
F4329	Oil Tank		F4402	Centre Stand	
F4330	Stud		F4407	L.H. Pillion Footrest Support ...	
F4331	Nut		F4410	R.H. Pillion Footrest Support ...	
F4332	Packing Piece (Front No. Plate)		F4414	Front Frame Complete	
F4335	Oil Tank Vent Pipe		F4418	Use F4594	
F4340	Rear Mudguard Bridge		F4420	Use F4594	
F4341	Float Bowl Stud		F4422	Adjuster Eye Bolt	
F4342	Carburettor Support Bracket ...		F4442	Battery Carrier (Police)	
F4344	Petrol Pipe Connection		F4445	Rubber Pad	
F4345	Support Plate Rearward Footrest		F4447	Washer	
F4346	Support Plate Rearward Footrest		F4448	Petrol Pipe	
F4348	Rear Mudguard Blade		F4450	Petrol Pipe	

F4452 TO F4586

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F4452	Twinseat Strap		F4526	Petrol Pipe 2½"	
F4465	Petrol Tank		F4528	Battery Case and Toolbox ...	
F4466	Use F4570		F4529	Oil Tank	
F4467	Use F4571		F4530	Oil Feed Pipe Connection ...	
F4468	Styling Unit Screw		F4531	Oil Tank Bolt	
F4469	Air Cleaner Connection		F4532	Twinseat Auxiliary Support (U.S.A.	
F4470	Use F4537		F4533	Oil Tank Filter	
F4475	Twinseat Cover Spring Clip ...		F4537	Petrol Pipe	
F4476	Oil Tank		F4539	Petrol Pipe Assembly	
F4476A	Use F4476		F4540	Petrol Pipe Assembly	
F4477	Oil Tank Cap		F4541	Use F4542	
F4478	Oil Tank Cap Washer		F4542	Petrol Pipe Assembly	
F4480	Silencer Mute Rivet (M/Police)		F4544	Use F4594	
F4481	Twinseat Support Bracket ...		F4545	Use F4253	
F4482	Twinseat Support Bracket ...		F4546	Horn Bracket	
F4483	Self Tapping Screw		F4547	Float Chamber Bracket	
F4484	Centre Stand Bolt Tab Washer ...		F4550	Air Cleaner	
F4485	Battery Clamp Rod		F4553	Petrol Pipe (Tank to Float Bowl)	
F4486	Air Filter Element		F4554	Flexible Pipe	
F4487	Adaptor and Gauge Assembly ...		F4563	Battery Carrier Assembly ...	
F4489	Dome Nut		F4564	Cradle, Battery Carrier	
F4490	Use F5491		F4565	Hinge, Battery Carrier	
F4496	Petrol Tank		F4566	Use F1668	
F4497	Rear Mudguard Assembly ...		F4567	Bracket, Battery Carrier ...	
F4499	Mudshield Assembly		F4568	Clamping Screw, Carrier ...	
F4502	Support Stay Mudshield		F4569	Nut, Gearbox Clamp	
F4503	L.H. Rear Panel Assembly ...		F4570	Styling Unit	
F4505	R.H. Rear Panel Assembly ...		F4571	Styling Unit	
F4509	Bolt		F4572	Oil Tank	
F4510	Seat Lug Stud		F4573	Rear Crash Bar D/Side	
F4511	Screw		F4575	Rear Crash Bar T/Side	
F4512	Rear Panel Packing Washer ...		F4578	Stud Lower Fixing	
F4513	Oil Tank Assembly		F4579	End Cap Lower Fixing	
F4515	Battery and Toolbox Assembly ...		F4580	Spacer Tube D/Side	
F4516	Use 1-F4098, 1-E3181		F4581	Spacer Tube T/Side	
F4521	Petrol Pipe (Tank to Float Bowl)		F4582	Footrest Rubber	
F4522	Use 1-F4542, 2-E4035		F4583	Footrest Rubber	
F4523	Motif Speed Twin		F4584	Oil Feed Pipe	
F4524	Motif (T100A)		F4585	Adjuster Nut	
F4525	Petrol Pipe 12"		F4586	Centre Stand	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F4592	Air Cleaner Connection		F4685	Front to Rear Frame Top Bolt ...	
F4594	Front Frame		F4686	Rear Number Plate	
F4597	Engine Bolt Collar		F4687	Rear Mudguard	
F4598	Swinging Arm		F4690	Mudguard to Top Rail Clip ...	
F4604	Rear Mudguard Assembly ...		F4691	Twin Seat Assembly	
F4606	Rear Mudguard Stay		F4695	Crankcase Undershield	
F4608	Use F4846		F4696	Switch Bracket (D.S.)	
F4609	Rear Frame		F4697	Switch Bracket (T.S.)	
F4640	Petrol Tank		F4698	Air Cleaner	
F4641	Petrol Tank Rubber		F4699	Use F4916	
F4642	Petrol Tank		F4700	Petrol Tank	
F4645	Rubber Moulding		F4702	Oil Tank Complete	
F4646	Gearbox Adjuster Eyebolt ...		F4705	Battery Case and Toolbox ...	
F4647	Brake Pedal Assembly		F4706	Battery Case and Toolbox ...	
F4650	Brake Pedal Spindle		F4707	Exhaust Pipe Bracket (D.S. & T.S.)	
F4651	Front Engine Plate		F4708	Coil Pillar Washer	
F4655	Use F4917		F4709	Coil Pillar	
F4656	Petrol Tank Strap Eyebolt Pin		F4711	Use F4297	
F4657	Petrol Tank Strap Rubber ...		F4712	Prop Stand Assembly	
F4658	Petrol Tank Strap Yoke		F4715	Side Panel Screw	
F4659	Petrol Tank Strap Eyebolt ...		F4716	Rear Mudguard Screw	
F4660	Battery Carrier		F4717	Side Panel Nut	
F4661	Battery Carrier Strap		F4719	Front Engine Plate Cover ...	
F4662	Battery Carrier Strap Rubber Pad		F4720	Petrol Pipe Assembly	
F4663	Thunderbird Motif		F4722	Petrol Pipe Assembly	
F4664	T110 Motif		F4725	Petrol Pipe Assembly	
F4665	Styling Strip Assembly (D.S.) Rear		F4726	Petrol Pipe	
F4667	Styling Strip Assembly (T.S.) Rear		F4730	Twin Seat	
F4669	Gearbox Adjuster Pivot Pin ...		F4734	Twin Seat Cover	
F4670	Connecting Link		F4735	Twin Seat Rear Support	
F4671	Spring		F4736	Radio Carrier	
F4672	Air Cleaner Connection		F4743	Bolt	
F4673	Air Cleaner		F4744	Bolt	
F4674	Rear Mudguard		F4746	Eyebolt (D.S.)	
F4676	Rear Side Panel (D.S.)		F4747	Bracket, Float Bowl	
F4677	Rear Side Panel (T.S.)		F4748	Engine Bolt Collar	
F4680	Side Panel Clip (Bottom) Front ...		F4763	Centre Stand	
F4681	Gearbox Pivot Bolt		F4766	Styling Unit (D.S.)	
F4682	Engine Mounting Stud		F4767	Styling Unit (T.S.)... ..	
F4684	Rear Frame		F4768	Rear Panel (D.S.)	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F4769	Rear Panel (T.S.)		F4868	Rear Rubber Mounting	
F4770	Petrol Tank Steady		F4869	Torque Stay Assembly	
F4771	Horn to Cross Piece Bolt		F4871	Prop Stand Leg Assembly	
F4772	Twin Seat (Police)... ..		F4874	Horn Bracket	
F4775	Petrol Tank (Police)		F4875	Tool Carrier	
F4777	Centre Band (Front)		F4876	Battery Carrier	
F4779	Centre Band (Rear)		F4877	Tool Box Complete	
F4780	Bolt (Rear Fixing)		F4882	Tool Box Lid	
F4781	Tank Centre Band (Front)		F4885	Tool Box Lid Screw	
F4783	Tank Centre Band (Rear)		F4886	Petrol Pipe Assembly	
F4800	Rear Mudguard		F4887	Styling Strip	
F4806	Use F5334		F4888	Styling Strip	
F4810	Filter Cover Clip		F4891	Centre Stand	
F4811	Air Cleaner Element		F4897	Rear Backing Strip	
F4812	Air Cleaner Adaptor		F4898	Twinseat Rubber Buffer	
F4813	Screw		F4899	Styling Unit	
F4814	Battery Vent Pipe		F4900	Styling Unit	
F4821	Centre Stand (Police)		F4901	Oil Tank	
F4825	Rear Engine Plate (Police)		F4902	Petrol Tank Strip	
F4829	Tool Box Assembly (Police)		F4903	Switch Bracket Assembly	
F4830	Twinseat Hinge (Police)		F4905	Battery Case and Toolbox	
F4833	Rear Frame (Police)		F4908	Petrol Tap	
F4837	Rear Bracket (Police)		F4909	Switch Bracket	
F4838	Rubber (Police)		F4916	Tank Strap	
F4839	Petrol Pipe		F4917	Tank Strap	
F4841	Petrol Pipe		F4918	Tank Strap Sleeve (Rear)... ..	
F4842	Petrol Pipe		F4919	Tank Strap Sleeve (Front)	
F4844	Rectifier Lead Washer		F4920	Petrol Pipe Assembly	
F4846	Front Frame		F4964	Water Deflector	
F4849	Front Frame		F4965	Tank Strap	
F4851	Oil Tank		F4966	Trunnion	
F4852	Crankcase Undershield		F4967	Tank Strap Hook (Front)	
F4853	Crankcase Undershield Bracket		F4968	Tank Strap Pin	
F4854	Rear Chaignard		F4969	Tank Strap Hook (Rear)	
F4855	Torque Stay Centre Bracket		F4970	Tank Strap Rubber	
F4856	Lifting Handle		F4971	Petrol Tap	
F4858	Rear Mudguard		F4972	Petrol Tap	
F4860	Mudguard Bridge		F4985	Oil Tank Cap	
F4861	Rear Mudguard Bottom Bracket		F4996	Sleeve Nut	
F4862	Petrol Tank Rail		F5001	Bridge Bolt	
F4867	Rubber Strap				


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F5002	Footrest Assembly		F5141	Air Filter Lid	
F5003	Footrest Assembly		F5142	Rubber Connection	
F5008	Horn to Bracket Screw		F5143	Switch Bracket	
F5018	Tank Strap Spacer		F5144	Rectifier Spacer	
F5019	Tank Strap Bolt (Rear)		F5146	Rear Frame	
F5020	Switch Bracket (D.S.)		F5147	Battery Carrier	
F5021	Switch Bracket (T.S.)		F5151	Mudguard Fixing Screw	
F5022	Footrest Rubber		F5152	Mudguard Spacer	
F5029	Brake Pedal Sleeve		F5153	Centre Stand	
F5033	Footrest Bolt		F5155	Oil Tank Filler Cap	
F5034	Horn Support Bracket		F5156	Footrest	
F5035	Lifting Handle		F5157	Footrest	
F5037	Air Cleaner		F5158	Brake Pedal Bracket	
F5038	Air Cleaner Connection		F5161	Brake Rod	
F5039	Petrol Pipe Assembly		F5163	Front Frame	
F5041	Centre Stand		F5164	Rear Frame	
F5049	Oil Tank Bracket		F5167	Rear Mudguard Blade	
F5050	Oil Tank Stud		F5168	Backing Strip	
F5051	Top Rear Stud		F5169	Use F5640	
F5053	Chainguard		F5170	Petrol Pipe	
F5066	Oil Tank		F5174	Battery Carrier Assembly (Police)	
F5067	Oil Tank		F5177	Battery Carrier Pad (Police)	
F5075	Steering Stop (D/Side)		F5178	Battery Carrier Strap (Police)	
F5076	Steering Stop (T/Side)		F5181	Battery Carrier Rubber (Police)	
F5077	Steering Stop Spacer		F5182	Petrol Tank (Police)	
F5078	Screw		F5184	Twinseat (Police)	
F5084	Tool Bag Assembly		F5191	Front Frame	
F5086	Horn Bracket		F5198	Propstand Assembly	
F5087	Pillion Footrest Support		F5200	Petrol Pipe	
F5088	Pillion Footrest Support		F5203	Junction Box Clip	
F5089	Petrol Pipe Assembly		F5204	Tank Steady Rubber	
F5094	Rear Panel		F5215	Crankcase Undershield	
F5096	Rear Panel		F5225	Mounting Board (Police)	
F5100	Styling Strip		F5226	Mounting Board Screw (Police) ...	
F5127	Twinseat		F5228	Tank Rubber	
F5128	Twinseat Cover		F5229	Tank Rubber	
F5129	Air Cleaner Assembly		F5242	Brake Pedal	
F5137	Air Cleaner Element		F5244	Footrest (D.S.)	
F5139	Battery Case and Toolbox		F5245	Footrest (T.S.)	
F5140	Pad for Filter Element		F5247	Oil Tank Rubber	

F5248 TO F5462

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
F5248	Oil Tank Rubber		F5366	Twinseat Assembly	
F5249	Use F3655		F5369	Rear Mudguard Bottom Bracket	
F5259	Engine to Frame Stud		F5370	Petrol Tank	
F5260	Petrol Tank		F5371	Rear Chainguard	
F5302	Swinging Arm Assembly		F5372	Motif 'T90'	
F5310	Use F6042		F5373	Gearbox Pivot Bolt Nut	
F5311	Tab Washer		F5376	Gearbox Pivot Bolt Nut	
F5312	Swinging Arm Sleeve		F5378	Oil Tank Lower Bracket	
F5313	Swinging Arm Distance Tube		F5381	Oil Tank	
F5314	Swinging Arm Bolt		F5394	Switch Panel	
F5315	Torque Stay Bolt		F5396	Coil Mounting Bracket	
F5316	Engine Plate Bolt		F5398	Petrol Tank Centre Band	
F5319	Rear Panel (DS)		F5401	Knee Grip (DS)	
F5320	Rear Panel (TS)		F5402	Knee Grip (TS)	
F5323	Twinseat Valance (DS)		F5404	Speedo Cable Steady	
F5324	Twinseat Valance (TS)		F5406	Front Frame	
F5327	Oil Tank Complete		F5407	Rear Frame	
F5328	Battery Carrier Strap		F5409	Rear Chainguard	
F5329	Battery Carrier Strap		F5410	Distance Piece	
F5330	Oil Tank Bolt		F5411	Footrest Bolt	
F5331	Mounting Strap Bolt		F5412	Stop Lamp Switch Lever	
F5332	Oil Tank Mounting Grommet		F5413	'D' Washer	
F5333	Battery Carrier		F5414	Inflator Bracket, Upper	
F5334	Air Cleaner		F5415	Inflator Bracket, Lower	
F5335	Petrol Tank Front Support		F5416	Petrol Tank	
F5336	Rear Support Rubber		F5418	Twinseat Cover	
F5337	Petrol Tank Rear Bolt		F5419	Petrol Tank Bracket	
F5338	Rectifier Nut		F5421	Petrol Tank	
F5339	Petrol Pipe Assembly		F5423	Petrol Flex Pipe	
F5343	Oil Tank Drain Plug		F5424	Lifting Handle Assembly	
F5345	Centre Stand Assembly		F5427	Grommet (J.O.M.O.)	
F5350	Centre Stand Extension Arm		F5431	Rectifier Extension Nut	
F5351	Pivot Lug Stud		F5432	Inflator Bracket, Upper	
F5352	Pivot Lug Distance Piece		F5433	Inflator Bracket, Lower	
F5356	Petrol Tank (Police)		F5448	Front Frame	
F5357	Mounting Bracket (Police)		F5449	Rear Frame	
F5358	Mounting Bracket (Police)		F5459	Rear Engine Plate (DS)	
F5359	Horn Bracket		F5460	Rear Engine Plate (TS)	
F5360	Rear Panel (DS)		F5461	Bracket	
F5362	Rear Panel (TS)		F5462	Petrol Pipe Assembly	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each
F5466	Coil Mounting Grommet ...	
F5467	Coil Distance Piece ...	
F5469	Engine to Frame Stud ...	
F5471	Brake Pedal Stop ...	
F5472	Crankcase Undershield ...	
F5473	Use F5788	
F5475	Use F5687	
F5476	Head Lug Steering Stop ...	
F5491	Oil Tank ...	
F5503	Tank Band (Police) ...	
F5508	Rear Mudguard ...	
F5511	Rear Frame ...	
F5525	Rear Mudguard ...	
F5529	Centre Stand ...	
F5530	Centre Stand ...	
F5531	Footrest Bolt ...	
F5532	Distance Piece ...	
F5535	Pillion Footrest Bolt (U.S.A.) ...	
F5536	Chainguard Grommet ...	
F5537	Use F5788	
F5538	Motif Pad ...	
F5539	Propstand ...	
F5542	Tank Band (Police) ...	
F5543	Footrest Spacer (U.S.A.) ...	
F5544	Rear Mudguard (J.O.M.O.) ...	
F5545	Horn Bracket Bolt ...	
F5546	Oil Tank ...	
F5547	Centre Stand ...	
F5552	Pillion Footrest Assy. (U.S.A.) ...	
F5557	Rear Mudguard (J.O.M.O.) ...	
F5558	Oil Tank Mounting Grommet ...	
F5559	Switch Panel ...	
F5564	Tank Centre Band (U.S.A.) ...	
F5579	Rear Mudguard Blade ...	
F5604	Brake Pedal Spindle ...	
F5605	Frame Bolt ...	
F5607	Centre Stand ...	
F5609	Float Chamber Bracket ...	
F5616	Petrol Pipe ...	
F5618	Petrol Pipe ...	

Part No.	Description	Price Each
F5623	Stand Bracket (Police) ...	
F5624	Stand Grommet (Police) ...	
F5625	Air Cleaner Clip ...	
F5640	Rear Mudguard Support Stay ...	
F5642	Backing Plate ...	
F5663	Rear Mudguard ...	
F5665	Tool Tray ...	
F5678	Pivot Bolt ...	
F5679	Pivot Bolt Washer ...	
F5680	Brake Pedal ...	
F5681	Brake Pedal ...	
F5682	Brake Pedal Spindle ...	
F5684	Rear Engine Plate ...	
F5686	Grommet ...	
F5687	Rear Brake Rod Clip ...	
F5688	Petrol Pipe Assembly ...	
F5689	Petrol Pipe ...	
F5693	Air Filter ...	
F5694	Air Filter Element ...	
F5697	Footrest & Brake Pedal Assy. ...	
F5698	Brake Pedal Assembly ...	
F5700	Brake Rod ...	
F5701	Pillion Footrest Support ...	
F5702	Lifting Handle Assembly ...	
F5718	Twin Seat ...	
F5729	Bolt ...	
F5730	Suspension Unit Bolt ...	
F5733	Hinge Bracket ...	
F5737	Rear Chainguard ...	
F5741	Distance Piece ...	
F5742	Battery Carrier (Police) ...	
F5747	Bottom Fixing Bracket ...	
F5749	Strap (Police) ...	
F5750	Front Bracket ...	
F5751	Rear Bracket ...	
F5752	Legshield Eye Bolt ...	
F5753	Legshield Grommet ...	
F5754	Crashbar (Police) ...	
F5755	Clamp Cap ...	
F5756	Top Clamp ...	

**MASTER SPARES****PRICE LIST**

Part No.	Description	Price Each	Part No.	Description	Price Each
F5757	Clamping Tube		F5957	Air Cleaner	
F5758	Eye Bolt		F5958	Carburettor Adaptor	
F5759	Stud... ..		F5962	Bracket	
F5760	Bottom Bracket		F5963	Rear Mudguard	
F5761	Bolt		F5965	Air Filter	
F5762	Heat Dissipator Plate		F5968	Rear Mudguard (Polished)	
F5763	Air Filter		F5969	Centre Stand Hook	
F5765	Stepped Stud		F5976	Side Panel Link	
F5766	Rear Mudguard Blade		F5978	Side Panel	
F5768	Rubber Strip		F5983	Switch Bracket	
F5786	Propstand Assembly		F5984	Rear Mudguard	
F5788	Undershield Bracket		F5988	Switch Rubber Band	
F5789	"O" Ring		F5994	Top Clip	
F5790	Anchorage Clip		F5995	Packing Strip	
F5792	Legshield		F6031	Backing Plate	
F5793	Legshield		F6036	Adaptor Clip	
F5794	Eyebolt Rubber		F6042	Swinging Arm Bush	
F5797	Brake Pedal Assembly		F6046	Rear Chainguard	
F5857	Cup		F6061	Mounting Bracket	
F5907	Engine Plate		F6074	Air Cleaner Clip	
F5908	Engine Plate		F6103	Oil Feed Pipe	
F5909	Footrest		F6104	Air Cleaner Beading	
F5910	Footrest		F6105	Air Cleaner Beading	
F5914	Rear Mudguard		F6112	Coil Bracket	
F5916	Rear Mudguard		F6116	Horn Bracket	
F5923	Link Bracket		F6122	Coil Bracket Bolt	
F5924	Rear Number Plate		F6125	Coil Retainer	
F5928	Centre Stand		F6136	Retainer Clip	
F5932	Centre Stand		F6150	Bolt Assembly	
F5939	Pillar Assembly		F6192	Swinging Arm Assembly	
F5942	Footrest Stud		F6195	Motif, Thunderbird	
F5943	Footrest Peg		F6229	Distance Piece	
F5944	Tab Washer		F6230	Support Bracket	
F5948	Battery Carrier				
F5949	Mounting Strap				
F5950	"O" Ring				
F5951	"O" Ring Plate				
F5953	Rear Mudguard				
F5955	Rear Mudguard				
F5956	Air Cleaner				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
GE29	Scraper Ring Available in oversizes + 10, 20, 30 & 40.		GS35	Oil Pump Body	
GST15/53	Gasket Set		GS36	Tappet Guide Block	
GST20/53	Gasket Set		GS36/005	Tappet Guide Block	
GST20/59	Gasket Set		GS87	Rotary Valve	
GST20S/59	Gasket Set		GS110	Rocker Box Stud	
GS350T/46	Gasket Set		GS121	Inlet Manifold Stud	
GS350T/48	Gasket Set		GS127	Clutch Shaft Washer	
GS5T/38	Gasket Set		GS134	Dowel	
GS5T/39	Gasket Set		GS153	Oil Pump Plunger (Feed)... ..	
GS5T/46	Gasket Set		GS182	Use F3799	
GS5T/50	Gasket Set		GS187	Use E3827	
GS5T/54	Gasket Set		GS203	Washer	
GS5T/56	Gasket Set		GS218	Stay Bolt	
GS6T/50	Gasket Set		GS248	Oil Release Valve Body	
GS6T/52	Gasket Set		GS250	Oil Release Valve Spring	
GS6T/54	Gasket Set		GS251	Oil Release Valve Piston	
GS6T/56	Gasket Set		GS254	Release Valve Washer	
GSGPT100	Gasket Set		GS272	Oil Return Pipe (Inlet)	
GST100/39	Gasket Set		GS273	Oil Return Pipe (Exhaust)	
GST100/46	Gasket Set		GS297	Rocker Box Stud Nut	
GST100/50	Gasket Set		GS299	Washer	
GST100/51	Gasket Set		GS305	Timing Pinion Key	
GST100R/51	Gasket Set		GS308	Washer	
GST100/52	Gasket Set		GS326	Use E3072	
GST100/56	Gasket Set		GS367	Washer	
GSTR5/49	Gasket Set		GS439	Tacho Drive Plug Washer	
GST110/54	Gasket Set		GS471	Crankcase Filter Washer... ..	
GST110/56	Gasket Set		GS482	Bolt	
GSTRW/52	Gasket Set		GS512	Bolt (U.S.A.)	
GST21/57	Gasket Set		GS662	Adjuster Pin Locknut	
GST120/59	Gasket Set		GS669	Use W103	
D/GS1	Decoke Gasket Set		GS761	Washer	
D/GS2	Decoke Gasket Set				
D/GS3	Decoke Gasket Set				
D/GS4	Decoke Gasket Set				
D/GS5	Decoke Gasket Set				
D/GS6	Decoke Gasket Set				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
H95	Steering Damper Spring Washer		H421	Front Fork Cover Tube (Top) L.H.	
H111	Head Race Cup		H422	Front Fork Cover Tube (Top) R.H.	
H193	Nut		H424	Front Stand Pivot Screw	
H200	Lockscrew		H425	Pivot Screw Spring Washer ...	
H211	Bolt		H426	Support Clip Bolt	
H225	Handlebar Bend		H427	Front Mudguard Support Bridge	
H230	Twistgrip Rubber		H428	Support Bridge Clip	
H230A	Twistgrip Rubber		H430	Drain Plug Washer	
H232	Twistgrip Circlip		H431	Retaining Washer	
H233	Twistgrip Retaining Plate ...		H432	Stanchion Sleeve Nut	
H234	Cable Thimble		H432A	Stanchion Sleeve Nut	
H237	Twistgrip Grub Screw		H433	Top Cone	
H251	Beading		H434	Damper Anchor Plate	
H379	Pinch Bolt Nut		H435	Damper Anchor Plate Disc ...	
H380	Fork Head Lug		H436	Handlebar Cap Bolt	
H382	Stanchion		H437	Top Cup	
H382A	Stanchion		H438	Top Cone	
H384	Fork Spring		H439	Bottom Cone	
H385	Fork Spring		H440	Handlebar Bend	
H390	Dust Excluder Sleeve		H441	Upper Bearing	
H391	Dust Excluder Felt Washer ...		H443	Lower Bearing	
H394	Pressure Tube		H444	Stanchion Stop Nut	
H395	Use H1012		H445	Retaining Washer	
H397	Pressure Tube Support Sleeve ...		H446B	Front Brake Cable Tube	
H398	Bolt		H447	Cable End	
H399A	Restrictor Rod		H451	Support Bridge Clip Bolt ...	
H400	Rocker Spindle Nut		H452	Oil Restrictor	
H402	Use H1229		H453	Oil Restrictor Cup	
H404	Crown and Stem Sleeve Nut ...		H454	Oil Restrictor Cup Pin	
H405	Crown and Stem Sleeve Nut ...		H500	Dowel	
H406	Top Cone Dust Cover		H505	Use H1095	
H407	Top Cone Dust Cover		H506	Handlebar Cap	
H408	Steering Damper Rod Sleeve ...		H511	Bolt (M/Police)	
H409	Damper Sleeve Securing Pin ...		H518	Nut	
H410A	Use H566		H519	Use H519A	
H412	Front Stand		H519A	Plug	
H413	Steering Damper Plate		H521	Use H521A	
H414	Lower Fork Member		H521A	Pressure Tube Assembly ...	
H415	Lower Fork Member		H525	Front Fork Cover Tube (Top) L.H.	
H420	Dust Seal Washer		H526	Front Fork Cover Tube (Top) R.H.	

H527 TO H810

MASTER SPARES
PRICE LIST

<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>	<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>
H527	Handlebar Bend		H716	Front Mudguard	
H532	Clip		H717	Front Mudguard Support Bridge	
H533	Backing Strip		H719	Front Mudguard Stay	
H536	Use H1142		H722	Handlebar Cap	
H545	Distance Piece		H723	Sleeve Nut	
H565	Damper Rod Washer		H724	Steering Damper Anchor Plate ...	
H566	Front Mudguard		H731	Use H790	
H567	Use H566		H733	Use 16/121	
H569	Use H1331		H734	Use 16/121	
H570	Bolt		H734A	Use 16/121	
H590	Bolt		H740	Use 16/121	
H604	Oil Tank Bolt		H741	Front Number Plate Clip ...	
H618	Nacelle Top Unit		H742	Use H741	
H622	Mudguard Stay Bolt		H745	Nut	
H623	L.H. Motif		H749	Front Fork Spring... ..	
H624	R.H. Motif		H750	Front Fork Spring... ..	
H656	Front Fork Cover Tube (Top) L.H.		H751	Front Brake Cable Rubber Ferrule	
H657	Front Fork Cover Tube (Top) R.H.		H752	Front Fork Assembly	
H659	Handlebar Bend		H755	Use 1-H970, 2-H941	
H660	Handlebar Clamp Bolt		H759	Nacelle Top Unit	
H663A	Fork Head Lug		H760	Rectifier Bracket	
H665	Friction Adjuster Screw ...		H761	Use H1207	
H668	Clip		H763	Handlebar Bend	
H668A	Clip		H765	Use H1010	
H669	Handlebar Grommet		H766	Bracket	
H670	Guide Tube		H768	Valanced Front Mudguard ...	
H685	Friction Adjuster Spring ...		H769	Use H768	
H686	Friction Spring		H777	Use H957	
H687	Screw		H778	Use H618	
H688	Screw		H786	Use H1006	
H689	Screw		H787	Use H1010	
H690	Nut		H788	Use H956	
H691	Nut		H789	Fork Head Lug	
H695	Use H1229		H790	Fork Crown and Stem	
H696	Use H1004		H791	Use H994	
H697	Twistgrip Assembly		H799	Nacelle Top Cover, L.H....	
H698	Twistgrip Head		H800	Nacelle Top Cover, R.H....	
H700	Twistgrip Sleeve		H803	Front Fork Assembly	
H707	Front Brake Cable Sleeve ...		H807	Nacelle Top Unit	
H713	Screw		H810	Handlebar Bend	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
H811	Handlebar Bend		H877	L.H. Motif	
H812	Nacelle Top Unit		H878	R.H. Motif	
H820	Handlebar Bend		H879	L.H. Clutch Lever... ..	
H822	Nacelle Top Unit		H879 R.H.	Brake Lever	
H823	Nacelle Bottom Unit		H880	Screw	
H824	Nacelle Bottom Unit		H881	Nacelle Grommet	
H826	Rear Wheel Bearing		H883	Twistgrip Complete	
H827	Use H1230		H884	Use Amal 16/069	
H828	Use H1231		H885	Handlebar Rubber Grip	
H833	Steering Race Cone		H886	Horn Button	
H834	Pinch Bolt		H887	Use H1020	
H835	Steering Race Cup		H890	Gear Indicator Spindle Assembly	
H836	Steering Race Dust Cover		H894	Indicator Plunger Assembly	
H837	Fork Head Lug		H902	Stanchion Rubber Washer	
H840	Sleeve Nut... ..		H903	Stanchion Rubber Buffer	
H843	Use H1035		H904	Indicator Position Plate	
H845	Stanchion Bottom Bush		H905	Twistgrip Body	
H846	Stanchion Nut		H906	Grub Screw	
H847	Front Fork Spring		H907	Twistgrip Tension Spring	
H850	Fork Spring Stud (Short)... ..		H908	Tension Spring Rivet	
H851	Fork Spring Stop		H909	Twistgrip Rotor Sleeve	
H852	Fork Spring Anchor Rod... ..		H910	Twistgrip Body Clip	
H853	Use H1040		H911	Body Clip Screw	
H856	Lower Outer Member Cap		H912	Throttle Cable Adjuster	
H857	Brake Anchorage Clip		H913	Adjuster Locknut	
H860	Lower Outer Member Bush (Top)		H916	Screw	
H861	Lower Outer Member Sleeve Nut		H917	Nacelle Top Unit	
H862	Sleeve Nut Washer (Steel)		H918	Screw	
H863	Sleeve Nut Washer (Felt)		H919	Nut	
H864	Handlebar Support		H920	Use H822	
H865	Handlebar "U" Bolt		H921	Gear Indicator Plate	
H866	Handlebar Complete		H929	Front Mudguard	
H867	Handlebar Bend		H932	Handlebar Bend	
H868	Front Mudguard		H933	Handlebar Complete	
H871	Front Mudguard Stay, L.H.		H934	Handlebar Bend	
H872	Front Mudguard Stay, R.H.		H934A	Handlebar Bend	
H873	Centre Bridge Clip		H936	Use H1020	
H874	Front Number Plate		H937	Indicator Spindle Assembly	
H875	Adjustment Screw Spring		H939	Indicator Finger Assembly	
H876	Headlamp Adjustment Screw		H940	Use Amal 70/510	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
H941	Pinch Bolt		H1020	Gear Indicator Rack	
H942	Use H1229		H1034	Use H1230	
H948	Use H1043		H1035	Front Fork Stanchion	
H955	Use H995		H1037	Front Fork Spring... ..	
H956	Front Fork Assembly		H1040	L.H. Outer Member	
H957	Front Fork Assembly		H1042	Oil Drain Stud	
H961	Grommet		H1043	R.H. Outer Member	
H962	Rubber Gaiter		H1044	Oil Seal	
H963	L.H. Outer Cover... ..		H1045	Dust Excluder Sleeve Nut	
H964	R.H. Outer Cover		H1046	Outer Member Bush (Top)	
H970	Crown and Stem		H1047	Restrictor Rod	
H972	Handlebar Bend		H1048	Stud... ..	
H975	Pinch Bolt Nut		H1051	Fork Upper Tube	
H976	Nut		H1053	Bottom Lug Cap	
H978	Bottom Stay Assembly		H1058	Stop Nut	
H984	Top Cone (Metropolitan Police)		H1060	Spring Washer	
H985	Top Cup (Metropolitan Police)		H1061	Restrictor Rod	
H986	Bottom Cone (Metropolitan Police)		H1062	Sealing Washer	
H987	Bottom Cup (Metropolitan Police)		H1063	Valve Body Screw	
H988	Front Fork Assembly		H1064	Cap Nut Assembly	
H992	Horn Grille		H1064A	Cap Nut Assembly (Chrome)	
H993	Screw		H1065	Stanchion Sleeve Nut	
H994	Front Fork Assembly		H1065A	Stanchion Sleeve Nut (Chrome)	
H995	Front Fork Assembly		H1066	Sleeve Nut Pin	
H996	Front Fork Assembly		H1069	L.H. Outer Member	
H999	Use 91/322		H1070	Lug Cap Bolt	
H1000	Use 70/510		H1071	Drain Plug	
H1001	Use H1018		H1072	R.H. Outer Member	
H1003	Handlebar Bend		H1075	R.H. Outer Member	
H1004	Handlebar Assembly		H1082	Handlebar Bend (Racing)... ..	
H1005	Handlebar Assembly		H1083	Bracket Assembly	
H1006	Handlebar Assembly		H1086	Bracket Bolt	
H1009	Handlebar Bend		H1087	Metalastik Bush	
H1010	Handlebar Bend		H1089	Front Brake Tube... ..	
H1011	Use H1014		H1090	Abutment Bolt	
H1012	Pressure Tube Valve Body		H1093	Use H1231	
H1014	Handlebar Bend		H1095	Front Fork Spring... ..	
H1015	Distance Piece		H1096	Pressure Tube Valve Body	
H1018	Top Cone and Dust Cover		H1097	Front Mudguard	
H1019	Gear Indicator Spring		H1100	Front Stand	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
H1101	Front Fork Assembly		H1167	Use H1474	
H1102	Front Fork Assembly		H1168	Oil Seal	
H1103	Front Fork Assembly		H1171	Front Brake Cable Clip	
H1104	Front Fork Assembly		H1172	Bracket	
H1105	Front Fork Assembly		H1173	Front Fork Assembly	
H1106	Pressure Tube Assembly		H1174	Front Fork Assembly	
H1107	Pressure Tube Assembly		H1176	Handlebar Assembly	
H1108	Fork Top Lug		H1179	Handlebar Bend	
H1110	Bottom Cone		H1181	Bridge Assembly	
H1111	Steering Damper Anchor Plate		H1184	Front Mudguard Blade	
H1111A	Steering Damper Anchor Plate		H1190	Stanchion	
H1112	Crown and Stem		H1191	Front Fork Spring... ..	
H1117	L.H. Outer Member		H1194	Use H1474	
H1118	R.H. Outer Member		H1195	Use H1474	
H1123	Fork Stanchion		H1196	Dust Excluder Shroud	
H1124	Restrictor Rod Assembly		H1197	Front Fork Assembly	
H1125	Restrictor Rod Lower Tube		H1198	Front Fork Assembly	
H1126	Inner Sleeve		H1199	Use H1198	
H1127	Front Fork Spring... ..		H1200	Fork Assembly	
H1130	Top and Bottom Cups		H1201	L.H. Outer Cover (Lower)	
H1131	Handlebar Bend		H1202	R.H. Outer Cover (Lower)	
H1132	Use H1233		H1203	L.H. Outer Cover Assembly	
H1133	Fork Top Lug		H1204	R.H. Outer Cover Assembly	
H1137	Sleeve Nut		H1205	R.H. Outer Cover (Upper)	
H1138	Use H1190		H1206	Nacelle Top Unit	
H1140	Top Cone and Dust Cover		H1207	Nacelle Top Unit	
H1141	Sleeve Nut		H1208	Nacelle Top Unit	
H1142	Steering Damper Knob		H1211	Front Mudguard	
H1144	Fork Top Unit		H1216	Front Mudguard	
H1145	L.H. Outer Cover... ..		H1217	Front Mudguard Support Bridge... ..	
H1146	R.H. Outer Cover		H1218	Front Mudguard Stay Assembly	
H1149	L.H. Outer Member		H1221	Backing Ring	
H1150	R.H. Outer Member		H1222	Fork Gaiter	
H1151	Dust Excluder Sleeve Nut		H1229	Fork Crown and Stem	
H1152	Felt Washer		H1230	Front Fork Assembly	
H1153	Fork Spring Top Stud		H1231	Fork Crown and Stem	
H1154	Top Stud Distance Piece		H1232	Front Fork Assembly	
H1156	Front Mudguard		H1233	Fork Crown and Stem	
H1157	Front Stay Assembly		H1247	Handlebar Bend	
H1161	Mudguard Support Bridge		H1256	Use H1327 Home H1592 Export	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
H1257	Fork Crown and Stem		H1322	Fork Bottom Leg, Sidecar	
H1260	Sleeve Nut		H1323	Fork Bottom Leg, Sidecar	
H1261	L.H. Outer Cover Assembly		H1325	Distance Spacer, Sidecar	
H1262	R.H. Outer Cover Assembly		H1326	Distance Spacer Stud, Sidecar	
H1264	Speedometer Bracket		H1327	Fork Assembly (U.S.A.)	
H1266	Use 1-H934A & 4-H1245		H1328	Use 1-H1283 & 1-H1110	
H1269	Front Mudguard (Enamelled)		H1329	Pinch Bolt Nut	
H1269	Front Mudguard (Polished)		H1331	Mudguard Stay	
H1270	Support Bridge		H1332	Tachometer Bracket	
H1271	Front Mudguard Stay (Short)		H1334	Bottom Bracket	
H1273	Front Mudguard Stay (Long)		H1335	Pinch Bolt Nut	
H1278	Nacelle Top Unit		H1337	Use H1553	
H1280	Stanchion		H1339	Use 1-H1527 & 4-H1425	
H1281	Fork Cover		H1340	Bolt	
H1282	Pinch Bolt		H1383	Bearing Nut	
H1283	Crown and Stem		H1399	Number Plate Bracket	
H1285	Steering Damper Plate		H1406	Pinch Bolt	
H1286	Adjuster Sleeve Pin		H1408	Crown and Stem (War Office)	
H1287	Top Head Clip		H1409	Dust Excluder Sleeve Assembly (War Office)	
H1288	Outer Cover (D.S.)		H1411	Fork Assembly (War Office)	
H1289	Outer Cover (T.S.)		H1413	Ammeter Blanking Disc	
H1290	Bottom Unit		H1419	Front Mudguard	
H1291	Bottom Unit		H1420	Horn Bracket	
H1292	Solo Main Spring		H1421	Top Unit Grommet	
H1294	Front Mudguard Blade		H1423	Handlebar Assembly	
H1295	Mudguard Support Bridge		H1425	Handlebar Sleeve	
H1298	Top Unit		H1426	Support Bridge	
H1299	Stanchion		H1428	Front Mudguard (Enamelled)	
H1300	Solo Main Spring		H1428	Front Mudguard (Polished)	
H1301	Sidecar Main Spring		H1429	Horn Bracket	
H1303	Washer		H1434	Main Spring	
H1304	Horn Bracket		H1435	Number Plate	
H1305	Sidecar Main Spring		H1436	Handlebar Bend	
H1306	Tachometer Mounting Bracket		H1437	Handlebar Bend Braced	
H1309	Tachometer Bracket		H1439	Use H1578	
H1310	Front Fork Assembly		H1442	Front Mudguard	
H1311	Front Fork Assembly		H1444	Front Mudguard Stay	
H1316	Mounting Bracket Assembly		H1445	Spacer	
H1317	Bracket Top Lug		H1446	Nacelle Top Unit	
H1321	Nacelle Top Unit				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
H1447	Nacelle Top Unit		H1551	Front Mudguard (Polished) ...	
H1461	Oil Seal		H1557	Front Mudguard (U.S.A.) ...	
H1463	Anchor Plate (M/Police)		H1560	Outer Cover (U.S.A.)	
H1466	Clutch Cable Grommet		H1561	Fork Assembly (U.S.A.)	
H1467	Mudguard Stay Bolt (M/Police) ...		H1567	Fork Assembly (U.S.A.)	
H1468	Speedo Cover Assembly		H1570	Fork Assembly (U.S.A.)	
H1472	Fork Assembly		H1572	Fork Assembly (U.S.A.)	
H1473	Main Solo Spring		H1577	Crown and Stem	
H1474	Dust Excluder Sleeve		H1578	Fork Assembly	
H1476	Member, Inner Sleeve		H1580	Handlebar Clamp Rubber (U.S.A.)	
H1478	Front Mudguard Blade		H1581	Clamp Rubber Bush (U.S.A.) ...	
H1479	Front Mudguard Stay		H1583	Use Amal 91/350	
H1481	Front Mudguard Support Bridge		H1592	Fork Assembly	
H1482	Front Stand		H1593	Speedo Bracket	
H1484	Handlebar Bend		H1594	Speedo Fixing Nut	
H1499	Restrictor		H1595	Stanchion	
H1500	Oil Seal		H1596	Speed/Tacho Mounting Bracket...	
H1507	Stanchion (Police)		H1604	Handlebar Bend	
H1510	Fork Gaiter (U.S.A.)		H1605	Instrument Cover	
H1511	Handlebar Bend (U.S.A.)		H1608	Handlebar Bend	
H1518	Handlebar Bend (U.S.A.)		H1610	Inner Sleeve	
H1519	Handlebar Bend (U.S.A.)		H1616	Windscreen Mounting Bush ...	
H1519A	Handlebar Bend		H1618	Rubber Bush	
H1523	Handlebar Clamp		H1645	Fork Gaiter	
H1524	Tacho Mounting Bracket		H1646	Outer Cover	
H1527	Top Lug Bush		H1647	Outer Cover	
H1528A	Top Lug Assembly		H1649	Fork Stanchion	
H1529	Clamp Bolt Washer		H1650	Lower Member	
H1530	Cut Out Bottom Bracket		H1651	Lower Member	
H1531	Dome Nut		H1653	Inner Sleeve	
H1532	Fork Assembly Complete		H1654	Lower Cover Tube	
H1533	Fork Assembly (J.O.M.O.)		H1656	Spring Support	
H1534	Fork Assembly		H1657	Spring Abutment	
H1535	Fork Assembly		H1658	Top Cap	
H1538	Support Bridge		H1659	Top Cap	
H1540	Support Bridge		H1660	Main Spring (Solo)	
H1543	Fork Assembly Complete		H1661	Upper Cover Tube	
H1546	Front Mudguard (U.S.A.)		H1665	Crown and Stem	
H1548	Front Mudguard (U.S.A.)		H1667	Distance Collar	
H1551	Front Mudguard (Enamelled) ...		H1668	Speedo Bracket	

**MASTER SPARES****PRICE LIST**

<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>	<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>
H1669	Cut-Out Bottom Cup				
H1670	Bottom Cup Clip				
H1672	Handlebar Bend				
H1675	Front Mudguard				
H1677	Front Mudguard				
H1678	Front Mudguard Stay				
H1681	Front Mudguard Stay				
H1683	Front Mudguard Support Bridge				
H1685	Front Mudguard Bracket				
H1687	Front Mudguard (Polished)				
H1688	Front Mudguard Bracket				
H1689	Front Mudguard				
H1691	Front Mudguard				
H1694	Handlebar Bend				
H1695	Fork Stanchion				
H1696	Outer Cover				
H1697	Main Spring (Sidecar)				
H1698	Speedo Cable Bracket				
H1701	Speedo Sleeve Nut				
H1702	Speedo Distance Piece				
H1707	Oil Restrictor Rod				
H1708	Eye Bolt Washer				
H1714	Fork Assembly				
H1715	Fork Assembly				
H1717	Fork Assembly				
H1721	Fork Assembly				
H1727	Fork Assembly				
H1728	Fork Assembly				
H1729	Fork Assembly				
H1745	Cover Tube Washer				
H1756	Felt Washer				
H1758	Restrictor Tube Assembly				
H1761	Pressure Tube				
H1762	Top Cap				
H1763	Top Cap				
H1764	Restrictor Cup				
H1781	Top Unit				


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
KA50	Use D360		PA60	Double Box Spanner	
KC20	Mainshaft and Gearshaft Key ...		PCE102F	Drain Plug	
KF365	Washer		PF204	Mudguard Clip	
KW194	Lubricator		PCW73A	Spring Washer	
MF119-20	Connection with Ferrule... ..		PO172A	Nut	
NA14A	Use D258		PT104B	Drain Plug Washer	
NA43	Carburettor Washer		PT108B	Clutch Rod Bush	
NA43A	Washer		S1-4	Head Clip Bolt Nut	
NA48	Washer		S1-5	Nut	
NA55	Spanner		S1-30	Nut	
NA64J	Use F3238		S1-40	Crank Cotter Nut	
NA65	Use D362		S1-51	Crankcase Stud Nut	
NA66	Spanner		S1-52	Nut	
NE507	Plug Washer		S4-9	Nut	
NF658	Rivet		S4-13	Nut	
NF704	Footrest Rubber		S23-37	Rear Chainguard Bolt	
NF761	Pillion Seat		S23-42	Fixing Plate Screw	
NS191	Throttle Wire Nipple		S25-1	Washer	
NS362	Nut		S25-2	Head Clip Bolt Washer	
NS372	Adjusting Nut		S25-3	Anchor Plate Bolt Washer	
NT63	Use 1-E1540, 1-F879		S25-6	Brake Cam Washer	
NT261	Camplate Roller		S25-8	Footrest Plain Washer	
NT288	Cork Insert		S25-13	Washer	
NT297	Ratchet Nut		S25-27	Plain Washer	
NT298	Use T732		S25-43	Crank Cotter Washer	
NT316	Footrest Dowel		S25-71	Pivot Bolt Plain Washer	
NT367	Filler Plug		S26-1	Washer	
NT376	Filler Plug Washer		S26-2	Exhaust Valve Lifter Spring Washer	
NW100	Lubricator		S26-3	Stud Washer	
NW125C	Spoke and Nipple... ..		S26-16	Spring Washer	
NW125XC	Spoke and Nipple... ..		S35-7	Mainshaft Bearing	
NW225	Backing Ring		S46-15	Drain Plug	
NW234	Use W1095		S52-1	Crank Cotter	
NW235A	Use W386		S63-1	Petrol Feed Pipe Nut	
NW243/AM2	Use NW243A/AM2		S66-1	Clutch Centre Key	
NW243/MZ41	Brake Linings		S70-3	Steel Ball Bearings	
NW243A/AM2	Brake Lining		S70-4	Steel Ball Bearings	
NW258	Torque Link Bolt		S70-7	Steel Ball Bearings	
PA55	Screwdriver		S79-2	Spoke Nipple	
PA56	Combination Spanner		SCZ45	Washer	
PA57	Spanner				

T18 TO T427



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T18	Layshaft Cover Disc		T394	Clutch Roller	
T23	Axle Outer Bush		T395	Gear Indicator Finger	
T24A	Axle Shaft		T396	Gear Indicator Quadrant... ..	
T25A	Kick Starter Quadrant		T397	Gear Operating Quadrant	
T29	Use T1270		T398	Use T1194	
T29/30	Use T1270		T399	Use T1896	
T30	Use T1270		T400	Use 1-E1564, 1-E1577	
T31	Kick Starter Return Spring		T401	Peg	
T44	Plunger		T401A	Internal Lever Securing Bolt	
T45	Quadrant Stop		T402	Clutch Operating Arm	
T47	Anchor Peg		T404	Footchange Return Spring	
T57	Footchange Spindle Bush... ..		T405	Plunger Spring	
T87	Distance Piece		T406	Plunger	
T91	Spring		T407	Guide Plate	
T95	Use E573		T408/9	Plunger Quadrant Assembly	
T111	Kick Starter Pedal Nut		T408/1540	Plunger Quadrant Assembly	
T112	Spring Washer		T410	Gearbox Inner Cover	
T148A	Rear Chainguard (Upper)		T411	Gearbox Outer Cover	
T148B	Rear Chainguard (Upper)		T412	Footchange Spindle Bush... ..	
T177A	Rivet		T413	Clutch Lever Adjusting Pin	
T200	Distance Piece		T414	Cork Clutch Plate	
T224	Gear Indicator Finger Nut		T414	Cork Clutch Plate (Service)	
T260	Mainshaft Gear Selector Fork		T414/762	Ferodo Clutch Plate	
T260B	Mainshaft Gear Selector Fork		T415	Use T1363	
T261	Layshaft Gear Selector Fork		T416CTE	Use T938	
T264A	Use T264B		T416ACTE	Use T937	
T264B	Gearbox Shell		T416/428	Use T940	
T275	Use T887		T416A/428	Use T939	
T278A	Use T717		T417	Clutch Centre	
T280	Mainshaft Bearing Circlip		T417A	Clutch Centre	
T290	Layshaft Bush		T418	Clutch Hub	
T291	Gear Selector Fork Rod		T419	Use T986	
T323A	Gearbox Outer Cover Stud		T420	Washer	
T341	Camplate Bush		T421	Mainshaft Nut	
T361	Plate Securing Screw		T422	Clutch Pressure Plate Button	
T362	Axle Inner Bush		T423	Clutch Spring Pin	
T371	Use T500		T423A	Clutch Spring Pin	
T372	Camplate Plunger Bush		T424	Clutch Spring Pin	
T373	Camplate Plunger Spring		T425	Clutch Spring Cup	
T376	Primary Chain		T427	Clutch Spring Nut	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T427S	Clutch Spring Nut (Steel) ...		T484	Use T1381	
T429	Clutch Spring		T487	Clutch Lever	
T430	Pin		T488/28	Use T1338/1250	
T431	Layshaft Low Gear Bush ...		T493	Use D208/17	
T432	Layshaft Distance Tube ...		T495	Rubber Cap	
T433	Layshaft		T496	Rear Chain Oiler Adjuster ...	
T434	Layshaft High Gear		T497	Rear Chain Oiler Adjuster Spring	
T435	Layshaft 3rd Gear... ..		T500	Gear Selector Camplate	
T436	Layshaft 2nd Gear... ..		T501	Use T44	
T437	Layshaft Low Gear		T503	Chaincase Gasket	
T438	Layshaft High Gear Bush ...		T504	Chaincase Gasket	
T440	Locknut		T505	Washer	
T441	Mainshaft and Low Gear ...		T508C	Layshaft 3rd Gear	
T442	Mainshaft 2nd Gear		T509C	Mainshaft 2nd Gear	
T443	Mainshaft 3rd Gear		T510C	Layshaft Low Gear	
T444	Use 1-T726 & 1-T727		T511C	Mainshaft 3rd Gear	
T445	High Gear Bearing Dust Cover ...		T512C	Layshaft High Gear	
T446A	(2 off) Use 1-T920A		T513C	Mainshaft High Gear	
T448	High Gear Bearing		T514C	Layshaft 2nd Gear... ..	
T449	Footchange Pedal Rubber ...		T515C	Use T1177	
T450	Use W932		T516	Use T200	
T451	Kick Starter Crank		T524	Washer	
T452	Gearbox Outer Cover Screw ...		T530	Front Wheel L.H. Bearing ...	
T453	Adjuster Locknut		T532	Dust Cap Circlip	
T454	Guide Plate Stud		T665	L.H. Bearing	
T455	Use T1552		T667	Screw	
T455A	Use T1551		T714	Blanking Plug Washer	
T455B	Clutch Operating Rod		T717	Clamp Plate	
T456	Camplate Bolt		T725	Chaincase Inner Cover	
T461	Clamp Plate Bolt Nut		T726	Mainshaft High Gear	
T465	Use T895		T727	Mainshaft 2nd Gear	
T466	Use T898		T730	Pinion	
T467	Use T893		T731	Ratchet	
T468	Use T896		T732	Lock Washer	
T471	Use T1815/18		T741	Clutch Spring	
T471A	Use T1815/18		T750	Speedometer Gearbox Assembly	
T472	Bearing Ring		T752	Pinion	
T478A	Outer Primary Chaincase Cover...		T753	Gear Wheel	
T480A	Outer Primary Chaincase Cover...		T756	Screw	
T483	Use T1030		T762	Ferodo Inserts	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T766	Upper Chainguard		T939	Housing and Sprocket (3 Plate) ...	
T810	Speedo Drive Gearbox		T940	Housing and Sprocket (4 Plate) ...	
T825	Thrust Washer		T946	Bearing Oil Seal	
T872	Clutch Centre (5 Plate)		T948	Sealing Washer	
T885A	Use T1029		T955	Mainshaft 2nd Gear (C.R.) ...	
T887	Gearbox Adjuster Assembly ...		T956	Use 1-T1177, 1-T1179	
T889	Inner Primary Chain Cover ...		T957	Use T1383	
T890	Outer Primary Chain Cover ...		T959	Use T960	
T891	Rear Chainguard		T960	Layshaft and High Gear	
T891A	Rear Chainguard		T961	Layshaft Low Gear (C.R.) ...	
T893	Mainshaft 2nd Gear		T963	Layshaft 2nd Gear (C.R.) ...	
T894	Mainshaft 3rd Gear		T964	Layshaft 3rd Gear (C.R.) ...	
T895	Mainshaft High Gear		T968	Mainshaft 2nd Gear	
T896	Layshaft 2nd Gear... ..		T969	Use T1384	
T897	Layshaft Gear		T970	Use T1384	
T898	Layshaft High Gear		T971	Layshaft and High Gear (W.R.) ...	
T909	Gearbox Casing		T973	Layshaft Pinion (W.R.)	
T911	Use T1367		T974	Layshaft 2nd Gear (W.R.) ...	
T912	Layshaft Bush Peg		T975	Speedo Driven Gear (W.R.) ...	
T913	Layshaft Selector Fork		T980	Use T1336	
T914	Mainshaft and Low Gear		T981	Layshaft Bush Disc	
T916	Mainshaft 2nd Gear		T983	Gearbox Inner Cover Plug ...	
T917	Mainshaft 3rd Gear		T984	Use T1548	
T918	Use T1382		T985	Use T1549	
T920	Use T1370		T986	Pressure Plate Assembly ...	
T920A	Mainshaft High Gear Bush ...		T988	Stop Switch Clip	
T921	Use T1063		T989	Gearbox Inner Cover Dowel ...	
T924	Layshaft Speedo Pinion		T990	Inspection Cover Joint Washer ...	
T925	Speedo Pinion Peg		T991	Inspection Cover	
T926	Layshaft Low Gear		T992	Inspection Cover Screw ...	
T928	Layshaft Low Gear Bush		T993	Rear Chainguard Assembly ...	
T929	Use CP139		T995	Use T1177	
T930	Layshaft 3rd Gear		T997	Use T1564	
T931	Use T1217		T998	Clutch Spring Cup	
T933	Speedo Gear Bush		T999	Clutch Spring	
T934	Speedo Driven Gear (Standard Ratio)		T1003	Use T1548	
T935	Gearbox Outer Cover		T1017	Nut	
T937	Clutch Complete (3 Plate) ...		T1027	Use T1203	
T938	Clutch Complete (4 Plate) ...		T1028	Use T1578	
			T1029	Chaincase Inner Cover	

T1030 TO T1149

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1030	Chaincase Inner Cover		T1094	Layshaft 3rd Gear... ..	
T1031	Use T1381		T1095	Layshaft Low Gear	
T1033	Use T1360		T1097	Layshaft Low Gear Bush	
T1034	Use T1548		T1098	Selector Fork	
T1037	Clutch Centre (4 Plate)		T1102	Selector Fork Spindle	
T1038	Clutch Centre (5 Plate)		T1103	Use T1673	
T1039	Inner Plate		T1107	Use T1278	
T1040	Countersunk Screw		T1108	Use T1184	
T1041	Splined Hub		T1109	Footchange Return Spring	
T1043	Use T1473		T1110	Gearbox Filler Plug	
T1044	Outer Plate		T1111	Use T1112	
T1045	Clamping Washer... ..		T1112	Gearbox Drain Plug	
T1046	Tab Washer		T1116	Use T1279	
T1047	Hexagon Nut		T1118	Kick Starter Spindle Bush	
T1055	Inner Chaincase Cover		T1119	Mainshaft Clutch Key	
T1056	Outer Chaincase Cover		T1120	Use T1365	
T1057	Chaincase Cover Gasket		T1122	Use CP192	
T1058	Hollow Dowel		T1123	Use CP192	
T1059	Cable Sleeve		T1124	Ball Bearing	
T1063	Layshaft and High Gear		T1127	Cork Insert, Clutch Sprocket	
T1065	Layshaft 2nd Gear... ..		T1128	Clutch Backing Plate	
T1066	Camplate Assembly		T1129	Clutch Centre	
T1069	Spindle Complete		T1130	Use T1350/1364	
T1070	Mainshaft L.H. Ball Bearing		T1131	Clutch Spider	
T1071	L.H. Bearing Felt Oil Seal		T1132	Clutch Drive Rubber	
T1072	L.H. Bearing Seal Retaining Plate		T1133	Use T1318	
T1073	Layshaft Bearing (Plain)		T1134	Use T1350/1364	
T1074	Use T1269		T1136	Use T1348	
T1075	Camplate Locating Spring		T1137	Use T1315	
T1076	Camplate Locating Spring Screw		T1138	Clutch Plate (Corked)	
T1077	Return Spring Anchor Pin		T1138	Clutch Plate (Corked) Service	
T1078	Mainshaft High Gear		T1140	Clutch Operating Rod	
T1080	Mainshaft High Gear Bush		T1141	Use CP151	
T1081	Gearbox Sprocket		T1143	Clutch Pressure Plate Button	
T1082	Gearbox Sprocket Nut		T1144	Clutch Spring Cup	
T1083	Use T1588		T1145	Clutch Spring	
T1085	Clutch Rod Mainshaft Bush		T1146	Clutch Spring Nut	
T1089	Mainshaft 2nd Gear		T1147	Gearbox Mainshaft Bush	
T1090	Mainshaft 2nd Gear Thrust Ring		T1148	Inner Cover Plate Washer	
T1091	Use T1591		T1149	Inner Cover Plate	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1150	Inner Cover Plate Screw ...		T1216	Use T1336	
T1151	Use T1233		T1217	Gearbox Inner Cover ...	
T1152	Use T1233		T1220	Use T1763	
T1153	Use T1233		T1221	Clutch to Mainshaft Nut ...	
T1154	Operating Lever Fulcrum Pin ...		T1222	Kick Starter Cotter ...	
T1155	Operating Lever Cup ...		T1223	Use T1365	
T1157	Kick Starter Stop Plate ...		T1224	Use T1145	
T1158	Kick Starter Stop Plate Screw ...		T1225	Use T1578	
T1159	Use T1281		T1226	Primary C/C Joint Washer ...	
T1160	Use T1282		T1227	Cap (Blanking Off Speedo Drive)	
T1161	Kick Starter Plunger Spring ...		T1228	Footchange Pedal ...	
T1162	Kick Starter Return Spring ...		T1229	Use T1270	
T1163	Kick Starter Spring Anchor Plate		T1229/30	Use T1270	
T1164	Footchange Pedal ...		T1231	Use T1600	
T1165	Use T1679		T1232	Use T1651	
T1166	Use T1680		T1233	Operating Lever ...	
T1167	Kick Starter Crank Spring ...		T1234	Use T1233	
T1168	Kick Starter Crank Pedal ...		T1235	Operating Lever ...	
T1169	Kick Starter Crank Bolt ...		T1236	Fulcrum Pin ...	
T1170	Camplate Rod ...		T1237	Use T1651	
T1177	Mainshaft and Low Gear ...		T1238	Alternator Lead Grommet ...	
T1179	Mainshaft 3rd Gear ...		T1245	Use T1328	
T1180	Washer ...		T1246	Use T1329	
T1181	Footchange Spindle Felt Washer		T1247	Use T1330	
T1182	Clutch to Mainshaft Washer ...		T1248	Camplate Index Spring ...	
T1184	Footchange Gear Selector Plunger		T1249	Camplate Supplementary Spring...	
T1185	Use T1472		T1250/51	Use T1338/1250	
T1186	Inner Chaincase ...		T1252	Clutch Rods ...	
T1189	Joint Washer ...		T1253	Clutch Pressure Plate ...	
T1190	Outer Chaincase ...		T1256	Clutch Pressure Plate Adjuster ...	
T1191	Clutch Plate (Blank) (Nett) ...		T1257	Joint Washer ...	
T1194	Footchange Pedal ...		T1259	Use T1673	
T1196	Use T1328		T1260	Use T1282	
T1198	Use T1329		T1262	Use T1278	
T1200	Use T1330		T1264	Sprocket Bearing Ring ...	
T1201	Gearbox Casing ...		T1266	Use T1365	
T1202	Use T1264		T1267	Use T1365	
T1203	Oil Tank Vent Pipe ...		T1268	Use T1365	
T1204	Gearbox Sprocket 18T ...		T1269	Gearbox Layshaft Disc ...	
T1205	Use T1249		T1270	Folding Kick Starter Assembly ...	

T1271 TO T1411

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1271	Folding Kick Starter Crank ...		T1343	Clutch Housing Assembly ...	
T1272	Folding Kick Starter Pedal ...		T1343	Clutch Housing Assy. (Service) ...	
T1273	Pivot Bolt		T1345	Use T1667	
T1274	Kick Starter Pawl Retaining Disc		T1346	Clutch Spider	
T1275	Outer Primary Chain Cover ...		T1347	Tab Washer	
T1277	Gearchange Quadrant Peg ...		T1348	Clutch Nut	
T1278	Plunger Spring		T1350	Clutch Stud	
T1279	Kick Starter Spindle Assembly ...		T1350/1364	Pin and Cup	
T1281	Kick Starter Pawl		T1360	Clutch Complete (4 Plate) ...	
T1282	Kick Starter Pawl Plunger ...		T1361	Use T1548	
T1283	Use T1365		T1362	Clutch Plate	
T1284	Use 1-T1310, 1-T1264 & 16-T1124		T1362	Clutch Plate (Service)	
T1285	Use T1310		T1363	Clutch Plate	
T1292	Use T1314		T1364	Clutch Cup	
T1293	Use T1364		T1365	Clutch Assembly	
T1294	Driving Plate Assembly		T1367	Layshaft Bush	
T1294	Driving Plate Assembly (Service)		T1368	Washer	
T1296	Clutch Plate Segment (Export only) (per 100)		T1369	Gearbox Sprocket (16T)	
T1306	Use T1346		T1370	Mainshaft High Gear Bush ...	
T1307	Use 1-T1217, 1-T396 & 2-D208/17		T1381	Chaincase Oil Retainer Plate ...	
T1309	Use 1-T1310, 1-T1264 & 16-T1124		T1382	High Gear Assembly (S.R.) ...	
T1310	Clutch Housing Assembly ...		T1383	High Gear Assembly (C.R.) ...	
T1310	Clutch Housing Assy. (Service) ...		T1384	High Gear Assembly (W.R.) ...	
T1312	Use T1365		T1385	Footchange Return Spring Housing	
T1313	Use T1667		T1386	Clutch Hub	
T1314	Clutch Centre		T1388	Outer Cover Stud (Long) ...	
T1315	Driven Plate		T1390	Kick Starter Stop Plate Screw ...	
T1318	Rebound Rubber		T1391	Gearbox Mainshaft Bush	
T1328	Gearbox (Standard Ratio) ...		T1393	Layshaft Low Gear Bush	
T1329	Gearbox (Close Ratio)		T1394	Return Spring Housing Cover ...	
T1330	Gearbox (Wide Ratio)		T1395	Footchange Spindle Bush (Outer)	
T1331	Use T1328		T1396	Gear Selector Plunger	
T1332	Use T1329		T1399	Gearbox Outer Cover Stud ...	
T1333	Use T1330		T1401	Outer Cover Screw (Short) ...	
T1336	Gearbox (Wide Ratio)		T1402	Outer Cover Screw (Long) ...	
T1338/1250	Sleeve and Spring		T1403	Mainshaft High Gear	
T1339	Gearbox Sprocket (15T)		T1405	Mainshaft High Gear Bush ...	
T1341	Clutch Complete		T1406	Mainshaft Assembly	
T1342	Use T1343		T1410	Mainshaft 2nd Gear	
			T1411	Mainshaft Low Gear Thrust Ring	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1413	Layshaft 3rd Gear		T1479	Layshaft Assembly	
T1414	Layshaft Low Gear Assembly ...		T1480	Mainshaft Selector Fork Assembly	
T1416	Gear Indicator Finger		T1481	Layshaft Selector Fork Assembly	
T1417	Gear Indicator Plate		T1483	Footchange Spindle Assembly ...	
T1418	Camplate Spindle		T1484	Use T1459	
T1422	Return Spring Anchor Plate ...		T1485	Use T1677	
T1426	Kick Starter Pawl Retaining Disc		T1486	Clutch Complete	
T1431	Kick Starter Pawl		T1488	Gearbox Sprocket 13T	
T1432	Footchange Return Spring ...		T1489	Gearbox Sprocket 14T	
T1433	Button Return Spring		T1492	Hollow Dowel	
T1434	Sprocket to Mainshaft Nut ...		T1493	Use T1666	
T1435	Footchange Pedal		T1503	Driving Service	
T1436	Gear, Selector Plunger Spring ...		T1503	Driving Plate (Service)	
T1437	Camplate Plunger Plug		T1504	Driving Plate (U.S.A.only) Nett	
T1438	Use T1678		T1509	Clutch Housing Assembly ...	
T1439	Clamp Bolt... ..		T1509	Clutch Housing Assy. (Service)	
T1440	Hollow Dowel		T1511	Bearing Ring	
T1441	Kick Starter Return Spring ...		T1512	Kick Starter Shaft Oil Seal ...	
T1442	Clutch Housing and Sprocket Assy.		T1513/16	Gearbox Sprocket 16T	
T1445	Kick Starter Spindle Assembly ...		T1513/17	Gearbox Sprocket 17T	
T1446	Kick Starter Spindle Bush ...		T1513/18	Gearbox Sprocket 18T	
T1448	Gearbox Inner Cover, R.H. ...		T1514	Mainshaft High Gear	
T1450	Gearbox Outer Cover, R.H. ...		T1515	Mainshaft High Gear Bush ...	
T1456	Clutch Operating Rod		T1525	Gearbox Assembly (S.R.) ...	
T1457	Selector Fork Spindle		T1528	Use T1525	
T1458	Use T1768		T1531	Use T1562	
T1459	Clutch Lever Shaft Assembly ...		T1532	Use 1-T1562, 1-T948 & 1-T983	
T1462	Clutch Lever Abutment		T1534	Gearbox Outer Cover	
T1464	Kick Starter Distance Piece ...		T1536	Operating Arm Assembly ...	
T1465	Clutch Cable Spring		T1538	Operating Arm Roller	
T1466	Pressure Plate Assembly		T1539	Clutch Operating Lever ...	
T1469	Mainshaft Bearing		T1541	Cover Plate Joint Washer ...	
T1471	Camplate Plunger		T1542	Cover Plate	
T1472	Drive Rubber		T1543	Neolangite Segment (Export only)	
T1473	Rebound Rubber			per 100	
T1474	Spring Anchorage Pin		T1548	Clutch Assembly (5 Plate) ...	
T1476/18	Gearbox Sprocket 18T		T1549	Clutch Sprocket and Housing ...	
T1476/19	Gearbox Sprocket 19T		T1550	Clutch Housing Band (5 Plate) ...	
T1477	Joint Washer		T1551	Clutch Operating Rod	
T1478	L.H. Bearing Oil Seal		T1552	Clutch Operating Rod	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1553	Cover Plate Screw		T1612	Gearbox Inner Casing	
T1554	Clutch Operating Lever Peg ...		T1614	Inner Cover Bearing	
T1555/13	Gearbox Sprocket		T1615	Layshaft Assembly	
T1555/14	Gearbox Sprocket		T1616	Use T1686	
T1555/15	Gearbox Sprocket		T1618	Use T1684	
T1556	Use T1381		T1622	Layshaft Low Gear	
T1558	Gearbox Sprocket 17T		T1624	Mainshaft	
T1559	Clutch Spring (4 Plate)		T1625	Use T1821	
T1560	Clutch Spring (5 Plate)		T1628	Mainshaft 2nd Gear C/R	
T1561	Gearbox Inner Cover (C.R.) ...		T1631	Layshaft 3rd Gear C/R	
T1562	Gearbox Inner Cover (S.R.) ...		T1633	Layshaft Low Gear C/R	
T1564	Footchange Lever (Heel and Toe)		T1635	Mainshaft Assembly C/R	
T1565	Mainshaft High Gear		T1636	Use T1823	
T1568	Gearbox Sprocket 19T		T1637	Gearbox Outer Cover	
T1569	Gearbox Sprocket 20T		T1638	Clutch Lever and Worm... ..	
T1570	Clutch Housing Sprocket		T1640	Clutch Lever Spoke	
T1572	Use T1594		T1641	Return Spring	
T1573	Clutch Complete (5 Plate) ...		T1642	Return Spring Cup	
T1574	Clutch Operating Rod		T1643	Use T1946	
T1578	Oil Tank Vent Pipe		T1644	Abutment	
T1579	Oil Tank Vent Pipe		T1645	Abutment Adaptor	
T1583	Gearbox Assembly, Standard Ratio		T1646	Rubber Cover	
T1584	Gearbox Assembly, Close Ratio ...		T1647	Kick Starter Lever	
T1585	Gearbox Assembly, Wide Ratio ...		T1648	Kick Starter Crank (War Office)...	
T1588	Mainshaft Cluster Assembly ...		T1649/17	Gearbox Sprocket (War Office) ...	
T1591	Layshaft Cluster Assembly		T1650	Folding Kick Starter Assembly (War Office)	
T1594	Layshaft Cluster Assembly		T1651	Outer Chaincase	
T1596	Mainshaft High Gear, Wide Ratio		T1652	Mainshaft High Gear Assembly ...	
T1599	Gearbox Filler Plug		T1654	Mainshaft Assembly	
T1600	Inner Primary Chaincase Cover ...		T1657	Layshaft Assembly	
T1601	Outer Primary Chaincase Cover...		T1659	Layshaft 3rd Gear	
T1602	Use T1728		T1660	Layshaft Low Gear	
T1603	Inner Primary Chaincase		T1666	Clutch Complete	
T1604	Index Plunger Spring		T1667	Shock Absorber Unit	
T1605	Gearbox Casing		T1668	Backing Plate	
T1606	Layshaft Bearing		T1669	Driving Cup	
T1607	Bearing Thrust Washer		T1670	Pin	
T1608	Layshaft Assembly, S/Ratio		T1671	Low Gear Assembly	
T1609	Use T1845		T1673	Gearchange Quadrant	
T1610	Layshaft Assembly, W/Ratio ...				



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1675	Keeper Plate		T1743	Use T1843	
T1676	Keeper Plate Screw		T1744	Speedo Drive Pinion (S.R.) ...	
T1677	Kickstart Assembly		T1745	Speedo Driven Gear (S.R.) ...	
T1678	Kickstart Crank		T1746	Use T1843	
T1679	Kickstart Assembly		T1747	Speedo Drive Pinion (S/Car) ...	
T1680	Kickstart Crank		T1748	Speedo Driven Gear (S/Car) ...	
T1684	Mainshaft High Gear		T1749	Gearbox Sprocket (20T)	
T1686	Layshaft Assembly		T1750	Footchange Pedal	
T1688	Inner Chaincase		T1751	Clutch Hub	
T1694	Plate (M/Police)		T1752	Clutch Spring	
T1695	Plate		T1768	Gearbox Camplate	
T1701	Oil Seal		T1769	Clutch Spring	
T1702	Pipe		T1770	Primary Cover Joint Washer ...	
T1703	Gearbox Inner Cover (S.R.) ...		T1771	Clutch Lever Ball	
T1705	Use T1986		T1773	Clutch Complete	
T1708	Clutch Lever Assembly Complete		T1776	Clutch Complete	
T1710	Clutch Lever Shaft		T1778	Inner Cover Bolt	
T1711	Clutch Lever Thrust Plate ...		T1779	Inner Cover Socket Screw ...	
T1712	Clutch Lever Spring		T1815	Gearbox Sprocket (18T)	
T1713	Clutch Lever Screw		T1816	Gearbox Sprocket (17T)	
T1714	Clutch Lever Spoke		T1817	Layshaft Assembly	
T1715	Gearbox Spoke (19T)		T1819	Mainshaft Assembly	
T1716	Clutch Complete		T1820	Speedo Drive Gear (U.S.A.) ...	
T1718	Clutch Centre		T1821	Mainshaft High Gear	
T1719	Clutch Centre		T1823	Layshaft Cluster	
T1720	Inner Retaining Plate		T1827	Use T1981	
T1721	Clutch Spider		T1828	Speedo Drive Pinion (C.R.) ...	
T1722	Clutch Drive Rubber		T1829	Speedo Driven Pinion (C.R.) ...	
T1723	Clutch Rebound Rubber		T1830	Heavy Duty Clutch Spring ...	
T1724	Outer Retaining Plate		T1832	Mainshaft 2nd Gear	
T1725	Use T1929		T1837	Mainshaft 2nd Gear	
T1727	Outer Primary Cover		T1839	Layshaft 3rd Gear	
T1728	Layshaft Assembly (W.R.) ...		T1842	Layshaft 3rd Gear	
T1734	Clutch Hub		T1843	Layshaft Assembly (S.R.) ...	
T1735	Thrust Washer		T1844	Layshaft Assembly (W.R.) ...	
T1736	Clutch Operating Rod		T1845	Layshaft Assembly (C.R.)... ..	
T1738	Joint Washer		T1846	Layshaft Assembly	
T1740	Clutch Spider		T1869	Folding Kickstarter	
T1741	Pipe		T1870	Gearbox Outer Cover	
T1742	Clutch Spring		T1871	Housing Assembly	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
T1873	Housing Bush		T1943	Plunger Peg	
T1874	Housing Spacer		T1944	Outer Cover Stud	
T1875	Housing Screw		T1945	Clutch Lever Spoke	
T1876	Housing Spacer		T1946	Connector	
T1877	Footchange Return Spring		T1947	Mainshaft High Gear	
T1878	Return Spring Bottom		T1948	Mainshaft Assembly	
T1879	Housing Cover		T1949	Layshaft Assembly	
T1880	Clutch Lever Assembly		T1950	Layshaft Low Gear	
T1885	Clutch Plate		T1955	Oil Seal Housing	
T1886	Clutch Plate Segment (per 100)		T1956	Oil Seal	
T1893	Layshaft Assembly		T1959	Mainshaft Assembly	
T1896	Gear Control Spindle		T1960	Layshaft Assembly	
T1897	Needle Roller Bearing		T1961	Layshaft Low Gear	
T1898	Footchange Pedal		T1965	Layshaft Assembly	
T1910	Mainshaft High Gear		T1970	Clutch Rod	
T1912	Mainshaft High Gear		T1971	Mainshaft Assembly	
T1914	Mainshaft High Gear		T1972	Layshaft Assembly	
T1916/17	Gearbox Sprocket (S/Car)		T1977	Cover Assembly	
T1917/18	Gearbox Sprocket (S/Car)		T1981	Kickstarter Spindle Assembly	
T1918/19	Gearbox Sprocket (Solo)... ..		T1986	Gearbox Outer Cover	
T1919/20	Gearbox Sprocket (Solo)... ..				
T1920	Blanking Plug				
T1921	Blanking Plug Washer				
T1922	Mainshaft 2nd Gear				
T1924	Clutch Complete				
T1925	Clutch Pressure Plate				
T1927	Clutch Spring Cup				
T1928	Clutch Complete				
T1929	Clutch Pressure Plate				
T1931	Clutch Spring Cup				
T1933	Clutch Complete				
T1934	Clutch Spring Cup				
T1935	Clutch Complete				
T1937	Spoke Locking Nut		TE164C	Cylinder Clip Bolt Nut	
T1938	Folding Kickstarter Assembly		TE164D	Clip Bolt 'D' Washer	
T1939	Folding Kickstarter Crank		TE164E	Clip Bolt	
T1940	Folding Kickstarter Assembly		TE246	Silencer Clip	
T1941	Folding Kickstarter Crank		TS42	Spindle Nut	
T1942	Footchange Spindle Assembly		TW5	Spoke Nipple	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
W3	Nut		W386A	Brake Cam Assembly	
W4	Adjusting Nut		W544	Front Wheel Spindle Nut	
W5	Locknut		W545	Front Wheel Spindle Washer	
W6	Collar		W571	Use W937	
W7A	Roller Bearing		W572	Use W938	
W11	Hinge Pin		W573A	Use W1260	
W12	Dust Cap		W574	Use W1260	
W56	Chain Sprocket		W576	Use W940	
W61	Spindle		W578	Front Wheel Spindle	
W62	Bolt		W579	Use W761	
W63	Lockplate		W580	Use W761	
W64	Sprocket Bolt		W581	Ball Bearing Distance Piece	
W65	Use E1612		W582	Ball Bearing Retaining Ring	
W74A	Lever		W583	Ball Bearing Dust Cap	
W76	Clutch Adjusting Sleeve Locknut		W585	Brake Anchor Plate	
W79A	Rear Wheel Rim		W588	Front Brake Shoe Fulcrum Pin	
W93	Use W1406 & W1407		W589	Use W1245	
W98	Use W861		W591	Cable Adjuster Abutment	
W103	Rocker Cover Nut		W592	Front Brake Lever Return Spring	
W106C	Rear Wheel Spoke and Nipple		W593	Fork End	
W106XC	Rear Wheel Spoke and Nipple		W597	Bearing Adjusting Locknut	
W107C	Spoke and Nipple		W605	Use W859	
W107XC	Spoke and Nipple		W609	Ball Race Assembly	
W108C	Spoke and Nipple		W610	Inner Bearing Ring	
W108XC	Spoke and Nipple		W611	Outer Bearing Ring	
W123	Return Spring		W616	Use W908	
W129	Brake Lining Rivet		W617	Use W912	
W135	Brake Shoe Return Spring		W618	Use W911	
W200	Brake Shoe Return Spring		W626	Link S/W	
W270A	Rear Wheel Rim (Chrome)		W630	Nut	
W311	Use W951		W631	Use W1336	
W328	Use W328A		W632	Use W798	
W328A	Front Brake Adjuster Sleeve		W633	Axle Shaft Collar	
W329	Use W1261		W634	Axle Shaft Anchorage Circlip	
W351	Front Wheel Rim		W635	Axle Shaft Nut	
W353C	Spoke and Nipple		W636	Use W936	
W353XC	Spoke and Nipple		W637	Use W935	
W354C	Spoke and Nipple		W638	Slipper Pad Screw... ..	
W354XC	Spoke and Nipple		W639	Axle Shaft Anchorage Lever	
W360	Wheel Rim		W640	End Plate Bolt	


MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
W641	Brake Drum Bolt		W861	Rear Wheel Hub Shell	
W642	Lockplate		W863	Use W949	
W643	Spring Wheel Rim		W866	Slipper Pad Shim (.002) ...	
W644C	Spoke and Nipple		W867	Slipper Pad Shim (.003) ...	
W646	Use W925A		W868	Use W944	
W646A	Use W925A		W869	Use W945	
W649	Use W849		W870	Front Wheel Rim	
W652	Hub Shell Assembly		W877	Use W923A	
W653	Ball Bearing (Front Hub) ...		W879	Use W925A	
W658A	Buffer		W882	Use W894	
W660C	Spoke and Nipple		W885	Use W935	
W661C	Spoke and Nipple		W886	Use W936	
W662C	Spoke and Nipple		W888	Use W950	
W663C	Spoke and Nipple		W889	Rear Wheels (less Internals) ...	
W664A	Use W941		W890	Spring (Rebound)	
W680	L.H. Bearing Circlip		W891	Use W924	
W743	Brake Pedal Spindle Nut... ..		W894	Rim	
W744	End Plate Shim		W897	Spring Wheel Bearing	
W758	Fulcrum Pin		W898	Dust Excluder Plate	
W761	Sleeve and Collar		W900	Centre Sleeve	
W762	Use 1-W1200, W1083, W1203		W901	L.H. Dust Cover	
W764	Anchor Plate Thrower		W902	Ball Race Shim	
W766	Distance Sleeve		W903	Brake Drum and Sprocket ...	
W767	Use W797		W904	Spacer Ring L.H. Bearing ...	
W779	Use W1260		W905	Spring Wheel Hub	
W780	Front Brake Cam		W906/7	Plunger Guide Box	
W784	Bolt		W908	Slipper Roller	
W794	Dust Excluder Plate		W909	End Plate	
W797	Centre Sleeve		W911	Brake Shoe (Leading)	
W798	Dust Excluder Collar		W911	Brake Shoe (Leading) Service ...	
W799	Spring		W912	Brake Shoe (Trailing)	
W836	Main Spring Outer		W912	Brake Shoe (Trailing) Service ...	
W837	Main Spring (Inner)		W915	Brake Cam	
W838	Use W890		W920A	Brake Anchor Plate	
W840	Lower Chainguard Bolt		W921A	Brake Anchor Plate	
W849	Fixing Ring		W923A	Spring Wheel	
W855	Link		W924A	Spring Wheel	
W856	Brake Cam		W925A	Spring Wheel	
W859	Brake Drum and Sprocket ...		W931	Plunger Guide Box Assembly ...	
W860	Rear Wheels (less Internals) ...		W932	Plunger Guide Box Bolt	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
W933C	Spoke and Nipple		W993	Use 1-W1128 & W1181	
W934C	Spoke and Nipple		W995	Distance Piece	
W935	Slipper Pad... ..		W996	Rear Chain Adjuster	
W936	Slipper Pad... ..		W999	Rear Chain Adjusting Collar ...	
W937	Front Wheel Complete		W1000	Rear Wheel Spindle Nut... ..	
W938	Front Wheel (less Internals) ...		W1001	Front Wheel Complete	
W940	Brake Drum		W1002	Front Wheel Rim	
W941	Locator Plate Spring		W1004	Use W1207	
W942C	Spoke and Nipple		W1006	Use W1308	
W943C	Spoke and Nipple		W1007	Rim 18"	
W944	Front Wheel Complete (TR5) ...		W1008C	Spoke and Nipple	
W945	Front Wheel (less Internals) ...		W1009C	Spoke and Nipple	
W949	Rear Wheel Complete		W1010C	Spoke and Nipple	
W950	Rear Wheel Complete		W1011C	Spoke and Nipple	
W951	Brake Drum and Sprocket ...		W1012	Use W1134	
W952C	Use W644C		W1015	End Plate	
W954	Distance Piece		W1016	Use W1085	
W960	Front Wheel (less Internals) ...		W1021/79	Retaining Ring	
W961	Hub and Brake Drum Assembly		W1022	Rear Wheel Bearing Backing Ring	
W963/5	Spoke and Nipple		W1023	Distance Ring	
W964/5	Spoke and Nipple		W1024	L.H. Bearing Distance Piece ...	
W965	Spoke Nipple		W1025	Rear Wheel Spindle	
W966	Front Wheel L.H. Dust Cap ...		W1026	Rear Wheel R.H. Nut	
W967	Front Wheel Spindle		W1027	Use W1039	
W968	Front Wheel R.H. Locking Ring		W1028	Use W1098	
W969	Front Brake Anchor Plate ...		W1033	Bearing Backing Ring	
W973	Use W1128		W1034	Taper Roller Bearing	
W976	Use 1-W1128 & 1-W1133		W1035	L.H. Bearing Dust Cap	
W977	Brake Shoe... ..		W1036	R.H. Bearing Felt Washer ...	
W977	Brake Shoe (Service)		W1037	R.H. Bearing Distance Piece ...	
W978/AM2	Brake Lining		W1038	R.H. Bearing Dust Cap	
W979	Brake Lining Rivet		W1039	Sleeve	
W980	Front Wheel Spindle Nut ...		W1040	Brake Drum and Sprocket ...	
W981	Use W1208		W1041	Brake Drum Bearing	
W984/48	Rear Wheel Sprocket 48T ...		W1042	Brake Drum Felt Washer ...	
W985	Use W1322		W1043	Brake Drum Bearing Retainer ...	
W987	Bearing Backing Ring		W1044	Bearing Retainer Circlip ...	
W988	Rear Wheel Bearing Locking Ring		W1045	Bearing Retainer Sleeve ...	
W989	Rear Wheel Spindle		W1047	Use W1121	
W990	Rear Brake Anchor Plate ...		W1050	Use W1135	

W1052 TO W1203

MASTER SPARES
PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
W1052	Brake Drum Bearing Sleeve Nut...		W1122	Washer	
W1053	Q.D. Wheel Distance Collar ...		W1123	Use W1307	
W1054	Q.D. Wheel Spindle Collar ...		W1124	Use W1310	
W1055	Spindle		W1125	Use W1099	
W1056	Use W1165		W1126C	Spoke and Nipple	
W1058	Chain Adjuster Nut		W1127C	Spoke and Nipple	
W1059	Front Brake Air Intake Gauze ...		W1128	Cam Assembly	
W1060C	Spoke and Nipple		W1130	Use W1133	
W1061	Use W1250		W1131	Use W1181	
W1063	Front Wheel Complete		W1133	Front Brake Lever	
W1065	Front Brake Anchor Plate ...		W1134	Rear Wheel Adjuster	
W1067	Use W1305		W1135	Rear Wheel Adjuster	
W1068	Use W1306		W1137	Front Hub	
W1070	Use W1162		W1138	Use W1137	
W1073	Use 1-W1255 & 1-W1262		W1140	Bearing Spacer	
W1074	Rear Wheel Sprocket 50T ...		W1141	Distance Piece	
W1075	Rear Wheel Sprocket 52T ...		W1142	Rim	
W1076	Rear Wheel Sprocket 54T ...		W1143	Grease Retainer	
W1078	Rear Wheel Sprocket 58T ...		W1158	Rear Hub	
W1079	Bearing Retaining Ring Lock Screw		W1162	Front Wheel Complete	
W1081	Use W1112		W1163	Use W1250	
W1083	Rear Brake Cam		W1165	Brake Drum	
W1085	Rear Brake Cam Lever		W1166C	Spoke and Nipple	
W1090	Brake Lever Return Spring ...		W1167C	Spoke and Nipple	
W1091	Brake Drum to Flange Sealing Ring		W1169	Blanking Plate	
W1092	Use F1747		W1170	Collar (Outer)	
W1093	Front Brake Anchor Nut ...		W1171	Front Wheel Complete	
W1095	Brake Cam		W1172	Front Wheel (less Internals) ...	
W1098	Q.D. Rear Wheel (less Internals)		W1173	Rim 16"	
W1099	Q.D. Rear Wheel (less Internals)		W1174C	Spoke and Nipple	
W1100	Rear Hub		W1175C	Spoke and Nipple	
W1104C	Spoke and Nipple		W1176	Use W1211	
W1106C	Spoke and Nipple		W1177	Use W1256	
W1107C	Spoke and Nipple		W1179	Rear Brake Anchor Plate Assembly	
W1108C	Spoke and Nipple		W1181	Rear Brake Lever	
W1109	Use 1-W1128 & 1-W1133		W1183	Distance Piece	
W1110	Use W1305		W1197	Balance Weight $\frac{3}{4}$ "	
W1112	Rear Brake Anchor Plate ...		W1198	Balance Weight 1"	
W1119	Use W1309		W1200	Anchor Plate	
W1121	Rear Brake Anchor Plate ...		W1203	Brake Cam Lever	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
W1204	Rear Wheel Complete		W1261	Front Brake Thumb Nut... ..	
W1205C	Spoke and Nipple		W1262	Spacer Ring	
W1206C	Spoke and Nipple		W1265	Rear Wheel (less Internals) ...	
W1207	Rear Wheel Complete		W1266	Rear Hub Assembly	
W1208	Rear Wheel (less Internals) ...		W1270C	Spoke and Nipple	
W1209	Use 1-W1257 & 20-W1289C		W1271C	Spoke and Nipple	
W1211	Rear Wheel Complete		W1272	Rear Wheel Rim	
W1212	Use W1256		W1273	Front Wheel (less Internals) ...	
W1213C	Spoke and Nipple		W1274	Front Wheel Rim	
W1214C	Spoke and Nipple		W1275C	Spoke and Nipple	
W1215	Use W1307		W1276	Rear Brake Drum and Sprocket...	
W1216	Use W1308		W1277	Speedo Drive Adaptor	
W1217	Rear Wheel Complete		W1278	Distance Tube	
W1219	Use 1-W1365 & 1-W1369		W1279	Speedo Drive Distance Collar ...	
W1221	Rear Brake Lever		W1280	Washer	
W1223	Rear Wheel Spindle Spacer ...		W1281	Rear Wheel Spindle	
W1224	Rear Chain Adjuster		W1282	Rear Wheel Spindle Locknut ...	
W1227	Rear Chain Adjuster End Plate		W1285	Front Wheel (less Internals) ...	
W1228	Use W1333		W1286	Hub	
W1229	Front Wheel (less Internals) ...		W1289C	Spoke and Nipple	
W1230	Front Wheel Rim		W1290	Rear Wheel (less Internals) ...	
W1231	Front Hub Assembly		W1293C	Spoke and Nipple	
W1236C	Spoke and Nipple		W1294C	Spoke and Nipple	
W1237	R.H. Bearing Dust Cover		W1295C	Spoke and Nipple	
W1238	Backing Ring		W1296	Rear Wheel Rim	
W1239	Front Wheel Spindle		W1298	Front Wheel Brake Lever	
W1241	Use W1301		W1299	Use W1333	
W1242	Fulcrum Pin		W1301	Brake Anchor Plate	
W1243	Front Brake Cam		W1302	Brake Shoe Fulcrum Pin	
W1245	Front Brake Lever		W1303	Front Wheel Complete	
W1246	Front Wheel Spindle Nut		W1304	Rear Wheel Complete	
W1247	Front Brake Drum Cover Plate		W1305	Rear Wheel Complete	
W1249	Front Wheel Complete		W1306	Rear Wheel (less Internals) ...	
W1250	Front Wheel (less Internals) ...		W1307	Rear Wheel Complete	
W1253	Front Wheel Spindle		W1308	Rear Wheel (less Internals) ...	
W1255	Front Brake Anchor Plate		W1309	Rear Wheel Complete	
W1256	Rear Wheel (less Internals) ...		W1310	Rear Wheel (Q.D.)	
W1257	Rear Hub Assembly		W1311	Front Wheel Complete	
W1259C	Spoke and Nipple		W1313	Rear Wheel Complete	
W1260	Front Hub		W1316	Brake Lever Assembly	

W1317 TO W1410

MASTER SPARES
PRICE LIST

<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>	<i>Part No.</i>	<i>Description</i>	<i>Price Each</i>
W1317	Bearing Distance Piece (Inner) ...		W1370	Front Wheel (less Internals) ...	
W1318	Bearing Distance Piece (Outer) ...		W1371	Front Wheel (less Internals) ...	
W1320	Sprocket (46T)		W1372	Rear Wheel (less Internals) ...	
W1321	Rear Wheel Complete		W1373	Front Wheel Rim	
W1322	Rear Wheel Sprocket Bolt ...		W1374	Front Wheel Rim	
W1323	Front Wheel Complete		W1375	Rear Q.D. Wheels (less Internals)	
W1324	Front Wheel (less Internals) ...		W1376	Rear Q.D. Wheel Sprocket ...	
W1325	Front Hub Assembly		W1377C	Spoke and Nipple	
W1328C	Spoke and Nipple		W1378	Rear Wheel, Rigid and Q.D. Rim	
W1330	Brake Anchor Plate		W1379	Front Wheel Complete	
W1331	Brake Lever		W1380	Front Wheel (less Internals) ...	
W1331X	Brake Lever (1959 New Pattern)		W1381C	Spoke and Nipple	
W1332	L.H. Cover Plate		W1382C	Spoke and Nipple	
W1333	Front Wheel Complete		W1383C	Spoke and Nipple	
W1334	Cover Plate		W1384	Rear Wheel Complete	
W1335	Rear Wheel Complete		W1385	Rear Wheel (less Internals) ...	
W1336	Use W1336A/AM2		W1386	Q.D. Rear Wheel Complete ...	
W1336A/AM2	Brake Lining		W1387	Q.D. Rear Wheel (less Internals)	
W1337	Use W1410		W1388	Rear Hub Assembly	
W1337	Brake Shoe (Leading) Service ...		W1390	Bearing Spindle Sleeve	
W1338	Use W1411		W1391	Bearing Spacer, Inner and Outer...	
W1338	Brake Shoe (Trailing) Service ...		W1392	Spindle Distance Collar, Inner ...	
W1340	Bearing, Front Wheel		W1393	Brake Drum Bearing Sleeve ...	
W1343	Wheel Rim (Melbourne Police)		W1395	Brake Anchor Plate	
W1344C	Spoke and Nipple (Melbourne Police)		W1397	Front and Rear Wheel Rim ...	
W1345C	Spoke and Nipple (Melbourne Police)		W1398	Front Wheel Complete	
W1346	Spoke Nipple (Melbourne Police)		W1399	Front Wheel Complete	
W1347	Spoke Retention Bolt		W1400	Rear Wheel Complete	
W1349	Front Wheel Complete		W1401	Rear Wheel Complete	
W1350	Front Wheel Spindle		W1402	Rear Wheel Complete	
W1351	Front Wheel Spindle Sleeve ...		W1403	Q.D. Rear Wheel Complete ...	
W1353	Front Brake Anchor Plate ...		W1404	Q.D. Rear Wheel Complete ...	
W1356	Rear Wheel Complete		W1405	Q.D. Rear Wheel Complete ...	
W1362	Rear Hub Assembly		W1406	Leading Brake Shoe	
W1365	Rear Brake Anchor Plate ...		W1406	Leading Brake Shoe (Service) ...	
W1367	Rear Wheel Complete		W1406/MZ41	Brake Shoe (Thruxton)	
W1368	Rear Wheel (less Internals) ...		W1407	Trailing Brake Shoe	
W1369	Collar		W1407	Trailing Brake Shoe (Service) ...	
			W1407/MZ41	Brake Shoe (Thruxton)	
			W1410	Leading Brake Shoe	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
W1410	Leading Brake Shoe (Service) ...		W1471	Rear Wheel Rim	
W1410/MZ41	Brake Shoe (ThruXton)		W1472	Rear Wheel Hub	
W1411	Trailing Brake Shoe		W1474	Grease Retaining Shim	
W1411	Trailing Brake Shoe (Service) ...		W1475	Bearing Dust Cap (T.S.)	
W1411/MZ41	Brake Shoe (ThruXton)		W1476	Speedo Drive Adaptor	
W1414/AM2	Brake Shoe Lining		W1477	Speedo Drive Distance Collar ...	
W1414/MZ41	Brake Lining (ThruXton)		W1478	Rear Wheel Spindle Nut... ..	
W1415	Pivot Pad		W1480	Grease Retaining Washer	
W1416	Rear Wheel (less Internals)		W1481	Grease Retaining Cap	
W1417	Rear Wheel Complete		W1482	Rear Wheel Complete	
W1418	Rear Wheel Complete		W1483	Rear Wheel (less Internals)	
W1420	Rear Wheel Sprocket (U.S.A.) ...		W1484	Rear Wheel Complete	
W1421	Rear Wheel Sprocket (U.S.A.) ...		W1485	Rear Wheel Complete	
W1427	Q/D Wheel (less Internals)		W1486	Rear Wheel (less Internals)	
W1429	Q/D Wheel Complete		W1487	Rear Brake Lever	
W1430	Rear Wheel Sprocket (War Office)		W1488	Rear Brake Lever Spring	
W1431	Rear Wheel Bearing (War Office)		W1491	Rear Wheel Complete	
W1432	Rear Wheel Bearing (War Office)		W1493	Front Wheel Complete (U.S.A.)	
W1433	Use W1482		W1494	Rear Wheel Complete (U.S.A.)...	
W1434	Rear Wheel (less Internals)		W1495	Self Locking Nut	
W1435	Rear Wheel Rim		W1496	Rear Wheel Complete	
W1436	Q.D. Rear Wheel Complete		W1497C	Spoke and Nipple	
W1437	Q.D. Rear Wheel (less Internals)		W1498	Brake Drum (U.S.A.)	
W1444	Front Wheel Complete		W1499/46	Rear Sprocket 46T (U.S.A.) ...	
W1445	Front Wheel (less Internals)		W1500	Rear Sprocket Bolt (U.S.A.) ...	
W1446	Rear Wheel Complete		W1505	Rear Wheel Spindle	
W1447	Rear Wheel (less Internals)		W1513	Front Wheel Rim	
W1448	Front Wheel (less Internals)		W1579	Rear Wheel Complete	
W1449	Front Wheel Rim		W1587	Rear Q/D Wheel Complete	
W1450	Front Wheel Complete				
W1451	Rear Wheel Complete				
W1452	Rear Wheel (less Internals)				
W1453C	Spoke and Nipple				
W1454	Spacer				
W1457	Brake Shoe Complete				
W1458	Brake Shoe Lining				
W1465C	Spoke and Nipple				
W1466	Rear Brake Lever				
W1469	Rear Wheel Complete				
W1470	Rear Wheel (less Internals)				

WA58 TO XS10



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
			WA58	Tool Roll	
			WE170	Drain Plug Washer	
			WE203E	Gudgeon Pin	
			WE259A	Cotter	
			WE479	Circlip	
			WF32	Front Brake Pivot Pin	
			WM1	Tyre Security Bolt	
			WM2	Use WM3	
			WM3	Tyre Security Bolt	
			WX10C	Spoke and Nipple	
			WX10XC	Spoke and Nipple	
			XA69	Clip	
			XS8	Bottom Cone	
			XS10	Bottom Cup	



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each	Part No.	Description	Price Each
		Nett			Nett
Z10	Use Z78		Z51	Seating Cutter	
Z11	Use Z78		Z52	Seating Cutter	
Z12	Compensating Bush		Z53	Use Z117	
Z13	Clutch Locating Plate		Z54	Arbor Pilot	
Z14	Crankcase Bearing Extractor Punch ..		Z55	Camshaft Bush Reamer	
Z15	Gearbox Bearing Extractor Punch ..		Z56	Arbor	
Z16	Valve Guide Extractor Punch		Z59	Rear Stand Spring Assembly Tool ..	
Z18	Sump Bolt Removal Drill Jig		Z60	Use Z121	
Z19	Extractor Stanchion Tube Plug		Z61	Shock Absorber Spanner... ..	
Z20	Piston Ring Assembly Collar		Z62	Gerbox Pivot Bolt Nut Spanner	
Z21	Piston Ring Assembly Collar		Z63	Gearbox Sprocket Nut Spanner	
Z22	Piston Ring Assembly Collar		Z65	Use Z93	
Z23	Tappet Guide Block Assy. Punch... ..		Z69	Prong Die Holder	
Z24	Front Fork Bottom Cone Punch		Z70	Gudgeon Pin Extractor	
Z25	Front Fork Bottom Cone Punch		Z71	Gudgeon Pin Extractor	
Z26	$\frac{1}{4}$ " x 20 Whit. Tap		Z72	Gudgeon Pin Extractor	
Z27	$\frac{5}{16}$ " x 18 Whit. Tap		Z73	14 mm. x 1.25 mm. Tap	
Z28	$\frac{3}{8}$ " x 16 Whit. Tap		Z76	Front Wheel Locking Disc Spanner ..	
Z29	$\frac{1}{4}$ " x 26 C.E.I. Tap		Z77	Spring Wheel Jig	
Z30	$\frac{5}{16}$ " x 26 C.E.I. Tap		Z78	Crankshaft Assy. Balance Weight ..	
Z31	$\frac{3}{8}$ " x 26 C.E.I. Tap		Z79	Timing Pinion Punch	
Z32	$\frac{1}{16}$ " x 26 C.E.I. Tap		Z80	Timing Stick	
Z33	$\frac{1}{2}$ " x 20 C.E.I. Tap		Z85	Fork Alignment Jig	
Z34	$\frac{1}{4}$ " x 26 C.E.I. Prong Die		Z88	Valve Spring Compressor (TRW) ..	
Z35	$\frac{5}{16}$ " x 26 C.E.I. Prong Die		Z89	Camwheel Extractor and Replacer	
Z36	$\frac{3}{8}$ " x 26 C.E.I. Prong Die			Tool	
Z37	$\frac{7}{16}$ " x 26 C.E.I. Prong Die		Z90	Drive Shaft Adaptor Sleeve	
Z38	$\frac{1}{2}$ " x 20 C.E.I. Prong Die		Z91 x .005"	Tappet Block Reamer	
Z39	$\frac{1}{4}$ " x 20 Whit. Prong Die		Z92	Blending Cutter	
Z40	$\frac{5}{16}$ " x 18 Whit. Prong Die		Z93	Valve Fixture Assembly Tool	
Z41	$\frac{3}{8}$ " x 16 Whit. Prong Die		Z96	Gudgeon Pin Extractor	
Z42	Intermediate Wheel Bush Reamer ..		Z98	Main Bearing Reamer	
Z43	Connecting Rod S.E. Bush Reamer ..		Z99	Reamer Pilot Bar	
Z44	Connecting Rod S.E. Bush Reamer ..		Z101	Use D541	
Z45	Timing Gear Bush Reamer		Z102	Gearbox Sprocket Locking Spanner ..	
Z46	High Gear Bush Reamer		Z103	Fork Alignment Gauge	
Z47	Camshaft Bush Reamer		Z104	Fork Combination Spanner	
Z48	Blending Cutter		Z105	Gearbox Sprocket Locknut	
Z49	Blending Cutter			Spanner	
Z50	Valve Seat Blending Cutter		Z106	Pinion Extractor (TRW)	

Z108 TO Z145



MASTER SPARES

PRICE LIST

Part No.	Description	Price Each
		Nett
Z108	Main Bearing Reamer (TRW) ... "	
Z109	Balance Weight (540 Grams.) ... "	
Z110	Rocker Spindle Rubber Seal Com- pressor ... " "	
Z111	Rocker Spindle Rubber Seal Com- pressor ... " "	
Z112	Stanley Screwdriver 401 ... "	
Z113	Screwdriver 402 ... "	
Z114	Screwdriver 403 ... "	
Z115	Engine Sprocket Extractor ... "	
Z117	45° Seating Cutter ... "	
Z118	Blending Cutter ... "	
Z120	Balance Weight ... "	
Z121	Crankshaft Pinion Extractor ... "	
Z122	Balance Weight ... "	
Z123	Use Z133	
Z124	Line Reamer Assembly ... "	
Z125	Wheel Bearing Locking Ring Spanner ... " "	
Z126	Line Reamer ... "	
Z127	Fork Stanchion Extractor ... "	
Z128	Line Reamer Arbor ... "	
Z129	Inner Cover Extractor ... "	
Z130	Piston Ring Collar ... "	
Z132	Piston Ring Collar ... "	
Z133	Compensating Sleeve ... "	
Z134	Line Reamer ... "	
	Available in undersizes—10, 20 & 30	
Z135	Distributor Gear Extractor ... "	
Z136	Balance Weight ... "	
Z137	Oil Seal Extractor... ... "	
Z138	Balance Weight ... "	
Z139	Crankshaft Pinion Extractor ... "	
Z144	Adaptor Camwheel Replacer ... "	
Z145	Adaptor Camwheel Extractor ... "	