



LUCAS

**QUALITY
EQUIPMENT AND
SPARE PARTS**

1965 - ARIEL & B.S.A.
MOTOR CYCLES AND SCOOTERS

JOSEPH LUCAS (Sales & Service) LIMITED
BIRMINGHAM 18 · ENGLAND

B.S.A. EQUIPMENT SPECIFICATIONS AND PAGE INDEX

UNIT	For details or illustrations see Page No.	B1 175 c.c. SCOOTER		B2 250 c.c. (6 volt) SCOOTER		B2S 250 c.c. (12 volt) SCOOTER	
		Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	6	—	—	SAF	047540	SAF	54021000
BATTERY	—	MLZ9E	54028263	MLZ9E	54028263	MLZ9E (2 off)	54028263
CABLE HARNESS	5	—	—	—	54934998	—	54941657
COIL IGNITION	6	—	—	MA6	45152B	MA12	45101A
CONTACT BREAKER	6	—	—	4CA	47583B	4CA	47583B
HORN	7	8H	*70166B (54068070)	8H	*70166B (54068070)	8H	*70177A (54068071)
HORN PUSH AND DIPPER	7	—	—	—	—	255A	31563D
LAMPS							
Driving (formerly Head)							
Home	10	—	—	MCF575P	58975A	MCF575P	58421D
Export, Europe, not France	10	—	—	MCF575P	58976A	MCF575P	58422D
Export, France	10	—	—	—	—	MCF575P	58423D
Export, U.S.A.	10	—	—	MCF575	59004A	MCF575	58424B
Stop Tail	10	—	—	564	53432D	564	53454D
Stop Tail, U.S.A.	10	—	—	679	53972A/B	—	—
RECTIFIER	6	—	—	2D5506	49072	2D5506	49072
STARTING MOTOR	11	—	—	—	—	M3	*26501E (54025006)
SUPPRESSOR	7	—	—	W55	78106A	W55	78106A
SWITCHES							
Ignition	7	—	—	885A	34427A/B	885A	34427A/B
Cover	7	—	—	—	+54336308	—	+54336308
Lighting	7	—	—	885A	34289A	885A	34289A
Knob	7	—	—	—	+54331482	—	+54331482
Stop Lamp	7	—	—	22B	*31437B (54033234)	22B	*31437B (54033234)
Starting Motor	7	—	—	—	—	45A	*76463A (76442)
WARNING LIGHTS	11	—	—	WL13	38198E	WL13	*38197E (38145)
REAR SUSPENSION UNIT (Serviced by Girling Ltd.)							
...	—	—	3950(SB4)	—	3950(SB4)	—	3950(SB4)

* When ordering, quote part number shown in brackets †Order separately

UNIT	For details or illustrations see Page No.	Bentam Super D7		C15 250 c.c. Star C155S80 250 c.c. Sports Star		C155 and C15T 250 c.c. Competition 350 c.c. B40ES (U.S.A.)	
		Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	6	—	—	RM18	54021025	RM19	54021039
AMMETER	6	—	—	CZU27	36084F	—	—
BATTERY	—	PUZ5E-11	24082094	MLZ9E	54028263	—	—
CABLE HARNESS	5	—	—	—	54937919	—	*54933943
CABLE HARNESS	5	—	—	—	54937920 (U.S.A.)	—	54933444
COIL IGNITION	6	—	—	MA6	45152A/B	3ET	45149B
CONTACT BREAKER	6	—	—	4CA	*47621A (47615)	4CA	47603D
CONTACT BREAKER, Later	6	—	—	4CA	47615B	—	—
HORN	7	—	—	8H	70169B/D	—	—
HORN PUSH	7	—	—	—	—	4A	†76204D
LAMPS							
Driving (formerly Head)							
Home and Export, vertical dip	8 & 9	—	—	MCF575P	58234D	MCH66	58395F
Export Europe, except France ...	8 & 9	—	—	MCF575P	58392A	—	—
Export, France	8 & 9	—	—	MCF575P	58391A	—	—
Export, U.S.A.	—	—	—	MCH56	59344A	—	—
Stop tail, number plate and reflex	10	—	—	564	53394D	564	†53432D
Stop tail, number plate and reflex, U.S.A.	10	—	—	679	53972A/B	679	†53972A/B
Tail, number plate and reflex ...	10	—	—	—	—	564	††53825A (53432)
RECTIFIER	6	—	—	2D5506	49072A	—	—
SWITCHES							
Dipper	7	—	—	—	—	PS9	††31620E
Ignition	7	—	—	885A	34427A	—	—
Cover	7	—	—	—	+54336178	—	—
Escutcheon plate	7	—	—	—	+54330576	—	—
Lighting	7	—	—	885A	34289A	PS6	††31356A/B
Knob	7	—	—	—	+54330934	—	—
Escutcheon plate	7	—	—	—	+54330576	—	—
Stop lamp	7	—	—	65A	31827A	—	—
REAR SUSPENSION UNITS (Serviced by Girling Ltd.)							
...	—	—	3983(SC3)	—	††3974(SC2-6)	—	**4545(SB4)
...	—	—	—	—	†4445(SB3)	—	††4445(SB3)

† Order separately. †† C15 only. * C155S80 only. † With lights only. ‡ Optional. †† Part of driving lamp. ** C155 only. †† C15T only.

* When ordering, quote part numbers shown in brackets.



B.S.A. EQUIPMENT SPECIFICATIONS AND PAGE INDEX

UNIT	For details or illustrations see Page No.	B40 350 c.c. 'Star' B40SS90 350 c.c. 'Sports Star'		A50 500 c.c. 'Star Twin' A65 650 c.c. 'Star Twin' 6 volt		A502CC 500 c.c. 'Cyclone Comp' A65SPH 650 c.c. 'Spitfire Hornet', U.S.A. only	
		Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	6	RM19	54021027	RM19	54021027	RM19	54021056A
AMMETER	6	CZU27	36084F	2AR	36296A	—	—
BATTERY	—	MLZ9E	54028263	MLZ9E	54028263	—	—
CABLE HARNESS	5	—	54937919	—	54932262	—	* 54935006
CABLE HARNESS	5	—	54937920 (U.S.A.)	—	54934657 (U.S.A.)	—	54934952
COIL IGNITION	6	MA6	45152A/B	MA6	45152B	3ET (L.H.) 3ET (R.H.)	45150A 45149B 5441582 47612A
CONDENSER	6	—	—	—	—	—	—
CONTACT BREAKER	6	4CA	*47621A (47615) 47615B	4CA	47583A/B	4CA	—
CONTACT BREAKER, Later	6	4CA	—	—	—	—	—
HORN	7	8H	70169B/D	8H	70169B/D	—	—
HORN	7	—	—	6H	70186A (U.S.A.)	—	—
HORN PUSH	7	—	—	—	—	4A	76204A/D
LAMPS							
Driving (formerly Head)							
Home, dip left	8 & 9	—	—	MCF700P	59140A	—	—
Home and Export, vertical dip	8 & 9	MCF575P	58234D	MCF700P	59141A	—	—
Export, Europe, except France	8 & 9	MCF575P	58392A	MCF700P	59142A	—	—
Export, France	8 & 9	MCF575P	58391A	MCF700P	59143A	—	—
Export, U.S.A.	8 & 9	MCH56	59344A	MCH61	59171A	MCH66	58395F
Stop tail, number plate and reflex	10	564	53432D	564	53432D	—	—
Stop tail, number plate and reflex, U.S.A.	10	679	53972A/B	679	53972B	679	53972B
RECTIFIER	6	2D5506	49072A	2D5506	49072A	—	—
SWITCHES							
Dipper	7	—	—	—	—	PS9	††31620A/E
Engine cut out	7	—	—	—	—	SS5	*31071D (31107)
Ignition	7	88SA	34427A	88SA	34427A	—	—
Cover	7	—	†5433617B	—	†5433617B	—	—
Escutcheon plate	7	—	†54330576	—	†54330576	—	—
Lighting	7	88SA	34289A	88SA	34289A	PS6	††31356A/B
Knob	7	—	†54330934	—	†54330934	—	—
Escutcheon plate	7	—	†54330576	—	†54330576	—	—
Stop lamp	7	6SA	31827A	6SA	34448B	6SA	34448B
REAR SUSPENSION UNITS (Served by Girling Ltd.)	—	—	‡4404(SC3) *4445(SB3)	—	4394(SB4)	—	4394(SB4)

† Order separately. ‡ With lights 'Cyclone' only. § Ignition only. †† Part of driving lamp. * When ordering, quote part number shown in brackets.
L.H. Left hand. R.H. Right hand. § B40 only. * B40SS90.

UNIT	For details or illustrations see Page No.	A65 650 c.c. 'Twin Star' Home Market A65R 'Rocket' 12 volt Home and Export		A50C 500 c.c. 'Cyclone' A50CC 500 c.c. 'Cyclone Clubman' A65L 650 c.c. 'Lightning' A65LC 650 c.c. 'Lightning Clubman', Home and Export		A502C 500 c.c. 'Cyclone Road', Export A651T 650 c.c. 'Thunderbolt Rocket', Export A652L 650 c.c. 'Lightning Rocket', Export A65R 650 c.c. 'Rocket' Home and Export	
		Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR	6	RM19	54021027	RM19	54021027	RM19	54021027
AMMETER	6	2AR	36296A	2AR	36296A	2AR	36296A
BATTERY	—	MKZ9E-2 (2 off)	54028050	MLZ9E	54028263	MLZ9E	54028263
CABLE HARNESS	5	—	54932262	—	54934657	—	54934657
COIL IGNITION	6	M12	45110A	MA6	45152B	MA6	45152B
CONTACT BREAKER	6	4CA	47583A/B	4CA	47583A/B	4CA	47583A/B
DIODE ZENER	6	ZD715	49345	—	—	—	—
HORN	7	8H 6H	70164B (A65) 70187A (A65R)	6H	70186A	6H	70186A
LAMPS							
Driving (formerly Head)							
Home, dip left	8 & 9	MCH700P	59174A (A65)	—	59355A	—	—
Home and Export, vertical dip	8 & 9	MCH61	59237A (A65R)	MCH61	—	MCH61	59357A 59137A
Stop tail, number plate and reflex	10	564	53454D	564	53432D	564	53432D
Stop tail, number plate and reflex, U.S.A.	10	—	—	679	53972A/B	679	53972A/B
RECTIFIER	6	2D5506	49072A	2D5506	49072A	2D5506	49072A
SWITCHES							
Ignition	7	88SA	34427A/B	88SA	34427A/B	88SA	34427A/B
Cover	7	—	†5433617B	—	†5433617B	—	†5433617B
Escutcheon plate	7	—	†54330576	—	†54330576	—	†54330576
Lighting	7	88SA	34289A	88SA	34289A	88SA	34289A
Knob	7	—	†54330934	—	†54330934	—	†54330934
Escutcheon plate	7	—	†54330576	—	†54330576	—	†54330576
Stop lamp	7	6SA	34448B	6SA	34448B	6SA	34448B
REAR SUSPENSION UNITS (Served by Girling Ltd.)	—	—	4394(SB4)	—	4394(SB4)	—	4394(SB4)

† Order separately. § A652L only.

ARIEL EQUIPMENT SPECIFICATIONS AND PAGE INDEX

UNIT	For details or illustrations see Page No.	200 c.c. 'Arrow' 250 c.c. 'Arrow' 250 c.c. 'Super' 'Sports Arrow'		250 c.c. 'Leader'	
		Model	Part No.	Model	Part No.
ALTERNATOR	6	RM18	54021025	RM18	54021025
AMMETER	6	CZU27	36084F	CZU27	36084F
BATTERY	—	MLZ9E	54028263	MLZ9E	54028263
CABLE HARNESS	5	—	54932231	—	54932234
COIL IGNITION	6	MA6	45152B	MA6	45152B
CONTACT BREAKER	6	4CC	425379	4CC	425379
FLASHER UNIT	11	—	—	FL5	†35013A
HORN	7	8H	*70178A (70163)	8H	*70178A (70163)
HORN PUSH	7	HP26	*76234A (76200)	HP26	*76234A (76200)
INSPECTION LAMP SOCKET	10	—	—	—	*39517B (301187)
LAMPS					
Flasher	11	—	—	628	‡53733D
Driving (formerly Head)					
Home	8 & 9	MCH56	58892B	MCF575P	58897A
Export Europe, except France	8 & 9	MCF575P	58976A	MCF575P	58898A
Export, France	8 & 9	MCH65	58896B	MCF575P	58899A
Stop tail, number plate illumination and reflex	10	564	53394D	564	53394D
RECTIFIER	6	2DS506	49072A	2DS506	49072A
SWITCHES					
Dipper	7	99	*31549B (31482)	99	*31549B (31482)
Flasher	7	—	—	525A	‡1823A
Ignition	7	885A	34427A/B	885A	34427A/B
Cover	7	—	†5433617B	—	†54336307
Lighting	7	885A	34289A	885A	34289A
Knob	7	—	†54330934	—	†54330662
Neutral gear indicator	7	685A	‡31820A	685A	‡31820A
Stop Lamp, front brake	7	—	—	22B	*31384B (54033235)
Stop Lamp, rear	7	22B	54033234	22B	54033234
WARNING LIGHTS					
Flasher	11	—	—	WL13	‡38193A
Neutral gear indicator	11	—	—	WL13	‡38194A

* When ordering, quote part number shown in brackets. † Order separately. ‡ Optional extra.

CABLE HARNESSES

Part No.	...	...	54932231	54932234	54932262
Connector, Lucar, double (17.5 amp)	54942747	—	54942747	—	54942747
Connector, Lucar (17.5 amp)	54942078	54942078	54942078	—	54942078
Nipple	900269	900269	900269	—	900269
Connector tube (2-way)	900288	900288	900288	—	900288
Connector tube (4-way)	850641	850641	—	—	—

Part No.	...	...	54933943	54933944	54934657
Connector, Lucar, double (17.5 amp)	—	—	—	—	54942747
Connector, Lucar (17.5 amp)	54942078	54942078	54942078	—	54942078
Lucar blade	864980	864980	—	—	—
Nipple	900269	900269	900269	—	900269
Connector tube (2-way)	900288	900288	900288	—	900288
Connector tube (4-way)	850641	850641	—	—	—

Part No.	...	...	54934952	54934998	54935006
Connector, Lucar, double (17.5 amp)	54942747	54942747	54942747	—	54942747
Connector, Lucar (17.5 amp)	—	54942078	—	—	—
Nipple	900269	900269	900269	—	900269
Connector tube (2-way)	900288	900288	900288	—	900288
Connector tube (4-way)	—	850641	850641	—	850641

Part No.	...	...	54937919	54937920	54941657
Connector, Lucar, double (17.5 amp)	54942747	54942747	54942747	—	—
Connector (17.5 amp)	54942078	54942078	54942078	—	—
Nipple	900269	900269	900269	—	900269
Connector tube (2-way)	900288	900288	900288	—	900288
Connector tube (4-way)	850641	850641	850641	—	850641
Bulbholder (speedo)	54941458	54941458	54941458	—	—
Bulb	282	282	282	—	—



ALTERNATORS AND RECTIFIERS

Part No.	...	...	...	...	†54021025	†54021027	†54021039
Model	...	...	...	...	RM18	RM19	RM19
Stator	...	...	...	...	47161	47162A	47173
Rotor	...	...	...	...	54213903	54213901	54213901
Rectifier	...	...	...	...	†49072	†49072	—
Rectifier, fixing nut	...	...	...	...	†156594	†156594	—

Part No.	...	...	...	...	†54021056	†047540D	†54021000
Model	...	...	...	...	RM19	5AF	5AF
Stator	...	...	...	...	47188	47136	47135A
Rotor	...	...	...	...	54213901	54210940	54210946
Rectifier	...	...	...	...	—	†49072	†49072
Rectifier, fixing nut	...	...	...	...	—	†156594	†156594

AMMETERS

Part No.	...	...	...	...	36084F	36296A
Model	...	...	...	...	CZU27	2AR
Ring, rubber	...	...	...	...	523986	—
Nut, terminal	...	...	...	...	166043	166043
Washer, terminal	...	...	...	...	185040	185040

CONTACT BREAKER UNITS

Part No.	...	...	...	...	425379	47583A/B	47603A/D
Model	...	...	...	...	4CC	4CA	4CA
Cam	...	...	...	...	—	54440029	54415053
Weights, auto advance	...	...	...	...	—	54440031	54440031
Sleeve and action plate	...	...	...	...	—	54440032	54415749
Spring set, auto-advance	...	...	...	...	—	54413020	54415640
Contact set	...	...	...	...	54415803	54415803	54415803
Condenser	...	...	...	...	425377	425377	425377
Nut, fixing condenser angle plate	...	...	...	...	169194	169194	169194
Plate, contact breaker base	...	...	...	...	425370	425370	425370

Part No.	...	...	...	...	47612A	47615A/B	47621A
Model	...	...	...	...	4CA	4CA	4CA
Cam	...	...	...	...	54415053	54440029	54440029
Weights, auto advance	...	...	...	...	54440031	54440031	54440031
Sleeve and action plate	...	...	...	...	54447203	54415749	54415749
Spring set, auto-advance	...	...	...	...	54415641	54415640	54415640
Contact set	...	...	...	...	54415803	54415803	54415803
Condenser	...	...	...	...	425377	425377	425377
Nut, fixing condenser angle plate	...	...	...	...	169194	169194	169194
Plate, contact breaker base	...	...	...	...	425370	425370	425370


IGNITION COILS

Part No.	...	...	...	...	45101A	45110A	45149B
Model	...	...	...	...	MA12	MA12	3ET
Grommet, rubber	...	...	...	...	421554	421554	—
Clip, cable contact	...	...	...	...	421863	421863	—
Nut, terminal	...	...	...	...	166043	166043	—
Clip, coil retaining	...	...	...	...	—	—	54441104
Lamination	...	...	...	...	—	—	54441946
Connector, double, male, Lucar	...	...	...	...	—	54190108	864980
Connector, female, Lucar	...	...	...	...	—	—	54942078
Sleeve, insulating, Lucar	...	...	...	...	—	—	54190042

Part No.	...	...	...	...	45150A	45152B
Model	...	...	...	...	3ET	MA6
Grommet, rubber	...	...	...	...	—	421554
Clip, cable contact	...	...	...	...	—	421863
Nut, terminal	...	...	...	...	—	166043
Clip, coil retaining	...	...	...	...	54441104	—
Lamination	...	...	...	...	54441946	—
Connector, double, male, Lucar	...	...	...	...	864980	54190108
Connector, female, Lucar	...	...	...	...	54942078	—
Sleeve, insulating, Lucar	...	...	...	...	54190042	—


† Order separately.

‡ For reference only, serviced by rotor and stator.

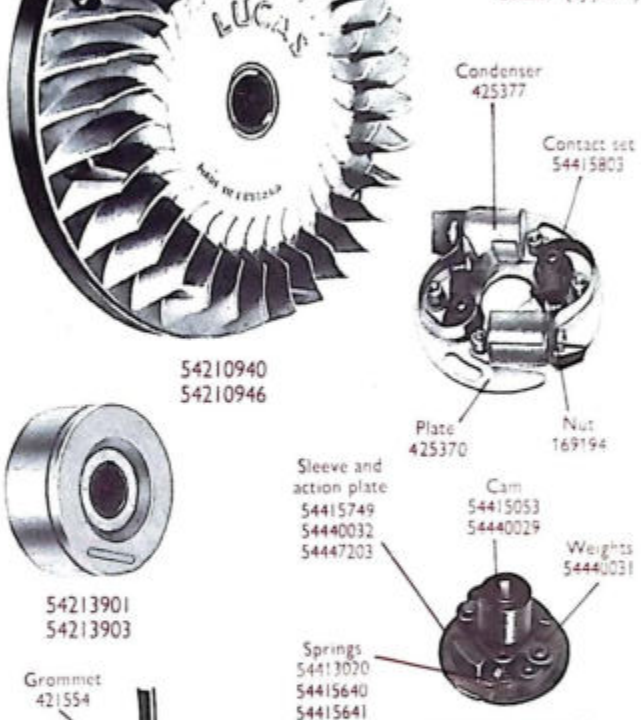

MODELS 4CA & 4CC (upper illustration only)



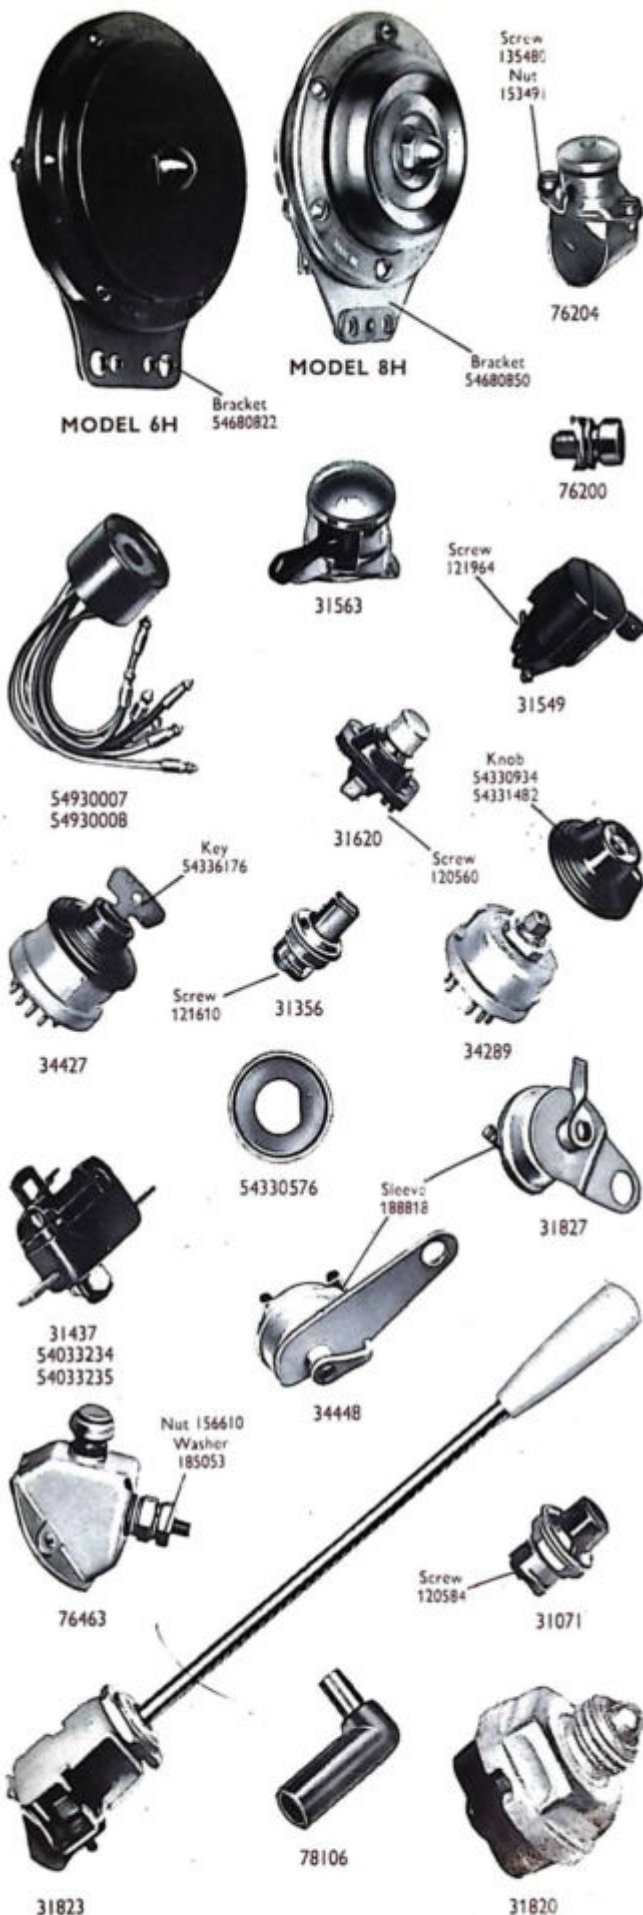

HORNS

Part No.	...	...	...	...	70186A 70187A	70164B 70169B/D 70178A 8H	70166B 70177A 8H
Model	...	...	...	...	6H	8H	8H
Bracket	...	...	...	...	54680822	54680850	—
Sundry parts set	...	...	...	...	—	54681085	54681085

HORN PUSH

Part No.	...	...	...	...	...	...	76204D 4A
Model	...	...	...	...	...	...	—
Screw, terminal	...	...	...	...	...	...	119520
Screw, fixing	...	...	...	...	...	...	135480
Nut, fixing	...	...	...	...	...	...	153491

HORN PUSH AND DIPPER SWITCH

Part No.	...	...	...	...	...	...	31563D 25SA
Model	...	...	...	...	...	...	—
Screw, terminal	...	...	...	...	...	...	120610

DIPPER SWITCHES

Part No.	...	...	...	...	...	...	31549B 99	31620E PS9
Model	...	...	...	...	...	...	—	—
Screw, fixing	...	...	...	...	...	...	121964	—
Screw, terminal	...	...	...	...	...	...	—	120560

IGNITION SWITCH

Part No.	...	...	...	...	...	...	34427A/B 88SA
Model	...	...	...	...	...	...	—
Key	...	...	...	...	...	...	54336176
Socket with cables	...	...	...	...	...	...	*54930008

(Covers — see Equipment Specification)

LIGHTING SWITCHES

Part No.	...	...	...	...	...	...	31356A/B PS6	34289A 88SA
Model	...	...	...	...	...	...	—	—
Screw, terminal	...	...	...	...	...	...	121610	—
Socket with cables	...	...	...	...	...	...	—	*54930007

(Knobs — see Equipment Specification)

STOP LAMP SWITCHES

Part No.	...	...	...	...	...	...	31437B 54033234 54033235 22B	31827A 6SA	34448B 6SA
Model	...	...	...	...	...	...	—	—	—
Sleeve, terminal	...	...	...	...	...	...	—	188818	188818

STARTING MOTOR SWITCH

Part No.	...	...	...	...	...	...	76463A 4SA
Model	...	...	...	...	...	...	—
Nut, terminal	...	...	...	...	...	...	156610
Washer, spring	...	...	...	...	...	...	185053

CUT-OUT SWITCH

Part No.	...	...	...	...	...	...	31071D SSS
Model	...	...	...	...	...	...	—
Screw, terminal	...	...	...	...	...	...	120584

* Order separately



DRIVING LAMPS

MCF575 and MCF575P models


Part No. Model	58234D MCF575P	58391A MCF575	58392A MCF575P
Rim or door	534343	534343	534343
Wire, fixing light unit	504665	504665	504665
Screw, fixing rim	144921	144921	144921
Plate, fixing rim	534296	534296	534296
Light unit	516828	516828	516828
Bulbholder, main	554602	553470	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior bulbholder	553780	553780	553780
Bulb, main	312	—	377
Bulb, pilot	988	988	988

Part No. Model	58898A MCF575P	58897A MCF575P
Rim or door	54520003	54520003
Wire, fixing light unit	504665	504665
Screw, fixing rim	555911	555911
Plate, fixing rim	534296	534296
Light unit	516829	516828
Bulbholder, main	554602	554602
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Bulb, main	377	312
Bulb, pilot	988	988

Part No. Model	58899A MCF575P	58976A MCF575P
Rim or door	54520003	516723
Wire, fixing light unit	504665	500291
Screw, fixing rim	555911	516710
Plate, fixing rim	534296	516709
Light unit	516912	516829
Backshell	553470	—
Bulbholder, main	5562303	554602
Sleeve, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Bulb, main	—	377
Bulb, pilot	988	989


MCH56 models

Part No. Model	58892B MCH56	58896B MCH56	59344A MCH56
Rim or door	534343	534343	534343
Wire, fixing light unit	504665	504665	504665
Screw, fixing rim	144921	144921	144921
Plate, fixing rim	534296	534296	534296
Ammeter	*36084	*36084	*36084
Switch, lighting	34289	34289	34289
Switch, ignition	34427	34427	—
Light unit	54520858	516912	516828
Backshell	—	552943	—
Bulbholder, main	554602	*562303	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior bulbholder	553780	553780	553780
Ring, seating bulbholder	554354	554354	554354
Screw, fixing lamp	112201	112201	112201
Grommet, cable entry	199005	199005	199005
Washer, cable grip	516285	516285	516285
Bulb, main	312	—	312
Bulb, pilot	988	988	988

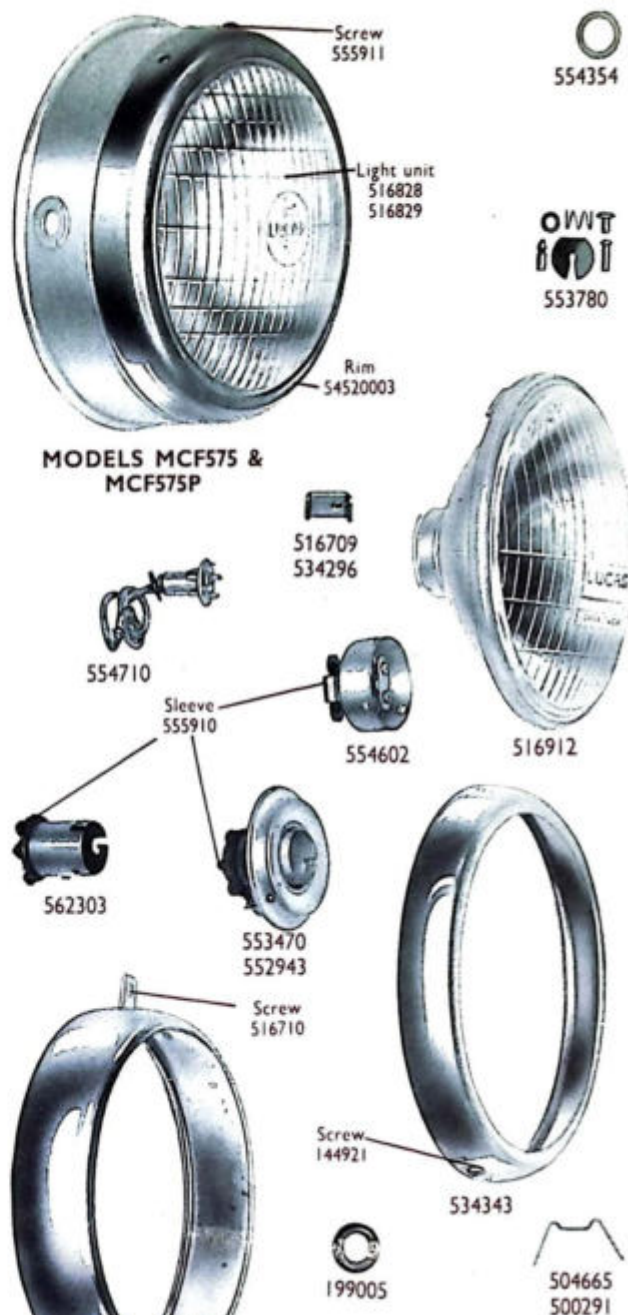


† Part of 553470. * See page 6 for details. ‡ See page 7 for details.


* Part of 552943

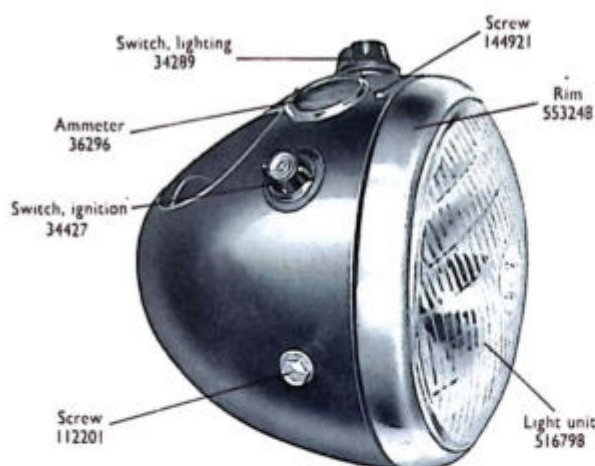

MODEL MCH61

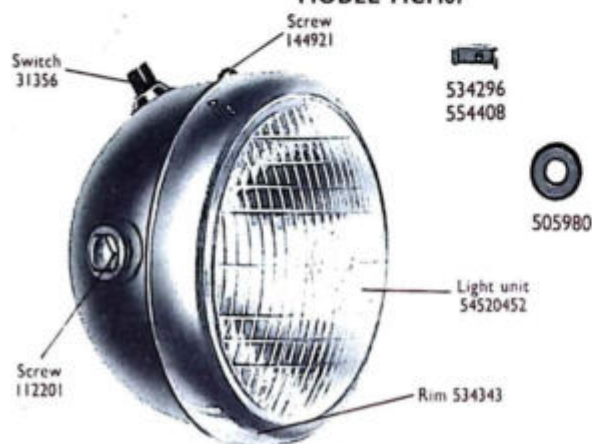

MODEL MCH66

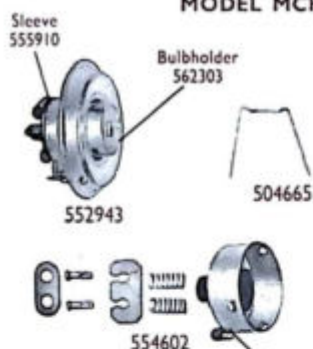

MODEL MCF700P



DRIVING LAMPS

MCH61 models

Part No.	59137A	59171A	
Model	59355A	59357A	59237A
	MCH61	MCH61	MCH61
Rim or door	553248	553248	553248
Wire, fixing light unit	504665	504665	504665
Screw, fixing rim	144921	144921	144921
Plate, fixing rim	534296	534296	534296
Ammeter	*36296	*36296	*36296
Switch, lighting	:34289	:34289	:34289
Switch, ignition	:34427	:34427	:34427
Light unit	516798	516798	516798
Bulbholder, main	554602	554602	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior bulbholder	553780	553780	553780
Ring, seating bulbholder	554354	554354	554354
Screw, fixing lamp	112201	112201	112201
Grommet, cable entry	—	199001	199001
Washer, cable grip	—	—	516285
Bush, rubber	—	—	505980
Bulb, main	312	312	446
Bulb, pilot	988	988	989

MCH66 model

[illegible]

MCF700P models

Part No. Model	59140A MCF700P	59141A MCF700P	59142A MCF700P
Rim or door	553248	553248	553248
Wire, fixing light unit	504665	504665	504665
Screw, fixing rim	144921	144921	144921
Plate, fixing rim	554408	554408	554408
Light unit	516812	516810	516811
Bulbholder, main	554602	554602	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior, bulbholder	553780	553780	553780
Ring, seating bulbholder	554354	554354	554354
Bulb, main	373	312	403
Bulb, pilot	988	988	988

Part No.	59143A	59174A
Model	MCF700P	MCF700P
Rim or door	553248	553248
Wire, fixing light unit	504665	504665
Screw, fixing rim	144921	144921
Plate, fixing rim	554408	554408
Light unit	516802	516812
Bulbshell	552943	—
Bulbholder, main	†562303	554602
Slens, terminal	555910	555910
Bulbholder, pilot	554710	554710
Interior bulbholder	553780	553780
Ring, seating bulbholder	554354	554354
Bulb, main	—	446
Bulb, pilot	988	989

† Part of 552943. ‡ See page 6 for details. § See page 7 for details.



DRIVING LAMPS (SCOOTER)

Part No. Model	58421D MCF575P	58422D MCF575P	58424B MCF575
Rim or door	516723	516723	516723
Screw, fixing rim	516710	516710	516710
Plate, fixing rim	516709	516709	516709
Light unit	516767	516658	516659
Wire, fixing light unit	500291	500291	500291
Bulbholder	554946	554946	554946
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	—
Interior, pilot	553780	553780	—
Ring, rubber, seating	554354	554354	—
Bulb, main	425	350	425
Bulb, pilot	989	989	—

Part No. Model	58975A MCF575P	58976A MCF575P	59004A MCF575	58423D MCF575P
Rim or door	516723	516723	516723	516910
Screw, fixing rim	516710	516710	516710	516710
Plate, fixing rim	516709	516709	516709	516709
Light unit	516828	516829	54520452	516912
Wire, fixing light unit	500291	500291	500291	516911
Bulbholder	554602	554602	554602	—
Sleeve, terminal	555910	555910	555910	—
Backshell	—	—	—	553470
Bulbholder	—	—	—	562303
Sleeve, terminal	—	—	—	555910
Bulbholder, pilot	554710	554710	—	554710
Interior, pilot	553780	553780	—	553780
Ring, rubber, seating	554354	554354	—	554354
Bulb, main	312	377	312	—
Bulb, pilot	988	988	—	989




STOP TAIL, NUMBER PLATE AND REFLEX LAMPS


Part No. Model	53394D 564	53432D 564	53454D 564
Lens	54576001	54576001	54576001
Nut, barrel, lens fixing	575219	575219	575219
Gasket, seating lens	575208	575208	575208
Base	54573881	54573881	575964
Grommet, bulbholder	575207	575207	575207
Bulbholder assembly shell	575209	575209	575209
Interior, bulbholder	573828	573828	573828
Grommet, cable	573825	573825	573825
Nut, fixing lamp	166014	166014	166014
Bulb	352	384	380

Part No. Model	53972A/B L679
Lens	54572932
Screw, fixing lens	572289
Bulbholder, with reflector	5474348
Interior, bulbholder	573828
Gasket, seating lamp	54571677
Base	54571319
Bulb	384

TAIL, NUMBER PLATE AND REFLEX LAMP

Part No. Model	53825A 564
Lens	54576001
Nut, fixing lens	575219
Gasket, seating lens	575208
Base	54571053
Grommet, bulbholder	575207
Shell, bulbholder	54571021
Interior, bulbholder	573832
Grommet, cable entry	573825
Nut, fixing lamp	166014
Bulb	205

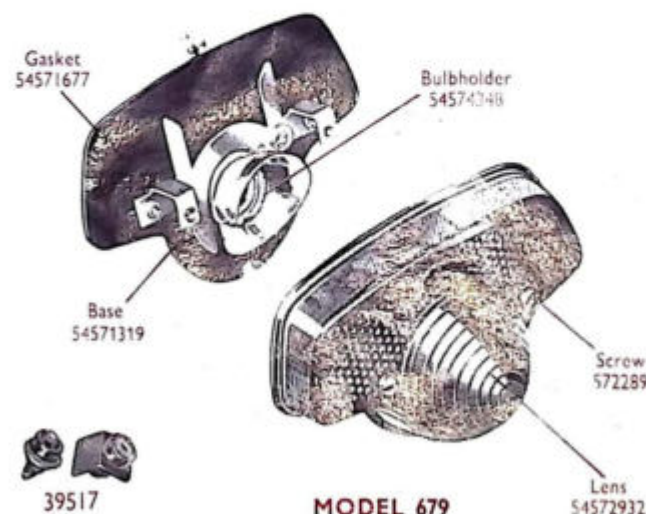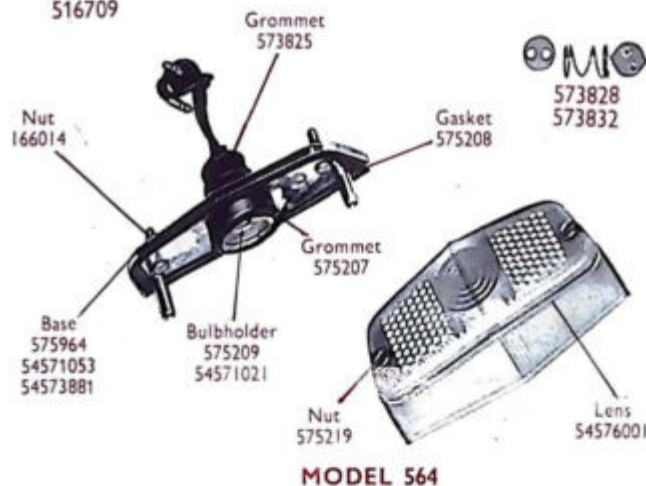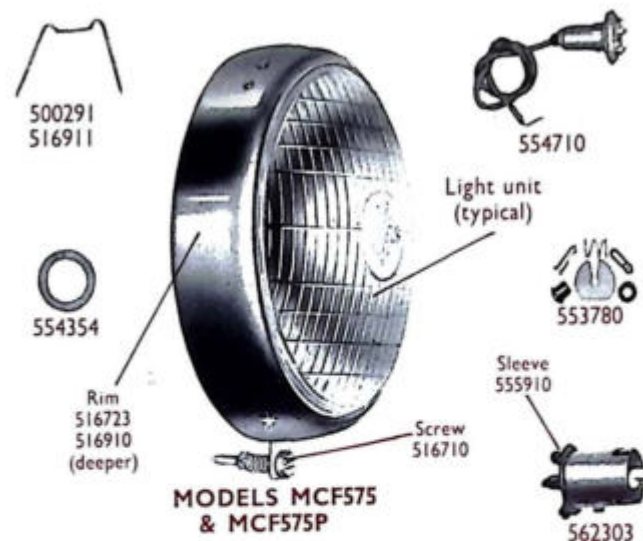

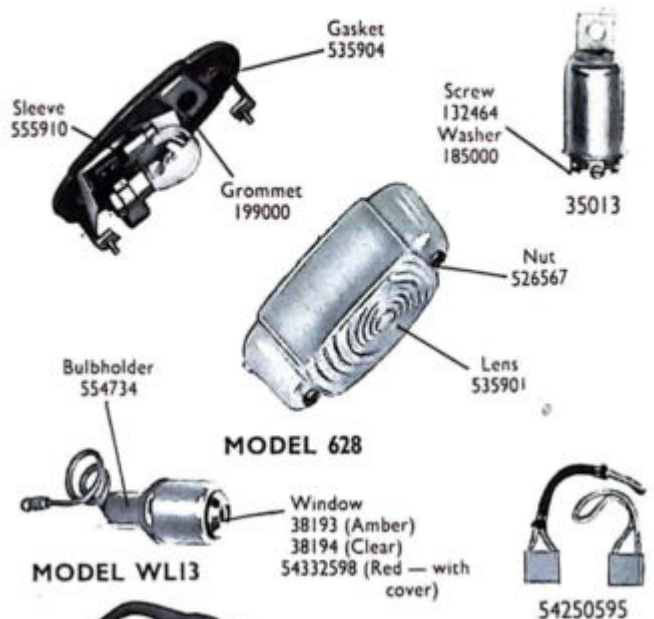

FLASHER LAMP

Part No.	...	...	...	...	...	...	...	...	53733D
Model	...	...	...	...	...	...	...	...	628
Lens	...	...	...	...	...	...	...	...	535901
Nut, fixing lens	...	...	...	...	...	...	...	...	526567
Gasket, seating lens	...	...	...	...	...	...	...	...	535904
Sleeve, terminal	...	...	...	...	...	...	...	...	555910
Grommet, cable entry	...	...	...	...	...	...	...	...	199000
Bulb	...	...	...	...	...	...	...	...	317

FLASHER UNIT

Part No.	...	...	...	...	...	...	...	...	35013A
Model	...	...	...	...	...	...	...	...	FL5
Screw, terminal	...	...	...	...	...	...	...	...	132464
Washer, terminal screw	...	...	...	...	...	...	...	...	185000

WARNING LIGHTS

Part No.	...	...	...	...	...	...	...	...	38193A	38194A
Model	...	...	...	...	...	...	...	...	WL13	WL13
Window	...	...	...	...	...	...	...	...	319303	319304
Bulbholder	...	...	...	...	...	...	...	...	554734	554734
Bulb	...	...	...	...	...	...	...	...	990	990

Part No.	...	...	...	...	...	...	...	...	38197E	38198E
Model	...	...	...	...	...	...	...	...	WL13	WL13
Cover and window	...	...	...	...	...	...	...	...	54332598	54332598
Bulbholder	...	...	...	...	...	...	...	...	554734	554734
Bulb	...	...	...	...	...	...	...	...	987	998

STARTING MOTOR

Part No.	...	...	...	...	...	...	...	...	26501E
Model	...	...	...	...	...	...	...	...	M3
Bolt, through, fixing	...	...	...	...	...	...	...	...	54250291
Bracket, fixing	...	...	...	...	...	...	...	...	54250271
Bushing, bracket	...	...	...	...	...	...	...	...	54250347
Shoe, operating lever	...	...	...	...	...	...	...	...	253070
Circlip, armature location	...	...	...	...	...	...	...	...	261084
Drive	...	...	...	...	...	...	...	...	54250294
Armature	...	...	...	...	...	...	...	...	54250289
Brush set	...	...	...	...	...	...	...	...	54250595
Bracket or frame, commutator end	...	...	...	...	...	...	...	...	54252306
Bushing bracket	...	...	...	...	...	...	...	...	261233
Plate, with brush holder and springs	...	...	...	...	...	...	...	...	54250751
Springs, set brush tension	...	...	...	...	...	...	...	...	54250596
Coils, field	...	...	...	...	...	...	...	...	54250753
Sundry parts set	...	...	...	...	...	...	...	...	54251434

BULBS

Part No.	Volts	Watts	Description
166	6	24/24	Transverse, vertical dip
205	6	6	Coil, miniature bayonet cap
282	6	6	Coil, miniature bayonet cap
312	6	30/24	Transverse, vertical dip
317	6	18	Transverse
350	12	35/35	Transverse, vertical dip
352	6	18/3	Transverse, offset pin
373	6	30/24	Transverse, dip left
377	6	25/25	Transverse, vertical dip
380	12	21/6	Transverse, offset pin
384	6	18/6	Transverse, offset pin
403	6	35/35	Bow, hooded axial
425	12	24/24	Transverse, vertical dip
446	12	50/40	Transverse, vertical dip
987	12	2.2	Bow, miniature screw cap
988	6	3	Coil, miniature bayonet cap
989	12	6	Coil, miniature bayonet cap
990	6	3	Bow, miniature screw cap
998	6	0.1 amps	Bow, miniature screw cap

