

LUCAS
GIRLING

**EQUIPMENT AND
SERVICE PARTS**

BRITCYCLE
www.britcycle.com.au

CE824/66

B.S.A.
Motor Cycles

1966





EQUIPMENT SPECIFICATIONS AND PAGE INDEX

UNIT	See page	500 c.c. A50 "Wasp" 650 c.c. A65 "Spitfire-Hornet"		500 c.c. A50 "Royal-Star" 650 c.c. A65 "Thunderbolt" 650 c.c. A65 "Lightning" 650 c.c. A65 "Spitfire Mk II Special"		250 c.c. "Sportsman"		440 c.c. B44 "Victor-Enduro" Lighting on home market only	
		Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR (serviced by)	4	RM19	—	RM19	—	RM18	—	RM19	—
Rotor	4	—	54213901	—	54213901	—	54213903	—	54213901
Stator	4	—	47188B	—	47162A	—	47161B	—	47173B
Stator (Later)	4	—	47197A	—	—	—	—	—	47203A
AMMETER	4	—	—	2AR	†36296A	CZU27	†36084F	—	—
BATTERY	—	—	—	MK Z9E-2	54028050	MLZ9E	54028459	—	—
BATTERY (Later)	—	—	—	PUZ5A	54027029	—	—	—	—
CABLE HARNESS	7	—	—	—	54939347	—	—	—	54933943
CABLE HARNESS (Ignition only)	7	—	—	—	—	—	—	—	54938164
COIL, IGNITION	4	3ET (L.H.) 3ET (R.H.)	54934952 45150A 45149A	MA12	45110D	MA6	45152B	3ET	45149A
CONTACT BREAKER	4	—	*47612E (425379 & 54416150)	4CA	47583F	4CA	*47621D (54415296 & 54416405)	4CA	47603H
CONTACT BREAKER (Later)	4	—	—	—	—	—	—	4CA	*47624A (54415296 & 54417989)
CONDENSER	4	—	54441582	—	—	—	—	—	—
DIODE, ZENER	4	—	—	ZD715	49345A	—	—	—	—
FUSED EARTH LEAD	4	—	—	—	54938986	—	—	—	—
HORN	5	—	—	6H	70197A	8H	70169D	—	—
LAMPS	—	—	—	—	—	—	—	—	—
Head	—	—	—	—	—	—	—	—	—
Home and Export	6	—	—	SS700P	59580A	MCH56	59616A	MCH66	58395J
Europe	6	—	—	SS700P	59608A	MCH56	59618A	—	—
France	6	—	—	SS700P	59607A	MCH56	59617A	—	—
Stop tail, number plate and reflex	7	—	—	564	53454D	564	53394D	564	53432D
Later	7	—	—	679	53973B	—	—	679	53972B
Export U.S.A.	7	—	—	679	53973B	679	53972B	—	—
RECTIFIER	4	—	—	2DS560	49072A	2DS560	49072A	—	—
SWITCHES	—	—	—	—	—	—	—	—	—
Dipper	5	—	—	—	—	—	—	PS9	†31620F
Engine cut-out	5	SS5	*31071D (31107)	—	—	—	—	—	—
Ignition	5	—	—	545	31899B	885A	34427B	—	—
Cover	5	—	—	—	—	—	5433617B	—	—
Escutcheon plate	5	—	—	—	—	—	54330576	—	—
Lighting	5	—	—	885A	†34289A	885A	†34289A	PS6	†31356B
Knob	5	—	—	—	†54330934	—	†54330934	—	—
Socket with cables	5	—	—	—	54930007	—	54930007	—	—
Escutcheon plate	5	—	—	—	54330576	—	54330576	—	—
Stop lamp	5	—	—	6SA	34448B	6SA	31827B	—	—
REAR SUSPENSION UNITS	—	—	*4394 (SB4) 4475 (SB4)	—	4475 (SB4)	—	4445 (SB3)	—	4545 (SB4)
(Serviced by Girling Ltd.)									

UNIT	See page	440 c.c. B44 "Grand-Prix Victor"		250 c.c. C15 "Star"		350 c.c. B40 "Star"		Bantam "Silver" and "Deluxe"	
		Model	Part No.	Model	Part No.	Model	Part No.	Model	Part No.
ALTERNATOR (serviced by)	4	RM19	—	RM18	—	RM19	—	—	—
Rotor	4	—	54213901	—	54213903	—	54213901	—	—
Stator	4	—	47173B	—	47161B	—	47162A	—	—
Stator (Later)	4	—	47203A	—	—	—	—	—	—
AMMETER	4	—	—	CZU27	36084F	CZU27	36084F	—	—
BATTERY	—	—	—	MLZ9E	54028459	MLZ9E	54028459	PUZ5E/11	24082094
CABLE HARNESS	7	—	—	—	54937919	—	54937919	—	—
CABLE HARNESS (Ignition only)	7	—	54938164	—	†54937920	—	—	—	—
COIL, IGNITION	4	3ET	45149A	MA6	45152B	MA6	45152B	—	—
CONTACT BREAKER	4	4CA	47603H	4CA	*47621D (54415296 & 54416405)	4CA	*47621D (54415296 & 54416405)	—	—
HORN	5	—	—	8H	70169D	8H	70169D	—	—
LAMPS	—	—	—	—	—	—	—	—	—
Head	—	—	—	—	—	—	—	—	—
Home and Export	7	—	—	MCF575P	58234D	MCF575P	58234D	—	—
Europe	7	—	—	MCF575P	58392A	MCF575P	58392A	—	—
France	7	—	—	MCF575P	58391A	MCF575P	58391A	—	—
Stop tail, number plate and reflex	7	—	—	564	53394D	564	53432D	—	—
Export U.S.A.	7	—	—	679	53972B	—	—	—	—
RECTIFIER	4	—	—	2DS560	49072A	2DS560	49072A	—	—
SWITCHES	—	—	—	—	—	—	—	—	—
Ignition	5	—	—	885A	34427B	885A	34427B	—	—
Cover	5	—	—	—	5433617B	—	5433617B	—	—
Escutcheon plate	5	—	—	—	54330576	—	54330576	—	—
Lighting	5	—	—	885A	34289A	885A	34289A	—	—
Knob	5	—	—	—	†54330934	—	†54330934	—	—
Escutcheon plate	5	—	—	—	54330576	—	54330576	—	—
Stop lamp	5	—	—	6SA	31827B	6SA	31827B	—	—
REAR SUSPENSION UNIT	—	—	4757 (SB4)	—	3973 (SC2-6)	—	4404 (SC3)	—	3974 (SC2-6)
(Serviced by Girling Ltd.)									

† Part of Headlamp.

‡ Export U.S.A.

* When ordering, quote Part numbers shown in brackets.

‡ A50 Wasp only.



ALTERNATOR STATORS

Part No. ...	47161B	47162A 47173B	47188B	47197A 47203A
Model ...	RM18	RM19	RM19	RM19
Cable clip ...	54213907	54210167	54211644	—
Washer, cable clip ...	131023	131023	131023	—

RECTIFIER

Part No. ...	49072A 2DS506
Nut, fixing ...	156594

AMMETERS

Part No. ...	36084F CZU27	36296A 2AR
Ring, rubber ...	523986	—
Nut, terminal ...	166043	166043
Washer, terminal ...	185040	185040

CONTACT BREAKER UNITS

Part No. ...	47583F 4CA	47603H 4CA	47612E 4CA
Contact breaker ...	425379	54415296	425379
Contact set ...	54415803	54415803	54415803
Nut, condenser angle plate fixing ...	169194	169194	169194
Plate, condenser terminal insulating ...	425382	425382	425382
Condenser ...	425377	425377	425377
Plate, contact breaker base ...	425370	425370	425370
Felt, cam lubricating ...	425378	425378	425378
Auto advance unit ...	54440028	54415748	54416150
Cam ...	54440029	54415053	54415053
Springs, auto advance ...	54413020	54415640	54415641
Weights, auto advance ...	54440031	54440031	54440031
Sleeve and action plate ...	54440032	54415749	54417203

Part No. ...	47621D 4CA	47624A 4CA
Contact breaker ...	54415296	54415296
Contact set ...	54415803	54415803
Nut, condenser angle plate fixing ...	169194	169194
Plate, condenser terminal insulating ...	425382	425382
Condenser ...	425377	425377
Plate, contact breaker base ...	425370	425370
Felt, cam lubricating ...	425378	425378
Auto advance unit ...	54416405	54417989
Cam ...	54440029	54415053
Springs, auto advance ...	54415640	54417992
Weights, auto advance ...	54440031	54440031
Sleeve and action plate ...	54415749	54417203

IGNITION COILS

Part No. ...	45152B	45110D	45149A 45150A 3ET
Model ...	MA6	MA12	
Grommet, rubber ...	421554	421554	—
Clip, cable contact ...	421863	421863	—
Nut, terminal ...	166043	166043	—
Clip, coil retaining ...	—	—	54441104
Lamination ...	—	—	54441946
Connector, double male Lucar ...	54190108	54190108	864980
Connector, female Lucar ...	—	—	54942078
Sleeve, Lucar ...	—	—	54190042
Washer, shakeproof terminal ...	188330	188330	—
Washer, plain terminal ...	131023	131023	—
Eyelet ...	—	—	187736

FUSED EARTH LEAD

Part No. ...	54938986
Eyelet ...	900450
Eyelet ...	850406
Fuse holder ...	54190387
Fuse 35 amp. ...	188218



Stator (typical)



54213901
54213903



49345



523986



36296



36084



54441582



49072


Nut
156594




900450



850406



54190387



188218

Condenser
425377

Contact set
54415803

Felt
425378

Plate
425370

Nut
169194

Sleeve and
action plate
54415749
54440032
54447203

Cam
54415053
54440029

Weights
54440031

Springs
54413020
54415640
54415641
54417992

MODEL 4CA



Grommet
421554

Cable clip
421863

Connector
54190108



45152
45110 (12 volt)

Lamination
54441946

Connector
864980
54942078
Sleeve
54190042


Clip
54441104



45149
45150



MODEL 6H

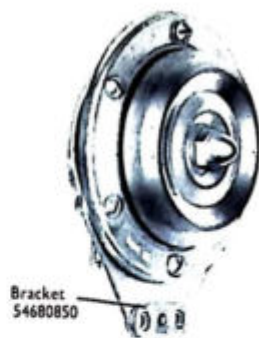

MODEL 8H

Bracket
54680850

Nut
314540

Screw
120560

31620



31899

Key
54336176

Cover
54336178



34427



54330576



54930007
54930008

Knob
54330934



Nut 180670
Washer 158350
185188

Screw
121610

31356




Nut 180316

Sleeve
188818



31827

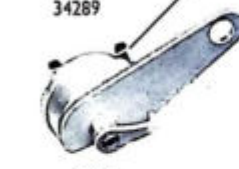

34448



360363



Screw
120584

31071




166, 312, 446



988, 989



352, 380, 384

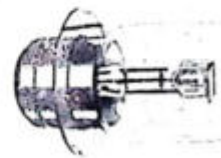

350, 370, 377, 403

HORNS

Part No. Model	...	...	...	...	...	...	70169D 8H	70197A 6H
Bracket	...	...	...	...	...	...	54680850	—

DIPPER SWITCH

Part No. Model	...	...	...	...	...	...	31620F PS9
Nut, fixing	...	...	...	...	...	...	314540
Screw, terminal	...	...	...	...	...	...	120560

IGNITION SWITCHES

Part No. Model	...	...	...	...	...	31899B S45	34427B 88SA
Key	...	...	...	...	...	—	54336176
Socket with cables	...	...	...	...	...	—	*54930008
Nut, fixing	...	...	...	...	...	54130041	54336177
Washer, nut fixing	...	...	...	...	...	164018	—
Cover	...	...	...	...	...	—	*54336178

LIGHTING SWITCHES

Part No. Model	...	...	...	...	...	31356B PS6	34289A 88SA
Screw, terminal	...	...	...	...	...	121610	—
Socket with cables	...	...	...	...	...	—	*54930007
Washer, flat, nut fixing	...	...	...	...	...	158350	—
Washer, spring, nut fixing	...	...	...	...	...	185188	—
Nut, fixing	...	...	...	...	...	180670	180316
Knob	...	...	...	...	...	—	*54330934

STOP LAMP SWITCHES

Part No. Model	...	...	...	...	...	31827B 6SA	3448B 6SA
Sleeve, terminal	...	...	...	...	...	188818	188818
Cover, rubber, terminal	...	...	...	...	...	—	360363

CUT-OUT SWITCH

Part No. Model	...	...	...	...	...	...	31071D SS5
Screw, terminal	...	...	...	...	...	...	120584

BULBS

Part No.	Volts	Watts	Description
166	6	24/24	Transverse, vertical dip
312	6	30/24	Transverse, vertical dip
352	6	18/3	Transverse, offset pin
370	12	40/50	Transverse and Hooded axial Duplo-Vertical dip
377	6	25/25	Transverse, vertical dip
380	12	21/6	Transverse, offset pin
384	6	18/6	Transverse, offset pin
446	12	50/40	Transverse, vertical dip
988	6	3	Coil, miniature bayonet cap
989	12	6	Coil, miniature bayonet cap

* Order separately




HEADLAMPS



Part No. Model	59616A MCH56	59617A MCH56	59618A MCH56
Rim or door	534343	534343	534343
Wire, light unit fixing	504665	504665	504665
Screw, rim fixing	144921	144921	144921
Plate, rim fixing	534296	534296	534296
Ammeter (see page 4 for details)	36084	36084	36084
Switch, lighting (see page 5 for details)	34289	34289	34289
Knob, lighting switch	54330934	54330934	54330934
Screw, knob fixing	101371	101371	101371
Washer, dished, screw seating	332529	332529	332529
Nut, locking, switch fixing	180316	180316	180316
Washer, nut locking	185128	185128	185128
Plate, escutcheon	54330576	54330576	54330576
Light unit	516828	516912	54521021
Bulbholder, main	554602	554602	554602
Sleeve, terminal	555910	555910	555910
Backshell	—	552943	—
Bulbholder, main	—	562303	—
Bulbholder, pilot	554710	554710	554710
Interior, bulbholder	553780	553780	553780
Ring, rubber, seating	554354	554354	554354
Washer, cable grip	516285	516285	516285
Screw, lamp fixing	112201	112201	112201
Washer, screw fixing	137499	137499	137499
Grommet, cable entry	199005	199005	199005
Body	54523202	54523202	54523202
Bulb, main	312	—	377
Bulb, pilot	988	988	988

Part No. Model	58395J MCH66
Rim or door	534343
Wire, reflector fixing	504665
Screw, rim fixing	144921
Plate, rim fixing	534296
Switch, lighting (see page 5 for details)	31356
Switch, dip (see page 5 for details)	31620
Light unit	54520452
Bulbholder, main	554602
Sleeve, terminal	555910
Grommet, cable entry	199003
Screw, lamp fixing	112201
Washer, screw fixing	137499
Body	54520354
Bulb	166

Part No. Model	59580A SS700P	59607A SS700P	59608A SS700P
Rim or door	553248	553248	553248
Wire, fixing	504665	504665	504665
Screw, rim fixing	144921	144921	144921
Plate, rim fixing	534296	534296	534296
Ammeter (see page 4 for details)	36296	36296	36296
Switch, lighting (see page 5 for details)	34289	34289	34289
Knob	54330934	54330934	54330934
Light unit	516798	516802	516801
Bulbholder, main	554602	—	554602
Sleeve, terminal	555910	—	555910
Backshell	—	552943	—
Bulbholder	—	562303	—
Clip and screw, bulbholder	—	562306	—
Sleeve, terminal	—	555910	—
Bulbholder, pilot	554710	554710	554710
Interior, pilot	553780	553780	553780
Ring, rubber, seating	554354	554354	554354
Washer, cable grip pilot	516285	516285	516285
Screw, lamp fixing	112201	112201	112201
Washer, lamp screw fixing	137498	137498	137498
Body	54523021	54523021	54523021
Bulb, main	446	—	370
Bulb, pilot	989	989	989

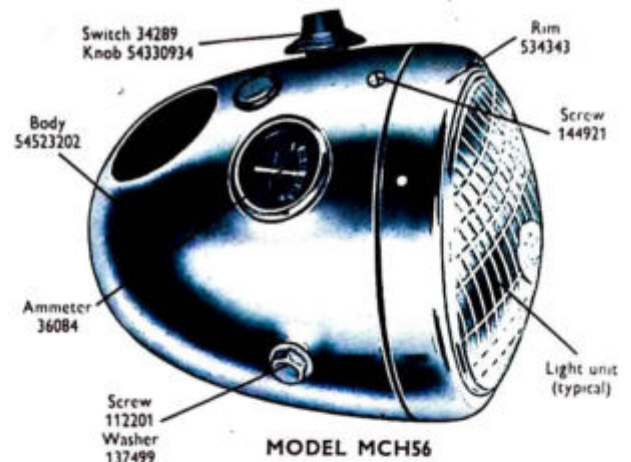

MODEL MCH56

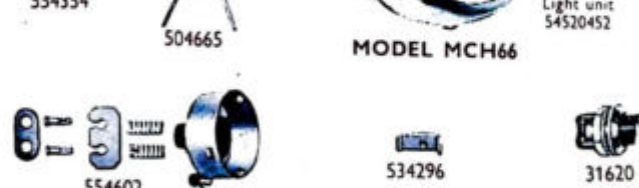

MODEL SS700P



HEADLAMPS continued

Part No. Model	58234D MCF575P	58391A MCF575P	58392A MCF575P
Rim	534343	534343	534343
Screw, rim fixing	144921	144921	144921
Plate, rim screw fixing	534296	534296	534296
Light unit	516828	516912	516829
Wires, light unit fixing	504665	504665	504665
Bulbholder, main	554602	553470	554602
Sleeve, terminal	555910	555910	555910
Bulbholder, pilot	554710	554710	554710
Interior, pilot bulbholder	553780	553780	553780
Ring, rubber	554354	554354	554354
Connector cable	900288	900288	900288
Washer cable grip	516285	516285	516285
Ring, fixing	54520104	54520104	54520104
Bulb, main	312	—	377
Bulb, pilot	988	988	988

STOP TAIL, REFLEX AND NUMBER PLATE ILLUMINATION LAMPS


Part No. Model	53394D 564	53432D 564	53454D 564
Lens and window	54576001	54576001	54576001
Nut, lens fixing	575219	575219	575219
Gasket, lens seating	575208	575208	575208
Base	54573881	54573881	575964
Grommet, bulbholder	575207	575207	575207
Bulbholder, shell	575209	575209	575209
Interior, bulbholder	573828	573828	573828
Grommet cable	573825	573825	573825
Nut, lamp fixing	166014	166014	166014
Washer, shakeproof	188327	188327	188327
Washer, spacer, bolt fixing	131023	131023	131023
Bulb	352	384	380

Part No. Model	53972B 679	53973B 679
Lens	54572932	54572932
Screw, lens fixing	572289	572289
Bulbholder, with reflector	54574348	54574348
Interior, bulbholder	573828	573828
Baseplate	54571319	54571319
Gasket, lamp seating	54571677	54571677
Screw, lamp fixing	127684	127684
Washer, screw fixing	188483	188483
Bulb	384	380


CABLE HARNESSES

Part No.	54933943	54934952	54936491
Eyelet (1")	850406	—	850406
Lucar blade	864980	—	—
Connector, Lucar (17.5 amp.)	54942078	—	54942078
Connector, Lucar, double (17.5 amp.)	—	54942747	54942747
Sleeve, Lucar (17.5 amp.)	54190042	—	54190042
Sleeve, Lucar, double (17.5 amp.)	—	54190119	54190119
Connector tube, 2 way	900288	900288	900288
Connector tube, 4 way	850641	—	—
Connector tube, 6 way	850844	—	—
Nipple	900269	900269	900269
Bulbholder	—	—	54941458
Bulb	—	—	281


Part No.	54937919 54937920	54938164	54939347
Eyelet (1")	850405	—	850405
Eyelet, short (1")	187009	—	—
Eyelet (1")	850406	850406	850406
Connector, Lucar (17.5 amp.)	54942078	54942078	54942078
Connector, Lucar (35 amp.)	—	—	54942079
Connector, Lucar, double (17.5 amp.)	54942747	—	54942747
Sleeve, Lucar (17.5 amp.)	54190042	54190042	54190042
Sleeve, Lucar (35 amp.)	—	—	54190043
Sleeve, Lucar, double (17.5 amp.)	54190119	—	54190119
Connector tube, 2 way	900288	900288	900288
Connector tube, 4 way	850641	850641	850641
Connector tube, 6 way	—	850844	—
Nipple	900269	900269	900269
Bulbholder	54941458	—	—
Bulb	282	—	—

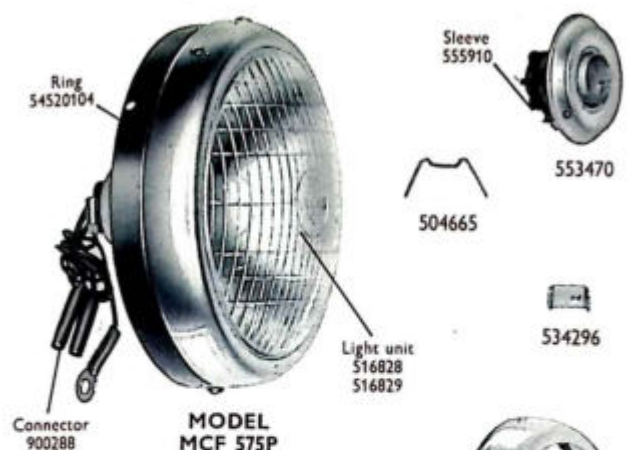


**MODEL
MCF 575P**

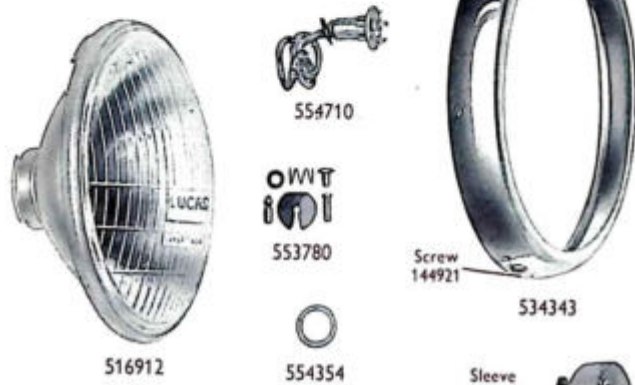

MODEL 564

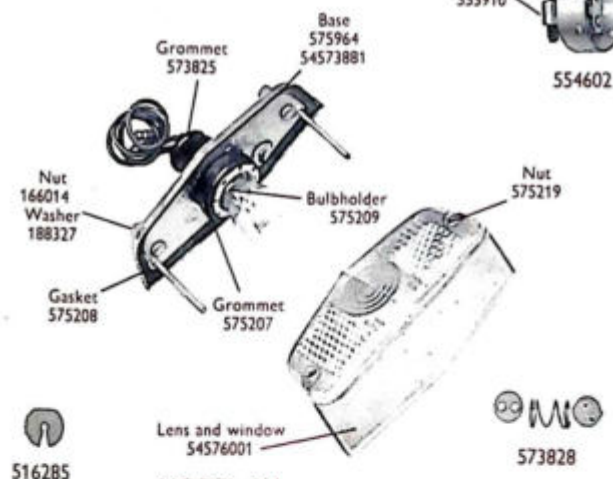

MODEL 679

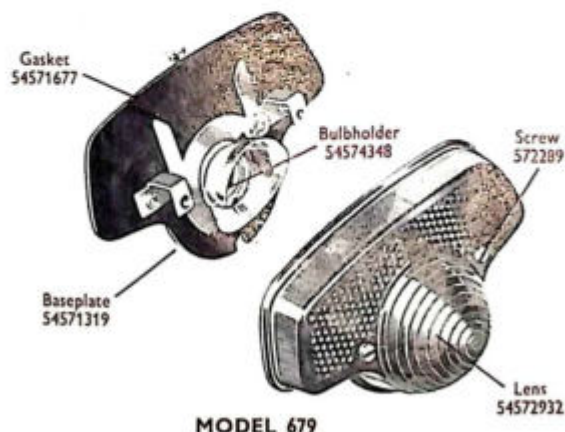

MODEL 679